

SERVICE BULLETIN NZ SB120

The following MHP16T Trailer units were fitted with the wrong type of Solenoid Valve for the Level function. These units <u>must</u> have the following modification done as soon as possible.

Serial number	Location	End user
NZ990731	New Zealand	Central Rentals
NZ001226	Indonesia	Hasta Perkasa
NZ010726	Sweden	AB Kranlyft
NZ010727	Sweden	AB Kranlyft

The Valve fitted to control the LEVEL function is a "closed center" type, this needs to be replaced with an "open center" type to allow the Level function to operate correctly.

The procedure to replace the valve is as follows -

1/ Locate the LEVEL valve [as shown on the drawing attached] and remove the wires from the Coils. Note which wire goes to which coil before removing them.

2/ Unscrew the valve from the manifold. Note a little Oil will be lost when the valve is removed so have the replacement valve ready to fit as quickly as possible to minimise oil loss/mess.

3/ Tighten the replacement Valve and replace the coils. Note do not overtighten the Coils or they could be damaged.

Note: It is only the LEVEL valve that needs to be replaced.

Directly below the LEVEL Solenoid valve there are two Sun Counterbalance valves, [refer to drawing] these must now be adjusted as follows -

1/ Use a 5/32 Allen wrench to hold the adjuster while the locknut is loosened.

2/ Use the Allen wrench to turn the adjuster <u>1 complete turn</u> in the <u>Clockwise direction</u>.

3/ Continue to hold the Allen Wrench on the adjuster while the lock nut is tightened.

The unit is now ready to be tested.

To test the unit operate the level fuction from the ground controls and check for the correct direction/operation of function. Also check to ensure the there are no oil leaks at the level valve.

The unit can now be returned to service.

