




**MHP1544HD**

With ELECTRIC CONTROLS

**MHP1544HD**

With HYDRAULIC CONTROLS

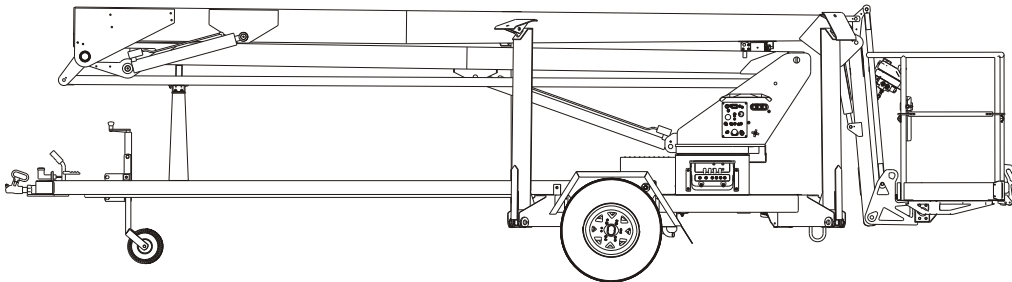

Gasoline  
Battery Electric  
Bi-Energy Options

## **REPAIR PARTS MANUAL**

Part Number 13579-2

September 2012 (Rev A)

Version II

Serial Number NZ110302 and after



## General Specifications

General Specifications .....	3
Classification .....	3
AS1418.1 Group Classification .....	3
Commissioning Information .....	3
Engine Specifications .....	4
Working Envelope .....	5

## 10.9m Height Restriction Kit

Introduction .....	3
Signage .....	3
Operation .....	3
Operation In Unrestricted Mode .....	3
Tamper Protection .....	4

## Maintenance Information

About this Manual: .....	1
Manual Organization .....	1
Maintenance and Schematics .....	1
Maintenance information .....	1
Maintenance schedules .....	2
Daily Maintenance .....	3
Hydraulic Hose Age .....	3
Pre-operational Inspection .....	3
90 Day or 150 Hour Maintenance (Trained Service Technician) .....	4
Six Monthly (Trained Service Technician) .....	4
Yearly or 500 Hour Maintenance (Trained Service Technician) .....	4
Lubricants .....	5
Pressure gun application .....	5
Rotation bearing .....	5
Rotation gear teeth and pinion .....	5
Engines .....	5
Hydraulic oil reservoir .....	5
Filling hydraulic system .....	6
Over-Centre Valve .....	6
Battery .....	6
Preventive inspection maintenance 90 day or 150 hour checklist .....	8
Torque chart .....	10

To order service or repair parts .....	11
ANSI and OSHA compliance .....	11
Manuals .....	11
Product Warranty .....	11

## Stability Testing

Stability Testing MHP15/44HD .....	3
Introduction .....	3
Equipment .....	3
Setup and Procedure .....	3
Pass Criteria .....	3
Figure 2 .....	4

## Insulation Testing - LV Machines

Low-voltage Insulating Covering Test .....	5
Purpose .....	5
The procedure shall be as follows: .....	5
Pass criteria .....	5
Basket Vertical Withstand Test .....	5
Purpose .....	5
Test set-up .....	5
Test Method .....	5
Pass criteria .....	5
Basket puncture test .....	5
Purpose .....	5
Test set-up .....	5
Test Method .....	6
Pass criteria .....	6

# Table of Contents

---

## Section 1. - Repair Parts

---

Trailer assembly .....	1-2
Trailer assembly drawing .....	1-3
Boom assembly drawing .....	1-4
Boom assembly .....	1-5
Platform assembly .....	1-6
Platform assembly drawing .....	1-7
Basket mount assembly .....	1-8
Basket mount assembly drawing .....	1-9
Column assembly .....	1-10
Column assembly drawing .....	1-11
Placards and decals - electric controls .....	1-12
Placards and decals drawing, electric controls .....	1-13
Placards and decals - hydraulic controls .....	1-14
Placards and decals drawing, hydraulic controls .....	1-15
Placards and decals - LV insulated machines .....	1-16
Placards and decals drawing, LV machines .....	1-17
2000kg axle .....	1-18
2000kg axle assembly drawing .....	1-19
Levelling assembly drawing .....	1-20
Levelling Assembly .....	1-21
Engine assembly .....	1-22
Engine assembly drawing .....	1-23

## Section 2. - Hydraulics

---

Hydraulic schematic standard	
Machines with electric controls .....	2-3
Hydraulic schematic auto level option	
Machines with electric Controls .....	2-4
Hydraulic schematic standard	
Machines with hydraulic controls .....	2-5
Hydraulic schematic auto level option	
Machines with hydraulic Controls .....	2-6
Main control valve - electric controls only .....	2-7
Upper boom lift cylinder assembly .....	2-8
Lower boom lift cylinder assembly .....	2-9
Flyboom cylinder assembly .....	2-10
Stabiliser leg cylinder assembly .....	2-11
Continuous rotation (option) .....	2-12
Automatic stabiliser (option) .....	2-13

## Section 3. - Electrical

---

Electrical schematic standard	
Machines with electric controls .....	3-3
Electrical schematic 240VAC option	
Machines with electric controls .....	3-4
Electrical schematic standard	
Machines with hydraulic controls .....	3-5
Upper control box assembly - electric controls .....	3-7
Upper control box assembly - hydraulic controls .....	3-8
Lower control box assembly - electric controls .....	3-9
Lower control box assembly - hydraulic controls .....	3-10
Auto stabiliser control box assembly .....	3-11
Wiring diagram for LED tail lights .....	3-12

## Section 4. - Options

---

Engine assembly, Lombardini (Sheet 1) .....	4-2
Engine assembly, Lombardini (Sheet 2) .....	4-3
Basket rotator (Sheet 1) .....	4-4
Basket rotator (Sheet 2) .....	4-5
Continuous rotation option (sheet 1) .....	4-6
Continuous rotation option (sheet 2) .....	4-7
Spare wheel mount .....	4-8



## ■ General Specifications

SPECIFICATIONS	MHP15/44HD-EC	
Nominal working height	14.8m	48'6"
Maximum height to basket floor	12.8m	42'
Maximum outreach	6.6m	21' 6"
Maximum width of base		
Stabilisers retracted	1.8m	5' 11"
Stabilisers extended	3.5m	11' 6"
Safe working load (unrestricted)	200kg	440lbs
Platform size	1.7 x 0.70 x 1.14m	3' 10" x 2' 4" x 3' 7"
Platform construction	Steel	Steel
Travelling height	1.9m	6' 2"
Overall length	7.3m	24'
Maximum towing speed	80km/h	50m/h
Turntable rotation	540° Non continuous or 360° continuous	
Trailer tongue weight (approximately)	100kg	220lb
Maximum rated axle capacity	2000kg	4408lb
Insulation rating	Nil (on standard models)	
Weight	1760kg	3880lb
Chassis inclination	1°/1°	
Maximum stabiliser load	1095kg	2414lb
Maximum allowable force	400N	

## ■ Classification

Group B Type 1

## ■ AS1418.1 Group Classification

C3

## ■ Commissioning Information

Commissioning of the machine consists of performing the Pre Delivery and Inspection Report (PDIR) satisfactorily.

This PDIR is performed by Snorkel or it's agent before the machine is delivered.

A completed PDIR can be obtained, by request, from the salesagent.

# General Specifications


---

## ■ Engine Specifications

Engine Make	Honda (gasoline)
Model	GX 160
Engine type	4-stroke, over head valve, 1 cylinder
Displacement	163 cm <sup>3</sup> (9.9 cu-in)
Bore x Stroke	68 x 45 mm (2.7 x 1.8 in)
Max. output	4 kW/4,000 rpm
Max. torque	1.1 kg-m (8.0 ft-lb)/ 2500 rpm
Fuel	gasoline
Fuel Grade	automotive gasoline (unleaded or lowleaded preferred)
Fuel consumption	230 g/PSH
Cooling system	Forced air
Ignition system	Transistor magneto
PTO shaft rotation	Counterclockwise
Oil Capacity	0.60 litres (0.60 US qt, 0.53 Imp qt)
Oil Grade	SAE 10W-30

# General Specifications

## Working Envelope

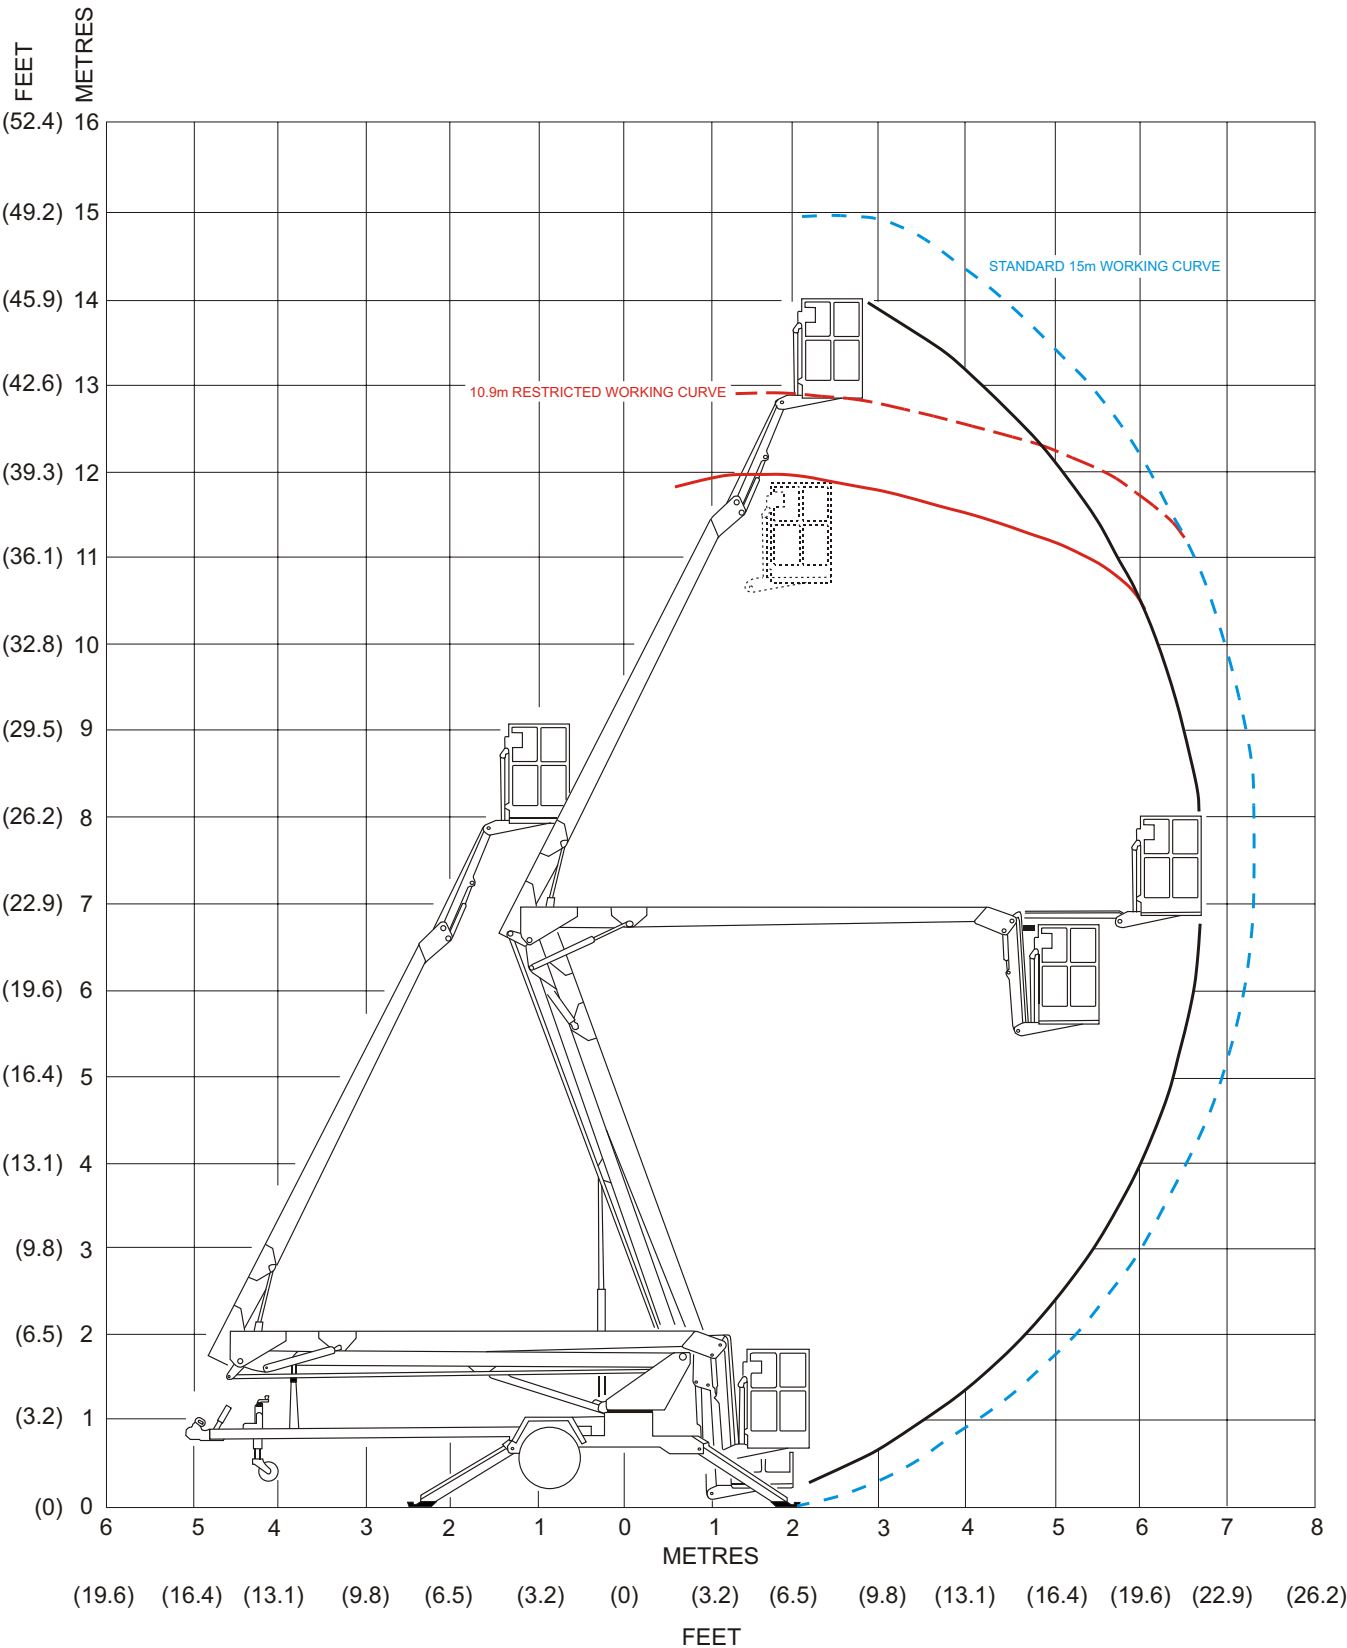



## ■ Introduction

Units built for the Australian market may be fitted with a 10.9m height restriction kit.

This kit is fitted to allow the maximum height to the platform floor to be restricted to 10.9m from the ground.

This is to allow the unit to be operated by unlicensed operators in accordance with Australian legislation.

## ▲ IMPORTANT

**If this machine is fitted with a 10.9m kit you must ENSURE that you read and understand the information in this section.**

## ■ Signage

If the machine is fitted with a 10.9m kit the decal below will be attached to the base/column adjacent to the height lockout switch.



Figure 1 - Decal

## ■ Operation

When the 10.9m function is selected, via the key switch mounted at the base, the unit operates normally until a micro switch at the knuckle is activated by a cam.

This then powers a solenoid valve that shuts off oil to the upper lift cylinders and prevents the upper boom raising any further.

The key switch ① allows the unit to operate normally so the platform floor height is 12.8m (15m working height) when the **DISABLED** position ③ on the key switch is selected (see on Figure 2).

When the key switch is placed in the **ENABLED** position ② the unit is restricted to a platform floor height of 10.9m (see Figure 2). The key can only be removed in the disabled position thus effectively 'locking' the machine into the restricted mode.

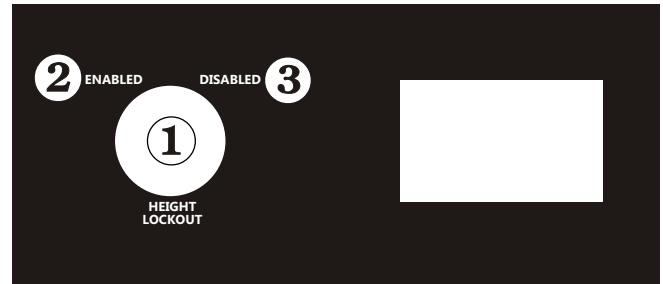


Figure 2 - Key Switch

## ▲ IMPORTANT

In order to operate this machine in the unrestricted mode (**DISABLED**) the operator is required to hold a WP Certificate of Competency.

## ▲ WARNING

**The use of a machine fitted with a 10.9m height restriction kit, in the unrestricted (**DISABLED**) mode by an uncertified operator is a breach of Australian law.**

## ▲ IMPORTANT

If a machine is fitted with a 10.9m height restriction kit, and the machine is to be made available for hire,

**IT IS THE RESPONSIBILITY OF THE HIRE COMPANY OR OWNER**

to establish that the person hiring the machine, or the person who will be operating the machine, has a WP class Certificate of Competency.

If they do not have such a qualification the machine must be restricted to 10.9m operation and the key must be removed thus locking the unit in that mode prior to the hire removing the machine.

## ■ Operation In Unrestricted Mode

If the machine is being operated in the unrestricted (**DISABLED**) mode, by a suitably qualified operator, the key **MUST** be switched to restricted (**ENABLED**) mode and the key removed from the switch any time that the qualified operator leaves the machine.

As previously stated this effectively 'locks' the machine into the 10.9m mode thus preventing any unqualified person from operating the machine in the unrestricted mode.

## 10.9 Height Restriction

---

### ■ Tamper Protection

In order to reduce the likelihood of the machine being tampered with to gain the extra height by an unqualified operator, a tamper protection device is installed on the machine.

This consists of a lockwire and lead seal and the owner must check this on a regular basis to ENSURE that the protective device is in place.

### **▲WARNING**

**If the seal is broken the owner of the machine must:**

1. **ENSURE** that the 10.9m lockout function still operates correctly.
2. **Replace the seal.**
3. **ENSURE** that the machine continues to meet the requirements of the relevant Australian legislation.

## ■ About this Manual:

This Maintenance and Repair Parts manual covers current production machines only.

While Snorkel has attempted in every way to confirm that all information in this manual is correct, improvements are being constantly made to the machine that may not be reflected in this manual.

### **NOTE:**

*It is recommended that you record the serial and model number of your machine (see page 11 of this chapter). This information is found on the serial number placard.*

## ■ Manual Organization

The Repair Parts Manual consists of five sections with an individual table of contents preceding sections 1 through 4.

Subassemblies and detailed parts are identified by index numbers on the illustrations that correspond to the item numbers on the parts listing. When requesting any part, always specify complete part number, description, model and serial number of your unit.

The following is a general description of each section and its contents.

### □ General Specifications

The section immediately preceding, contains information relating to the general specifications of the MHP15J.

### □ Maintenance

The pages immediately following, contain information as to the maintenance schedules - lubricants and procedures for proper lubrication of the unit.

### □ Repair parts and illustrations

Repair Parts (Section 1), contains parts listings and illustrations for general mechanical repair parts of all major installations and subassemblies of the unit. Hydraulics

### □ Hydraulics

(Section 2), contains parts listings and illustrations of hydraulic components installations including hydraulic schematics and individual components such as cylinders, controls valves and solenoid operated valves.

### □ Electrical

Electrical (Section 3), contains listings and illustrations of electrical components installations including wiring schematics.

### □ Options

Options (Section 4), contains parts listings and illustrations of optional installations that may be installed on your unit.

### □ Parts index - Page locator

The parts index - page locator, identifies the component by name and directs you to the section and page number where you may find information for that part such as its part order number, etc.

## ■ Maintenance and Schematics

### □ Maintenance information

The parts drawings located in the repair parts sections, are designed for use as a guide for proper disassembly of the machine and components as well as for parts replacement. Always refer to the hydraulic system installation drawings and the electrical wiring diagram before removing or disassembling associated parts.

## ▲ CAUTION

**Do not attempt to disconnect or remove any hydraulic line before reading and understanding all text concerning the system hydraulics. In most cases, disassembly of the machine will be obvious from the illustration.**

## ▲ IMPORTANT

**DO NOT modify this ariel platform without prior written consent of Snorkel Engineering Department.**

**Modification may void the warranty, adversely affect stability, or affect the operational characteristics of the ariel platform.**

When disassembling or reassembling components, complete the procedural steps in sequence. Do not partially disassemble or assemble one part, then start on another. Always check your work to assure that nothing has been overlooked.

The following list is a gentle reminder when disassembling or assembling the machine.

## Maintenance Information

---

- ✓ Always be conscious of weight.
- ✓ Never attempt to lift heavy objects without the aid of a mechanical device.
- ✓ Do not allow heavy objects to rest in an unstable condition.
- ✓ Always make sure work platform is in stowed position - blocked or the weight removed by a suitable lifting device before disconnecting the hydraulic hose from the motor/pump unit to the lift cylinder.
- ✓ When raising a portion of the machine, be sure that adequate blocking is properly positioned - Do not depend on lifting device to hold and secure weight.
- ✓ If a part resists removal, check to see if all fasteners, electrical wiring, hydraulic lines, etc., have been removed or that other parts are not interfering.

Parts should be thoroughly inspected before restoring to service at the time of reassembly. Burrs, nicks or scratches may be removed from machined surfaces by honing or polishing with #600 crocus cloth, followed by a thorough cleaning in an approved cleaning solvent, and blown dry with compressed air. Do not alter the contour of any part. If this operation does not restore the part to a serviceable condition, replace the part.

Replace all O-rings, seals, and gaskets at reassembly. Use new roll pins or cotter pins. Dip all packing rings and seals in hydraulic oil before reassembling in cylinder and manifold installations. Replace any part having imperfect threads. In general, units that have been disassembled can be reassembled by reversing the order of disassembly.

Remember that the service life of a machine can be increased by keeping dirt and foreign materials out of the vital components. Precautions have been taken to safeguard against this; shields, covers, seals and filters are provided to keep air and oil supplies clean; however, these items must be maintained on a scheduled basis in order to function properly.

At any time air or oil lines are disconnected, clean surrounding areas as well as the opening and fittings themselves. As soon as a line or component is disconnected, cap or cover all openings to prevent the entry of dirt or foreign materials.

New parts should remain in their container until they are ready to be used.

Clearly mark or tag hydraulic lines and electrical wiring connections when disconnecting or removing them from unit. This will assure that they are correctly reinstalled.

Proper assembly is critical to the successful rebuilding of any unit. Carefully inspect any parts which are to be reused. If in doubt, replace.

“**SAFETY FIRST**” is a good slogan.

Replace any guards and protective devices that have been removed to carry out maintenance and repair work.

### ■ Maintenance schedules

Snorkel has established a Preventive Maintenance Schedule that includes:

- ✓ Daily Maintenance (Operator's Inspection)
- ✓ 90 Day or 150 Hour (frequent) Maintenance
- ✓ Yearly or 500 Hour (annual) Maintenance,

These schedules should ensure the detection of any defective, damaged or improperly secured parts and provide information regarding lubrication and other minor maintenance items.

The Maintenance Schedule following, outlines the requirements of these maintenance checks for each time interval. The Operator's Pre-operational inspection must be performed by a trained operator. All other maintenance and inspections must be performed by a trained service technician only.

Note that the 90 Day or 150 hour (frequent) and yearly or 500 hour (annual) Maintenance, require use of the Preventive Inspection Maintenance Checklist to pinpoint all inspection items. Retain a copy of these forms for your records.

They also require that all placards and decals on the unit are to be inspected.

All placards and decals must be in place and legible. Use the placards installation drawing and parts listing in the repair parts section 1 of this manual to check these placards and decals.

Snorkel recommends that you make additional copies of the Preventive Inspection Maintenance Checklist forms for your use in performing these

## **⚠ DANGER**

**Failure to perform the Preventive Maintenance at the intervals outlined in the Maintenance Schedule may result in a unit being operated with a defect that could result in INJURY or DEATH of the unit operator. DO NOT allow a unit to be operated that has been found to be defective.**

Repair all defects before returning the unit to service.



## ■ Daily Maintenance

### □ Pre-operational Inspection

Item	Service Required
Engine fuel level	Look to see that the fuel tank is full
Fuel tank cap	Check to see that the cap is tight
Engine oil level	Check oil level (between dipstick lines)
Fuel leaks	Visually inspect (hoses and connections)
Engine cooling	Check that grills are not blocked
Wiring harnesses	Visually inspect (installation, condition)
Battery terminals	Visually inspect (no corrosion)
Battery fluid level	Check fluid level (1/4" or 6 mm below filler neck)
Hydraulic oil level	Visually inspect level (between lines on gauge)
Hydraulic oil leaks	Visually inspect (hoses, tubes)
Tyres and wheels	Visually inspect (condition)
Bolts and fasteners	Visually inspect (condition)
Structural damage and welds	Visually inspect (weld cracks, dents)
Lanyard anchor points	Visually inspect (condition)
Platform gravity gate	Check condition and operation
Platform guardrails	Visually inspect (condition)
Flashing light (option)	Visually inspect (operation)
Ground control switches	Actuate and inspect for proper operation
Ground control valve levers	Check operation (causes correct motion)
Emergency lower	Check operation (causes correct motion)
Platform control box switches	Actuate and inspect for proper operation
Platform control valve levers	Check operation (causes correct motion)
RCD/ELCB AC outlet (option)	Check operation
Platform work lights (option)	Check operation
Placards and decals	Visually inspect (installation, condition)

## ■ Hydraulic Hose Age

Hoses used in Snorkel production units are manufactured by Hydraulink, Parker and Eaton and have a code stamped on them that offers the following information.

Hydraulink Sample Hose Code **2-2005 lot 050519/10**

Month of Manufacture — **2** — **2005** — **lot 050519/10** — Lot number  
 Year of Manufacture

Parker Sample Hose Code **11-4Q 99**

Manufacturing Plant Number — **11** — **4Q** — **99** — Year of Manufacture  
 Manufacturing Period (i.e. 4th Quarter)

Eaton Sample Hose Code **2Q 06**

Manufacturing Period (i.e. 2nd Quarter) — **2Q** — **06** — Year of Manufacture

## Maintenance Information

---

### ■ 90 Day or 150 Hour Maintenance (Trained Service Technician)


Components	Service Required	Recommended Lubricant or Further Instructions
Daily maintenance	Perform maintenance as per schedule	
Preventive inspection maintenance checklist	Perform inspection, complete form	Retain copy of checklist
Placards and decals inspection	Inspect using drawing and parts listing in section 1 (repair parts)	Replace any missing or unreadable decals/placards
Rotation bearing	Lubricate	Conoco Super Sta #2 Above 32° Mobilgrease CM-P Below 32° Mobilgrease CM-L
Rotation bearing teeth & pinion	Lubricate	Conoco Super Sta #2 Above 32° Mobilgrease CM-P Below 32° Mobilgrease CM-L
Platform rotator	Check smooth operation	Repair or replace if not working properly
Platform controls	Check smooth operation & speeds	
Battery	Check specific gravity	1.260/1.275 at 27° C.
Hydraulic filter	Check condition	Replace if dirty
Engine RPM	Check for proper engine RPM (3000)	See engine manufactures owner's manual
Engine oil	Replace per engine owners manual	

### ■ Six Monthly (Trained Service Technician)

Components	Service Required	Recommended Lubricant or Further Instructions
Over-centre valve	Inspect and service	
	Lubricate Plunger and bore	General purpose greaser

### ■ Yearly or 500 Hour Maintenance (Trained Service Technician)

Components	Service Required	Recommended Lubricant or Further Instructions
90 day or 150 hour maintenance	Perform maintenance per schedule	
Hydraulic oil reservoir	Clean and replace fluid	Shell Tellus 32 or similar
Hydraulic filter	Replace	After 1st. 50 hours, thereafter at recommended interval
Hydraulic pressures	Check pressures	
Wheel bearings	Clean and re-pack	EP Grease

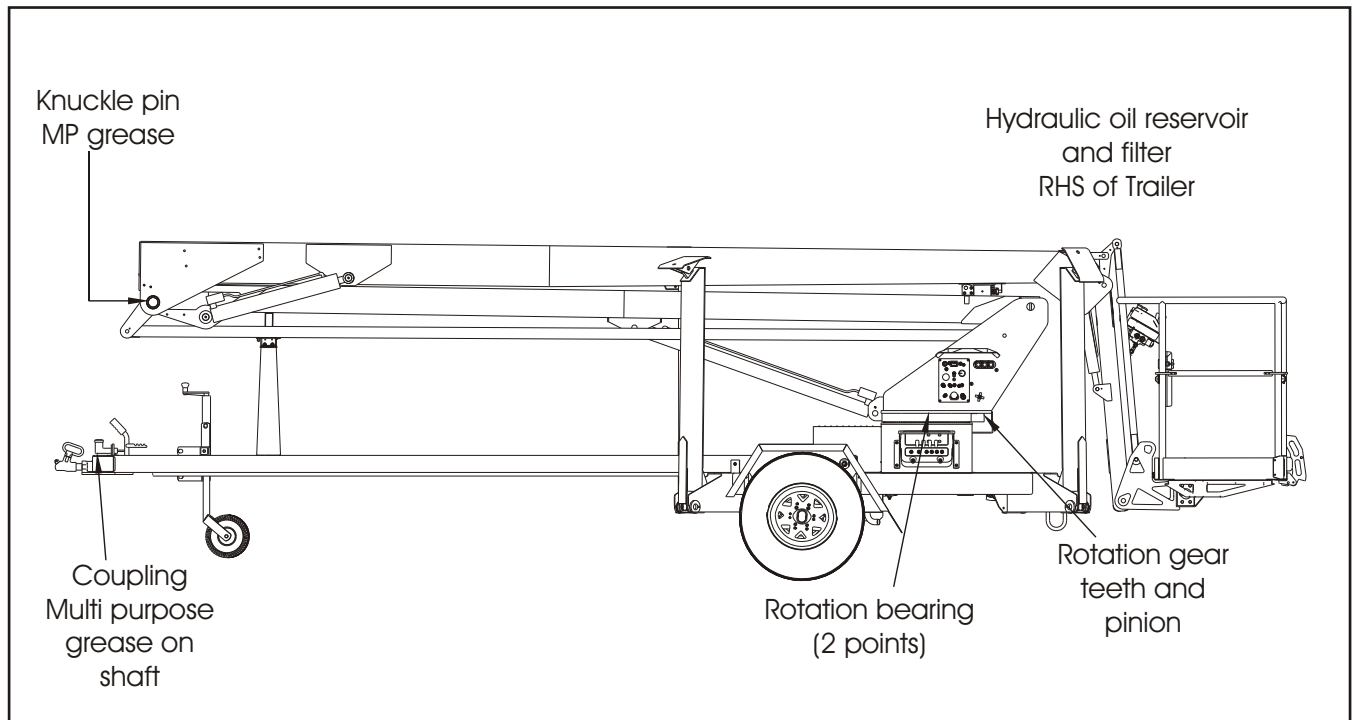

The illustration locates the lubrication points of the MHP15/44HD.

## ■ Lubricants

To obtain maximum life of any industrial equipment, a well planned maintenance programme should be followed. The information provided on these and preceding pages is intended to provide guidelines for proper lubrication, however, some operating conditions will require more frequent checks and lubrication than listed - for example applications with much dust or moisture will require modification of the schedule to fit that particular application.

The use of high grade lubricants and fluids should be encouraged. Sources of these lubricants may be from almost any of the oil companies. Those listed are typical and any lubricant with equal specifications may be used. However if in doubt regarding the use of lubricants other than those listed, contact Snorkel.

### □ Pressure gun application

Service all fittings as indicated in the Maintenance Schedule and lubrication illustration. Wipe away all excess lubricant from exposed surfaces. Over lubrication can collect dirt and foreign matter which acts as an abrasive. Lubrication of accessory equipment should be in accordance with the manufacturer's recommendations.

### □ Rotation bearing

Rotation bearing. Pressure gun lubricate bearing at recommended interval using lubricant as outlined in the maintenance schedule. Rotate while lubricating.

### □ Rotation gear teeth and pinion

Rotation gear teeth and pinion. Gear teeth and gear box pinion should be lubricated with a open gear grease.

### □ Engines

Engine. Refer to the engine manufacturer's instruction manual or consult your local engine service representative if engine adjustments or repairs are needed. The engine **MUST** be operated in accordance with manufacturer's instructions and serviced at recommended intervals.

### □ Hydraulic oil reservoir

Hydraulic oil reservoir. The fluid level should be kept between the low and full marks on the dipstick and should be checked with all cylinders fully retracted and the platform in stowed position.

The interior of the reservoir should be wiped out and cleaned each time the hydraulic oil is changed.

It is absolutely necessary that only new, clean hydraulic oil is added.

### ▲CAUTION

If it becomes necessary to add or use an oil other than the recommended fluid, it is important that it be compatible and equivalent to the factory fill. Local oil suppliers can generally furnish this information.

If questions still remain, contact Snorkel for further information.

#### □ Filling hydraulic system

This procedure must be followed when starting up a new machine or after any major service affecting the hydraulic system when a considerable volume of oil may have been drained from the system.

### ▲IMPORTANT

**It is most important that the machine is not operated unless the lower boom cylinder is completely filled with oil.**

It is also advisable to follow this procedure if there is any doubt about the condition of the machine, i.e. if it has been standing idle for more than a week, or as a safeguard, when a new operator is taking charge of the machine.

#### NOTE - Air in Oil

*If a cylinder is empty, filling it will cause the level in the reservoir to fall and may result in air being discharged from the cylinder into the tank.*

*In this event, when the cylinder is fully extended the engine should be stopped to allow the air to separate from the oil (about five minutes is sufficient) and the oil topped up again before restarting the engine.*

1. Fill the reservoir with the recommended hydraulic oil. Leave the filler cap off so that any drop in the oil can be seen.
2. Lower the stabiliser legs to the operating position.
3. Raise the lower boom halfway.
4. Lower the lower boom and raise the hydraulic legs.
5. Check the oil level as in ❶.
6. Lower stabiliser legs to operating position.
7. Raise the lower boom fully then raise the upper boom fully.
8. Rotate the turntable through 360°.
9. Lower all booms and raise the hydraulic legs.
10. Check the oil level as in ❶.

The machine's hydraulic system is now correctly filled.

#### NOTE - Oil Seals:

*It is best to leave oil seals undisturbed if the machine is operating satisfactorily. If replacement of seals is necessary, extreme care must be taken not to damage the surface of the seals, cylinder bore or the chrome plated piston shaft.*

- Absolute cleanliness is essential.

### ▲CAUTION

**At all times when a cylinder is stripped down make sure that the cylinder bore and the piston rod are not damaged in any way. Particular care is necessary that the cylinder head nut is not allowed to drop off the head and damage the chromium plated shaft.**

If questions still remain, contact Snorkel for further information.

#### ■ Over-Centre Valve

The over-centre valve is factory set and should not need adjusting unless it is knocked or the booms or levelling system is dismantled.

The over-centre valve should be checked six monthly. This can be done by levelling the trailer to the level bubble, and levelling the lower boom.

Observe the over-centre valve operation while raising the upper boom only. As the roller on the over-centre valve reaches the flat of the cam on which it travels, ensure that the roller extends, to actually roll on to the flat of the cam, and is not seized within the over-centre valve.

At this point the upper boom should not raise any higher, and the angle of the upper boom must not exceed 65°.

In this position the lower boom should not be able to be lowered until the upper boom is lowered.

The over-centre valve does not require regular maintenance apart from checking as detailed above.

### ▲WARNING

**It is important that if either the levelling system or engine speed is adjusted, the over-centre valve setting must be checked afterwards.**

#### ■ Battery

Battery. The battery will have longer life if the water level is maintained and it is kept charged. The unit

will have better starting characteristics with a fully charged battery.

In cold weather the battery should be maintained at full charge to keep from freezing. An extremely low or dead battery can freeze in cold weather. Make sure connections are clean and tight.

Make sure charging equipment is operating properly.

### **▲ DANGER**

**Lead-acid batteries contain sulfuric acid which will damage eyes or skin on contact. When working around batteries, ALWAYS wear a face shield to avoid acid in eyes.**

**If acid contacts eyes, flush immediately with clear water and get medical attention.**

**Wear rubber gloves and protective clothing to keep acid off skin, if acid contacts skin, wash off immediately with clear water.**

**Lead-acid batteries produce flammable and explosive gases. NEVER allow smoking, flames or sparks around batteries.**

# Maintenance Information

## ■ Preventive inspection maintenance 90 day or 150 hour checklist

OK	OK - No Service Required
✓	Corrective Action Required
X	Corrected, (Record description of corrective action).

Serial Number \_\_\_\_\_

Inspection Procedures Codes
(1) Weld cracks, dents and/or rust
(2) Installation
(3) Leaks
(4) Operation
(5) Condition
(6) Tightness
(7) Residue buildup
(8) See placards and decals inspection chart

Check	OK	✓	X
<b>Chassis</b>			
Structural (1)			
Tires (5)			
Tire pressure (5)			
Hydraulic tubes and hoses (3,5)			
Decals and placards (2,8)			
Wheel nuts (6) Torque 80lbft 108.5Nm			
Battery disconnect switch (4)			
Lubrication points			
Pins, pin keepers (2)			
<b>Turntable</b>			
Structural (1)			
Swivel mount assembly (2,3)			
Hydraulic tubes and hoses (3,5)			
Wire harness (2,5)			
System pressure (Max 2800 psi)			
Lubrication points			
Emergency bleed down valve (4,3)			
Engine (2,4)			
Engine charging system (4)			
Engine air filter (5)			
Hydraulic pump (4)			
Engine oil (5)			
Electric choke (4)			
Hydraulic oil reservoir (2,3,5)			
Hydraulic oil reservoir filler/breather cap (2,6)			
Hydraulic oil reservoir fluid level (5)			
Hydraulic oil filter (3,4)			
Pins, pin keepers (2)			
Slew ring bolts (2,6)			
<b>Lower Booms</b>			
Structural (1)			
Boom lift cylinder pin (2,6)			
Boom lift cylinder and holding valve (3,4)			
Hydraulic tubes and hoses (3,5)			
Electrical Wires (5,2)			
<b>Upper Booms</b>			
Structural (1)			
Electrical wires (5)			
Jib cylinder pins (2,6)			
Jib cylinder and holding valve (3,4)			
Hydraulic hoses and tubes (3,5)			
Decals and Placards (2,8)			
Boom lift cylinder pins			

Check	OK	✓	X
Boom lift holding valve) (3,4)			
<b>Platform</b>			
Structural (1)			
Decals and placards (2,8)			
Platform gate (4)			
Hydraulic tubes and hoses (3,5)			
Platform mounting bolts (2,6)			
Correct operator's manual in document holder (2)			
Correct operation of tail lights, indicators (4)			
<b>Battery</b>			
Battery terminals (6,7)			
Battery electrolyte level (5)			
<b>Fuel Tank</b>			
Fuel tank (3,5)			
Fuel tank cap (2,3,4,5)			
<b>Ground Control Station</b>			
Station selector switch @ ground controls platform controls DO NOT work (4)			
Station selector switch @ platform controls ground controls DO NOT work (4)			
Cold start (4) Choke			
Keyed master switch (4)			
Boom speed rheostat switch (4) <i>Electric Controls Only</i>			
Turntable rotation (4)			
Upper boom lift UP - DOWN (4)			
Lower boom lift UP - DOWN (4)			
Jib boom lift UP - DOWN (4) <i>Electric Controls Only</i>			
Emergency stop (4)			
Over-centre valve (4,2)			
<b>Interlocks</b>			
Booms will not raise with legs stowed (4)			
Legs will not raise with booms up (4)			
<b>Platform Control Station</b>			
Foot switch (4) <i>Electric Controls / Hydraulic Controls Option</i>			
Foot switch, functions operate when engaged (4)			
Start switch (4)			
Cold start (4) Choke			
Boom speed rheostat switch (4) <i>Electric Controls Only</i>			
Turntable rotation (4)			
Upper boom lift UP - DOWN (4)			
Lower boom lift UP - DOWN (4)			
Jib boom lift UP - DOWN (4)			
Emergency stop (4)			
<b>Optional Equipment</b>			
Air line to platform (2,4)			
Dual fuel system (2,4)			
Platform work lights (2,4)			
Platform rotation (4)			
<b>Platform Rotator</b>			
Platform rotation holding valve (3,4)			
Rotator mounting bolts (2,6)			




## This image shows a full page of blank, lined paper. It features approximately 20 evenly spaced horizontal grey lines across its entire width, providing a guide for handwriting or typing. The background is a solid off-white color.

All items have been properly checked and tested and found to be operating satisfactory or necessary corrective action has been completed.

page 9

## Maintenance Information

### ■ Torque chart

NOM SIZE X PITCH	TENSILE STRESS AREA A <sub>s</sub> (mm <sup>2</sup> )	PROPERTY CLASS 8.8			PROPERTY CLASS 10.9		
		CLAMP LOAD W (N)	TORQUE (N.m)		CLAMP LOAD W (N)	TORQUE (N.m)	
			DRY k=0.20	LUBED k=0.15		DRY k=0.20	LUBED k=0.15
M3 x 0.5	5.03	2 200	1.32	0.99	2 990	1.79	1.34
M3.5 x 0.6	6.78	2 960	2.07	1.55	4 030	2.82	2.11
M4 x 0.7	8.78	3 830	3.07	2.30	5 220	4.17	3.13
M5 x 0.8	14.2	6 200	6.20	4.65	8 430	8.43	6.33
M6 x 1	20.1	8 770	10.5	7.90	11 950	14.3	10.8
M8 x 1.25	36.6	15 975	25.6	19.2	21 750	34.8	26.1
M8 x 1	39.2	17 100	27.4	20.5	23 275	37.3	27.9
M10 x 1.5	58.0	25 325	51	38.0	34 450	69	52
M10 x 1.25	61.2	26 725	53	40.1	36 350	73	55
M12 x 1.75	84.3	36 800	88	66	50 075	120	90
M12 x 1.25	92.1	40 200	96	72	54 700	130	98
M14 x 2	115	50 200	140	105	68 300	190	145
M14 x 1.5	125	54 550	155	115	74 250	210	155
M16 x 2	157	68 525	220	165	93 250	300	225
M16 x 1.5	167	72 900	235	175	99 200	320	240
M20 x 2.5	245	106 950	430	320	145 550	580	435
M20 x 1.5	272	118 750	475	355	161 550	650	485
M24 x 3	353	154 100	740	555	209 700	1 010	755
M24 x 2	384	167 600	805	605	228 100	1 100	820
M27 x 3	459	200 350	1 080	810	272 650	1 470	1 100
M27 x 2	496	216 500	1 170	875	294 600	1 590	1 150
M30 x 3.5	561	244 900	1 470	1 100	333 250	2 000	1 500
M30 x 3	580	253 150	1 520	1 140	344 500	2 070	1 550
M30 x 2	621	271 050	1 630	1 220	368 850	2 210	1 660
M33 x 3.5	694	302 950	2 000	1 500	412 250	2 720	2 040
M33 x 2	761	332 200	2 200	1 640	452 050	2 980	2 240
M36 x 4	817	356 600	2 570	1 930	485 300	3 490	2 620
M36 x 3	865	377 600	2 720	2 040	513 800	3 700	2 780
M39 x 4	976	426 000	3 320	2 490	579 750	4 520	3 390
M39 x 3	1 028	448 700	3 500	2 630	610 650	4 760	3 570
M42 x 4.5	1 121	489 300	4 110	3 080	665 850	5 590	4 200
M42 x 3	1 206	526 400	4 420	3 320	716 350	6 020	4 510
M45 x 4.5	1 306	570 050	5 130	3 850	775 750	6 980	5 240
M45 x 3	1 398	610 250	5 490	4 120	830 400	7 470	5 610
M48 x 5	1 473	642 950	6 170	4 630	874 950	8 400	6 300
M48 x 3	1 604	700 150	6 720	5 040	952 800	9 150	6 860
Grade marking   							



### ■ To order service or repair parts

When placing an order for service or repair parts, please have the following information available for your machine.

- ✓ Machine model number
- ✓ Machine serial number
- ✓ Snorkel part number
- ✓ Description of part
- ✓ Quantity of parts required
- ✓ Your purchase order number
- ✓ Address for order to "Ship To"
- ✓ Your desired shipment method

All correspondence relative to this unit, such as field reports, discrepancy reports, requests for service information, etc., should be directed to:

Snorkel New Zealand  
36 Bruce Road  
P.O. Box 1041  
Levin 5510  
New Zealand

Phone: +64 06 368-9168  
Fax: +64 06 368-9164

Attention: Parts Department

### □ Manuals

Manuals are available from Snorkel to support any of the machines that we produce.

The specific manuals for MHP15/44HD are as follows:

- ✓ Operator's Manual  
Snorkel part number - 13620-1
- ✓ Repair Parts Manual  
Snorkel part number - 13620-2

### ■ Product Warranty

For full terms of your warranty policy refer to the rear of this manual after the Index section, or check with your Snorkel distributor, or check the Snorkel website.

### □ ANSI and OSHA compliance

All owners and users of the aerial platform must read, understand, and comply with all applicable regulations. Ultimate compliance to OSHA regulations is the responsibility of the user and their employer.

ANSI publications clearly identify the responsibilities of all personnel who may be involved with the aerial platform. A reprint of the "Manual of Responsibilities for Dealers, Owners, Users, Operators, Lessors and Lessees of ANSI/SIA A92.5-1992 Boom-Supported Elevating Work Platforms" is available from Snorkel dealers or from the factory upon request.

Copies are also available from:

Scaffold Industry Association  
20335 Ventura Blvd. Suite 310  
Woodland Hills, CA 91364-2471 USA

### Record machine information here:

Model number\*

---

Serial number\*

---

Date of purchase

---

Purchased from

---

Snorkel dealer or distributor

---

\* This information is found on the serial number placard attached to your machine.



## ■ Stability Testing MHP15/44HD

### □ Introduction

The purpose of this test is to assess if the MHP 1544HD meets the requirements of AS 1418-10 2004 Appendix G Stability Calculations. The situation for minimum stability is with the booms at maximum outreach over the drawbar, with the maximum rated load in the platform, a manual force pulling toward the drawbar and maximum wind load acting on the back of the machine.

Since this testing involves taking the machine to the edge of its stability envelope care must be taken to ensure the test is failsafe i.e. the machine can not tip over if it fails the test. To this end the rated load is to be hung from the Test Weight Harness and the test weight is suspended 200mm above the ground during the test. If the machine starts to tip over the test weight will contact the ground, reducing the overturning moment, so that the machine can not continue to tip over.

### □ Equipment

- MHP 15/44HD
- Spirit level
- Rope
- Pulley
- Test weights & harness
- Ratchet tie down

### □ Setup and Procedure

The Test Weight harness location is at the rear edge of the platform. The test load for a standard machine is 194kg.

The manual force is 400N with an additional multiplication factor of 1.1 giving 440N or 45kg. The line of action of this force is such that it produces the greatest overturning moment. That is the line of action of the force is perpendicular to a line joining the top rail of the platform to the tipping line (see Figure 1).

The wind load is assumed to act at the centre of area of the elevated components. The Wind Load is 336N at 5.54m above ground. The overturning moment from the wind is used to find an equivalent force along the line of action of the manual force. The calculated force due to wind is 248N or 27.2kg

The load simulating the wind and manual force is therefore 72.2kg.

The test procedure is as follows (Refer Figure 2).


1. Set a pulley with rope, 6.85m above the ground on a fixed pole.
2. Place the machine so that the drawbar is pointing towards the fixed pole. The centre of the slew bearing must be 8.2m from a point directly beneath the pulley.
3. Raise the machine on the stabilisers to maximum height.
4. Level the machine laterally using the spirit level.
5. Level the machine fore and aft such that it is 0.5 deg drawbar down from level. (This simulates a poor setup by the end user).
6. Slew the booms until the rear of the basket is pointing towards the pole.
7. Tie the rope from the pulley around the top rail of the platform on the basket centre line.
8. Attach the Test Weight Harness and the Test Weight to the platform.
9. Raise the booms to maximum outreach (lower boom fully up and top boom and jib boom horizontal). The Test load must be between 100 and 200mm above ground.
10. Attach a ratchet tie down to the rope coming from pulley. Attach the other end to the Load simulating the wind and manual force.
11. Raise the Load simulating the wind and manual force with the ratchet tie down until the load is between 100 and 200mm above the ground. Ensure that the loads are not swinging i.e. the loads are static. (If both 'rear' legs lift clear of the ground STOP the test and release the ratchet).

### □ Pass Criteria

The machine can be assessed as meeting the requirements of AS 1418-10 2004 Appendix G Stability Calculations if the Test Load and the Load simulating the wind and manual force can be raised clear of the ground simultaneously while maintaining at least 3 point contact i.e. not more than 1 stabiliser foot off the ground.

## Stability Testing

□ Figure 2

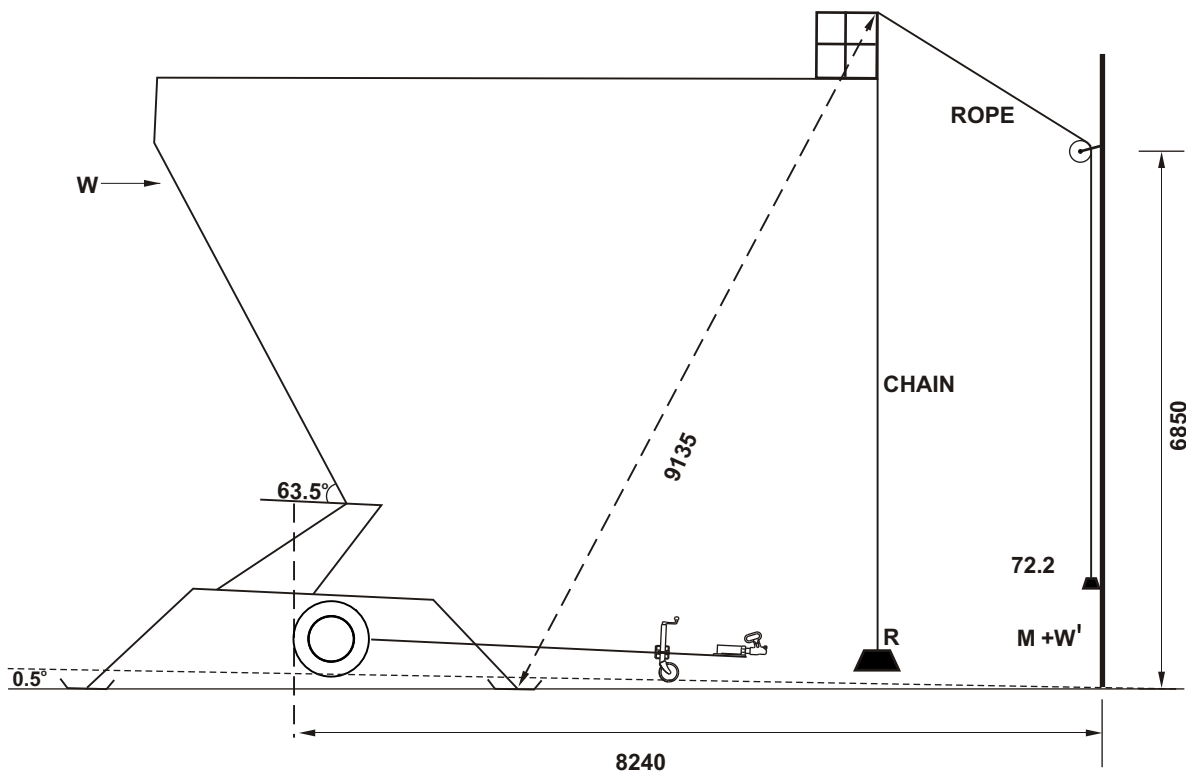

RATED LOAD  $R = 194\text{kg}$   
STANDARD MACHINE

MANUAL FORCE  $M = 45\text{kg}$

WIND FORCE  $W = 27.2\text{kg}$

LOAD ON PULLEY  $= 72.2\text{kg}$

## ■ Low-voltage Insulating Covering Test

### □ Purpose

The low-voltage insulating covering test is used to prove the integrity of boom insulating covering. Test method

### □ The procedure shall be as follows:

- Bridge all metalwork of the various parts of the booms and basket and connect to earth.
- Apply a temporary electrode in close contact with surfaces of covering or guards fitted to the booms.
- Apply a 1 min dry withstand test voltage, of 5kv ac RMS, to the temporary electrode.

### □ Pass criteria

There shall be no puncture or disruptive discharge.

### Note:

*This test may be carried out in multiple sections if the test current due to capacitive leakage on the complete temporary electrode is likely to exceed the maximum current available from the test set.*

## ■ Basket Vertical Withstand Test

### □ Purpose

The basket vertical withstand test is used to verify that the insulation rating of the basket, complete with all fittings and attachments installed, is adequate to minimize the risk of short-circuit or transfer of potential in the vertical plane.

### □ Test set-up

The test shall be set up as illustrated in figure 1 below

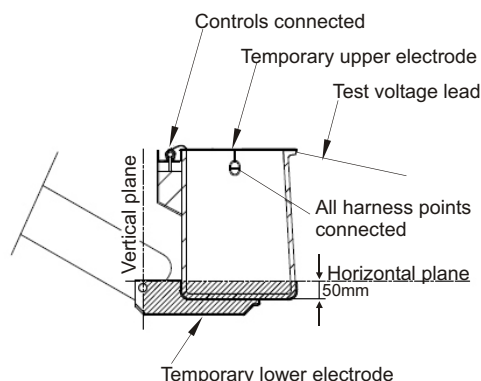


Figure 1

### □ Test Method

The procedure shall be as follows:

- Install a temporary upper (plate or foil) electrode in contact with the entire top horizontal lip of the basket.
- Bond the operator's controls, harness attachment points and power tool outlets, plus any exposed conductive components near the top of the basket, to the temporary upper electrode. (c)
- Install a temporary lower (foil) electrode in contact with the external surface of the base of the basket. Shape the electrode into all contours of the external surface of the basket bottom and covers using the simulated conductor as described in A51418.10 The electrode shall cover the surface lying below a horizontal plane located 50 mm above the level of the internal floor and extend to a vertical plane intersecting the boom pivot pin as shown in figure 1.
- Position the basket to best simulate the most onerous likely working position when elevated to greater than 7.5 m.
- Apply a 1 min dry power frequency withstand test voltage of 5kv ac RMS to the upper electrode with the lower electrode connected to earth.

### Note:

*This test may be carried out in multiple sections if required (the test current due to capacitive leakage on the complete temporary electrodes may exceed the maximum current available from the test set).*

### □ Pass criteria

There shall be no puncture or disruptive discharge during the application of the test voltage.


## ■ Basket puncture test

### □ Purpose

The basket puncture test is used to verify that the insulation rating of the basket, complete with all fittings and attachments, is adequate to minimize the risk of short-circuit or transfer of potential through the basket wall.

### □ Test set-up

The test shall be set up as illustrated in figure 2, below.

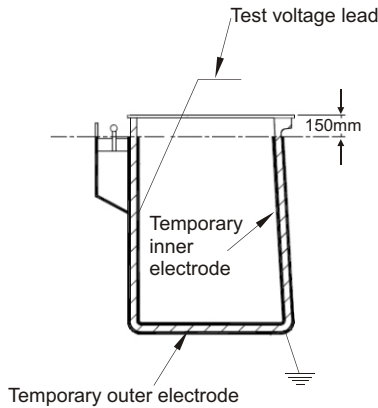

**Figure 2.**

## ☐ Test Method

Testing procedure shall be as follows:

- (a) Install a temporary foil in contact with the exterior surface of the basket, including the base. Shape the electrode into all contours using the simulated conductor described in AS1418.10
- (b) Install a temporary inner electrode in close contact with the inner surface of the basket. Shape the electrode to all contours of the inner surface. The inner electrode may be foil or tap water or a combination of both.
- (c) Extend the electrodes vertically to a position 150 mm from the top horizontal lip of the basket.
- (d) Apply a 1 min dry power frequency withstand test voltage of 5kv ac RMS to the inner electrode with the outer electrode connected to earth.

## ☐ Pass criteria

There shall be no puncture or disruptive discharge during the application of the test voltage.

### **Note:**

*Where any metalwork causes excessive audible discharges, the test should be repeated with the metalwork connected to the nearest electrode.*

Trailer assembly .....	1-2
Trailer assembly drawing .....	1-3
Boom assembly drawing .....	1-4
Boom assembly .....	1-5
Platform assembly .....	1-6
Platform assembly drawing .....	1-7
Basket mount assembly .....	1-8
Basket mount assembly drawing .....	1-9
Column assembly .....	1-10
Column assembly drawing .....	1-11
Placards and decals - electric controls .....	1-12
Placards and decals drawing, electric controls ...	1-13
Placards and decals - hydraulic controls .....	1-14
Placards and decals drawing, hydraulic controls .	1-15
Placards and decals - LV insulated machines ...	1-16
Placards and decals drawing, LV machines .....	1-17
2000kg axle .....	1-18
2000kg axle assembly drawing .....	1-19
Levelling assembly drawing .....	1-20
Levelling Assembly .....	1-21
Engine assembly .....	1-22
Engine assembly drawing .....	1-23

## Trailer assembly

Item	Part No	Qty	Description
1.	12884	1	Trailer weld
2.	12883-1	1	Drawbar weld
3.	12900	4	Stabiliser weld
4.	10275A	4	Stabiliser cylinder
	13656A	4	Stabiliser cylinder from MHP15HD-07-000007 onwards
5.	1045	1	Jockey wheel
6.	12780	1	Tow coupling
7.	12790	4	Foot plate
8.	11369	4	Pin, foot plate
9.	8628	4	Pin keeper, 6mm
10.	10293	4	Pin, cylinder to stabiliser
11.	8626	8	Pin keeper, 10mm
12.	1771	1	Boom lock pin
13.	10277-2	4	Cylinder cover
14.	10291	4	Pin, stabiliser to housing
15.	9981	4	Pressure switch
	9981-4	4	Pressure switch from MHP15HD-07-000007 onwards
16.	10142	4	Microswitch
17.	13143-1	2	Bracket, mudguard, left
18.	13046-1	1	Mudguard, left hand, (Replaces part number 12224L)
	12475	2	Plastic mudguard, (Prior to serial number NZ070806)
19.	13041	1	Engine cover
20.	8773	1	Oil tank
21.	7886	1	Dipstick
22.	11956A	1	Oil distributor, (Option only)
23.	9887	1	Leg control valve
24.	9869	2	Mudflap
25.	13017-1	2	Wheel rim, 15" (From serial number NZ070806)
26.	12788	1	Drop axle assembly, (Prior to serial number NZ070806)
	12773	1	Drop axle assembly, (From serial number NZ070806)
27.	1704-005	2	Tyre, 14", (Prior to serial number NZ070806)
	13017-2	2	Tyre, 15", (From serial number NZ070806)
28.	13174	1	Springs, 2000kg
29.	9851-2	1	Floor plate, rear
30.	9851-5	1	Floor plate, front
31.	11492-1	8	Locktab, 6mm
32.	11492-3	8	Locktab, 10mm
33.	13046-2	1	Mudguard, right hand, (Replaces part number 12224R)
34.	3624-17	8	Bush, leg pivot
35.	13143-2	2	Bracket, mudguard, right



F


E

D

C

B

A

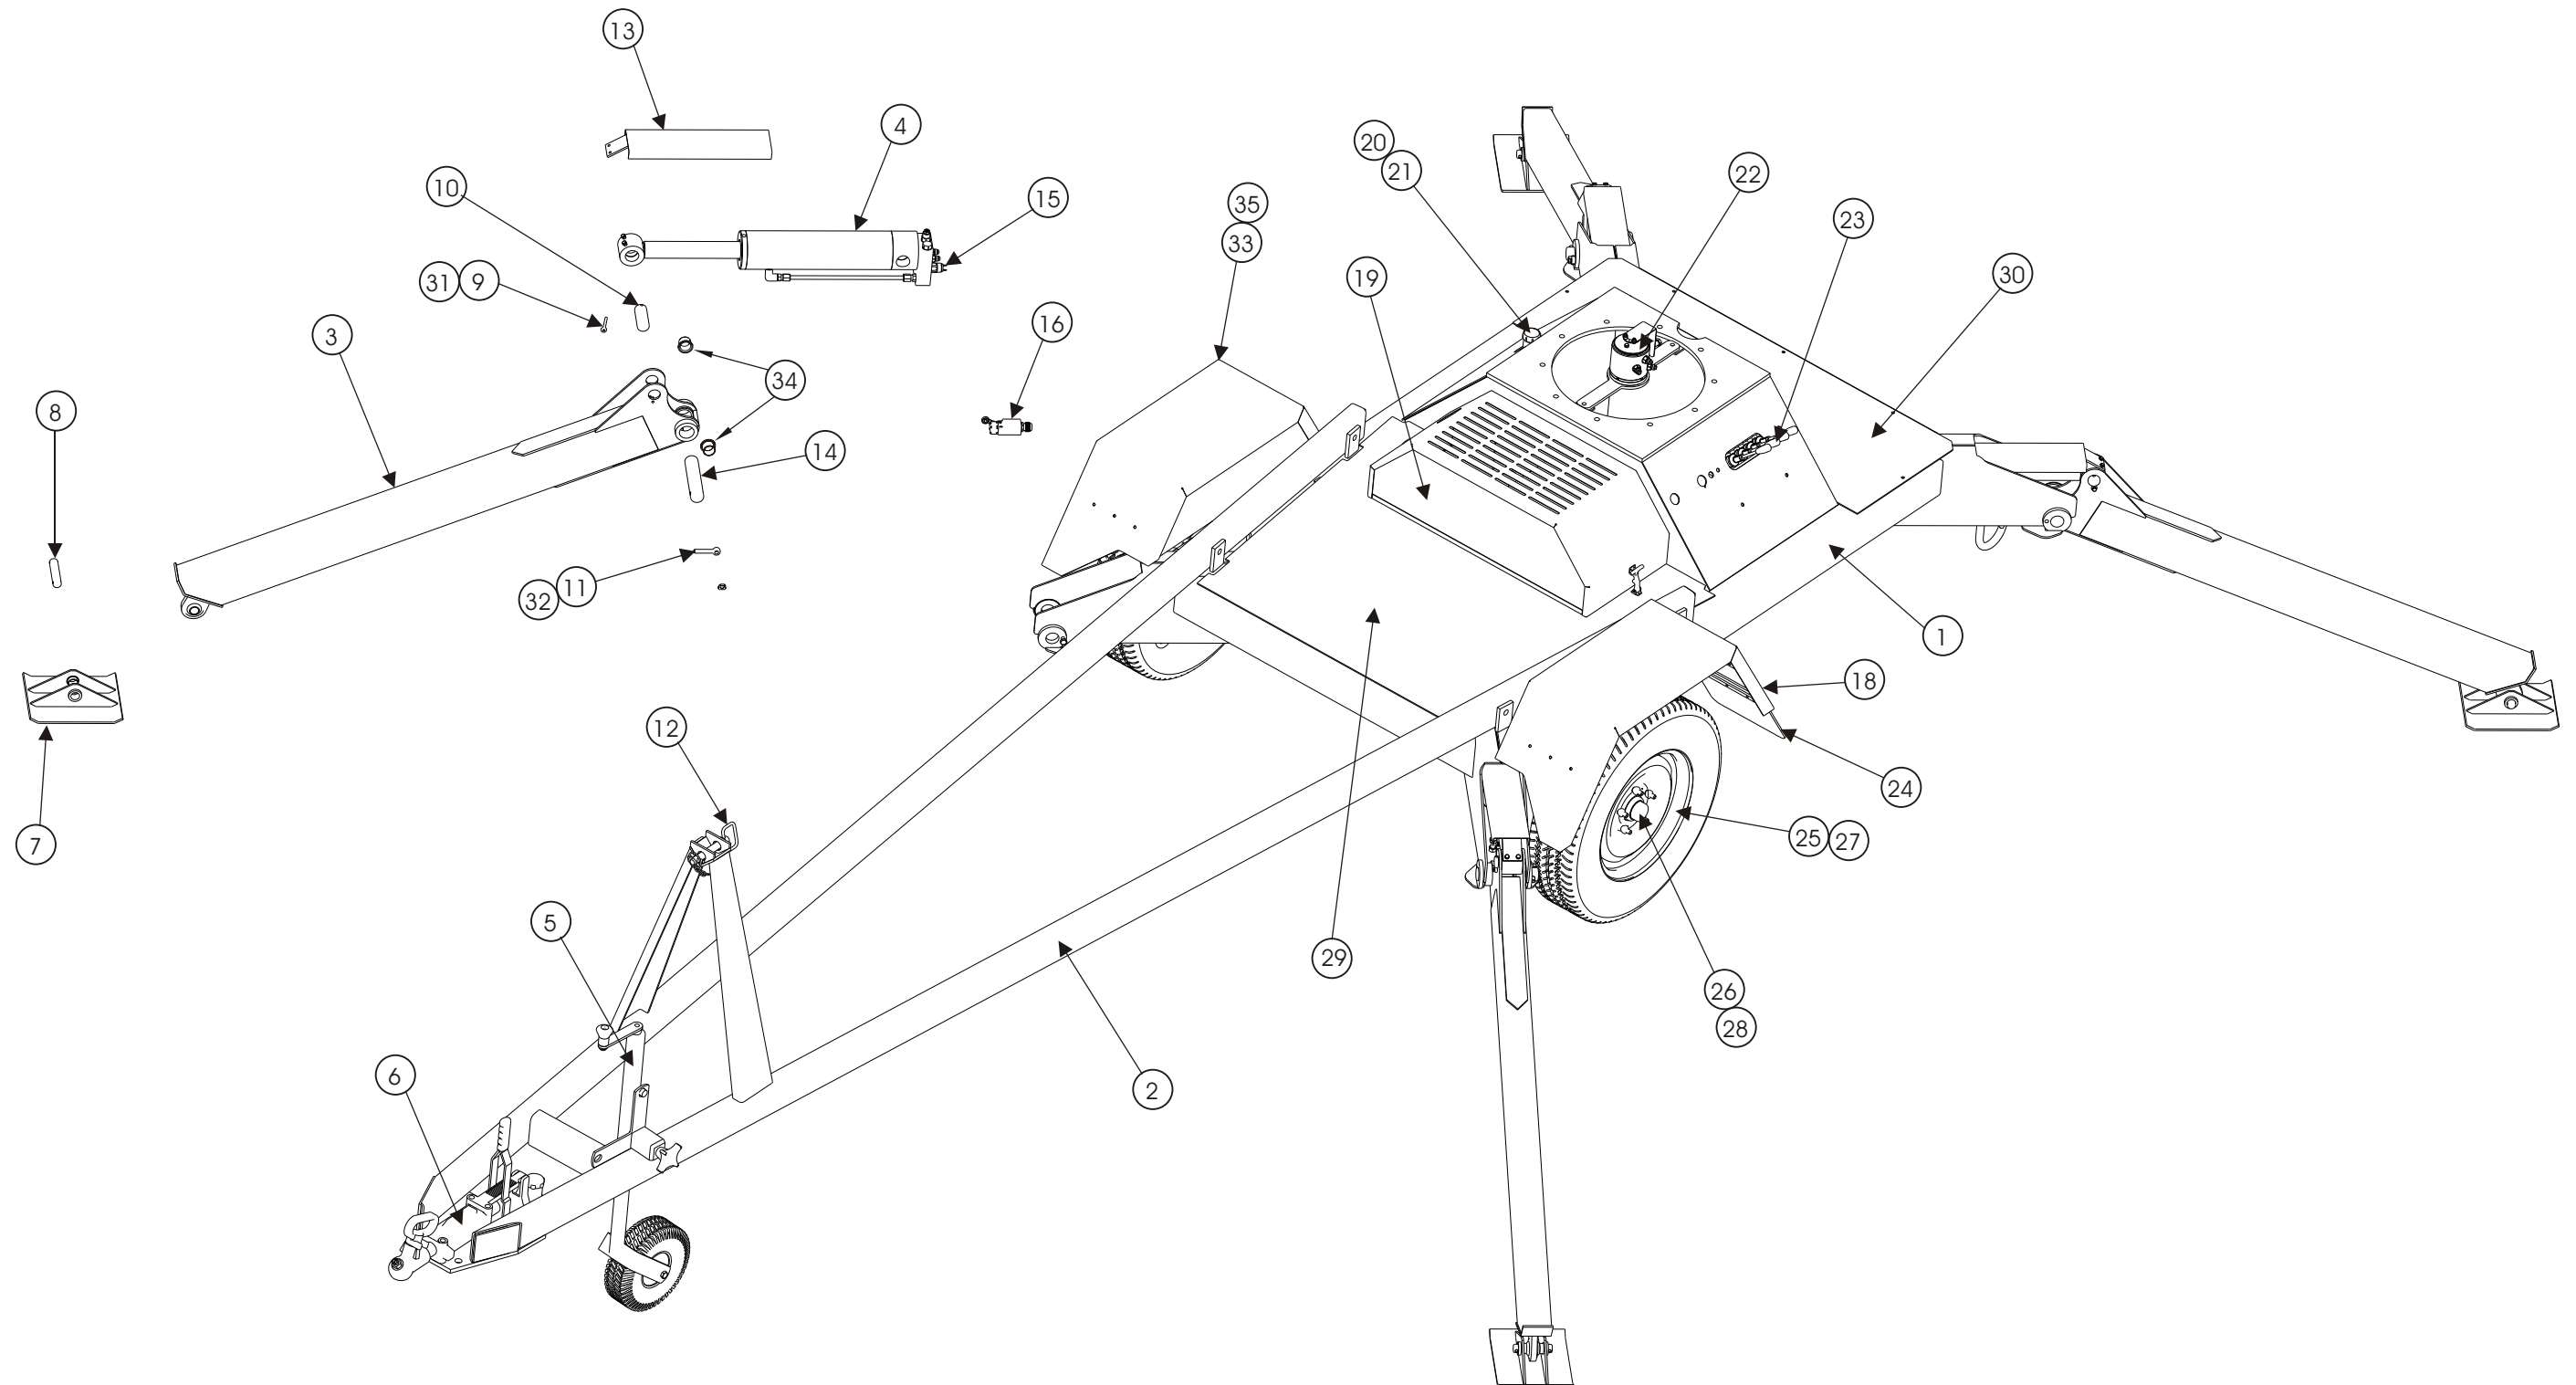

TITLE Trailer Assembly

Snorkel model MHP15/44HD

The Snorkel logo, consisting of a stylized 'S' followed by the word 'snorkel' in a bold, sans-serif font.

Page 1-3

F


E

D

C

B

A

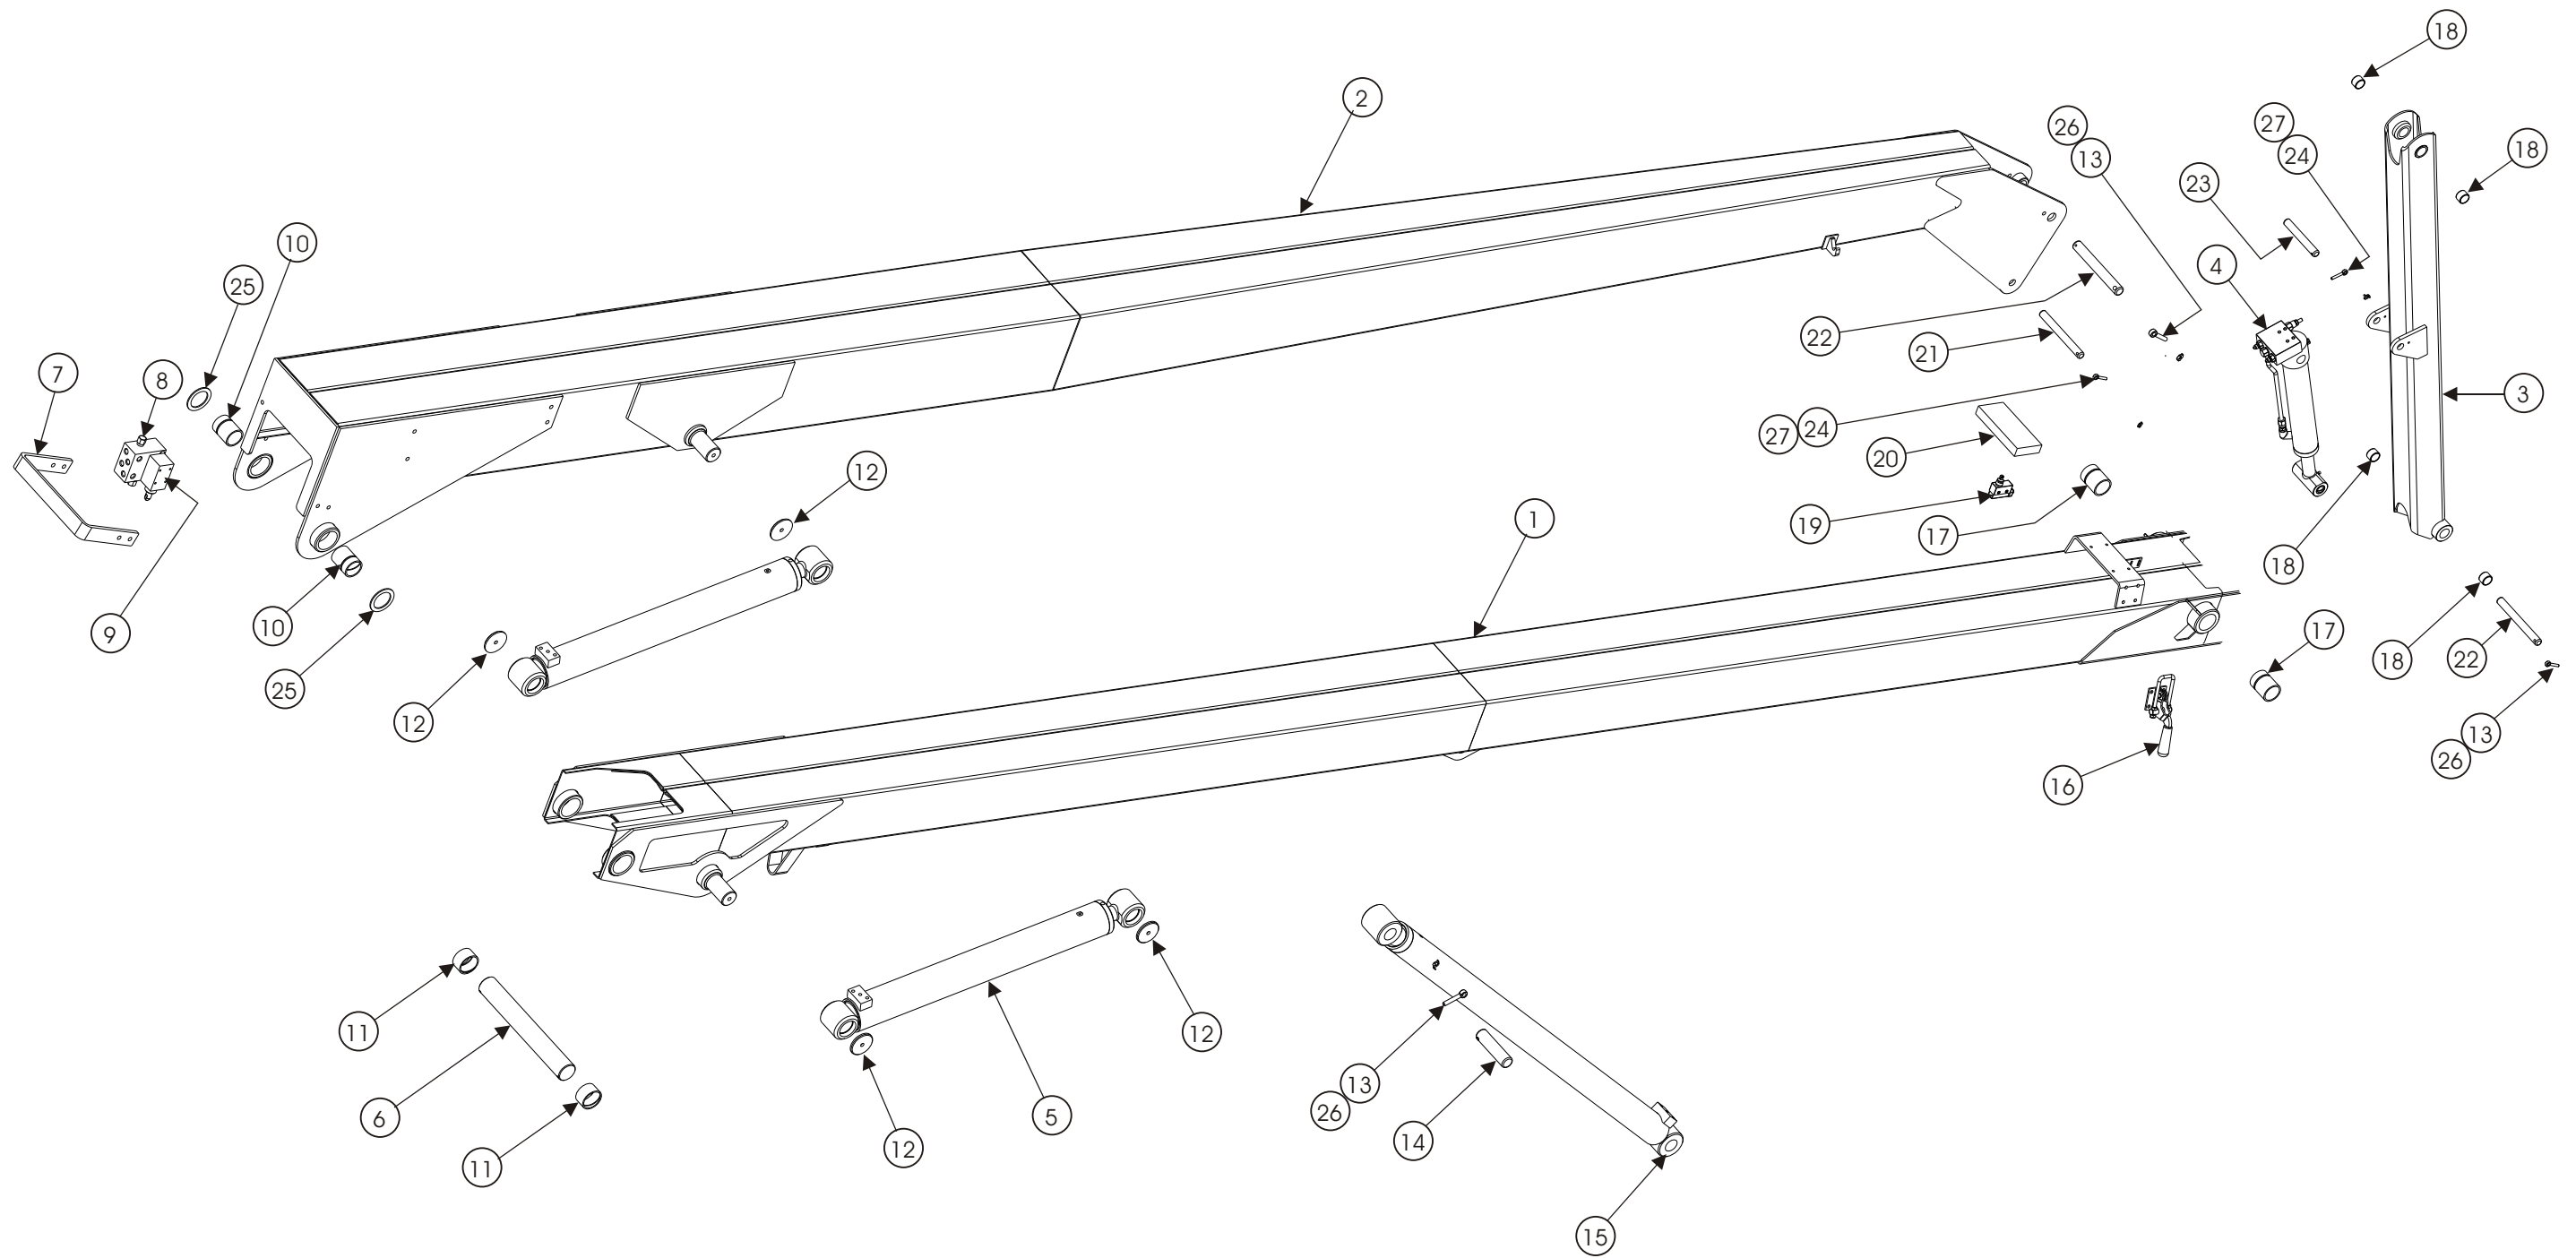

TITLE Boom Assembly

Page 1-4

Snorkel model MHP15/44HD

1

2

3

4

5

6

7


8

9

Item	Part No	Qty	Description
1.	9927	1	Lower boom
2.	1578	1	Upper boom
3.	9885	1	Jib boom
4.	7177A	1	Jib cylinder
5.	1589A	2	Uper cylinder
6.	1578-021	1	Knuckle pin
7.	10999	1	Guard, overcentre valve
8.	11545	1	Overcentre manifold
9.	7851	1	Overcentre valve
10.	1549-024	2	Bush, upper boom
11.	1572-004	2	Bush, lower boom
12.	1578-015	4	Cap, cylinder
13.	8626	3	Pin keeper, 10mm
14.	9962	1	Pin, lower cylinder
15.	9928A	1	Lower cylinder
16.	10029	1	Boom latch
17.	1549-005	2	Bush, lower cylinder
18.	3624-3	4	Bush, jib boom
19.	11597	1	Microswitch
20.	1297M	1	Rubber block
21.	9794	1	Pin, jib cylinder
22.	9790	1	Pin, jib boom
23.	9793	1	Pin, jib cylinder
24.	8628	2	Pin keeper, 6mm
25.	8102	2	Washer, knuckle pin
26.	11492-3	3	Locktab, 10mm
27.	11492-1	2	Locktab, 6mm
29.	9792	1	Pin, basket frame

## Platform assembly


Item	Part No	Qty	Description
1.	3027	1	Basket assembly
2.	3603-05	28	Flow control valve
3.	3603-08	4	Washer, plain
4.	3603-16	2	Washer, plain
5.	3604-05012	8	Washer, plain
6.	3604-05020	2	Screw, Pan head, M5 x 12
7.	3605-05	4	Screw, machine
8.	3608-16C	2	Washer, spring
9.	3610-05016	4	Cone lok nut, M16
10.	3610-05020	2	Bolt, metric
11.	3610-08030	2	Bolt, metric
12.	3611-05	16	Bolt, metric
13.	3611-08	2	Nut, metric, nyloc
14.	3617-16035	8	Nut, metric, nyloc
15.	3626-10	4	Bolt, metric
16.	3631-16	8	Permaglide bush, flanged
17.	9727	1	Washer, disc lock
18.	12386-2	1	Certificate holder
19.	13056-4	2	Licence plate lamp, LED
20.	13484	1	Trailer light, combination
21.	13484-18	2	Basket weld
22.	13484-22	3	Recessed light guard
23.	13525-05	2	Drop bar, 610mm long
24.	058523-000	6	Washer, fender
25.	60027-066N	24	U bracket
26.	60030-198	2	Rivet, 1/8" x 5/32"
27.	65004-008	4	Washer, fender, 1/4"
28.	562386	1	Rubber grommet
29.	3020021	1	Literature compartment
30.	12385A	1	Foot switch
31.	12385A	1	Upper control box assembly (electric controls)
32.	13524A	1	Control box assembly, upper, MHP HD

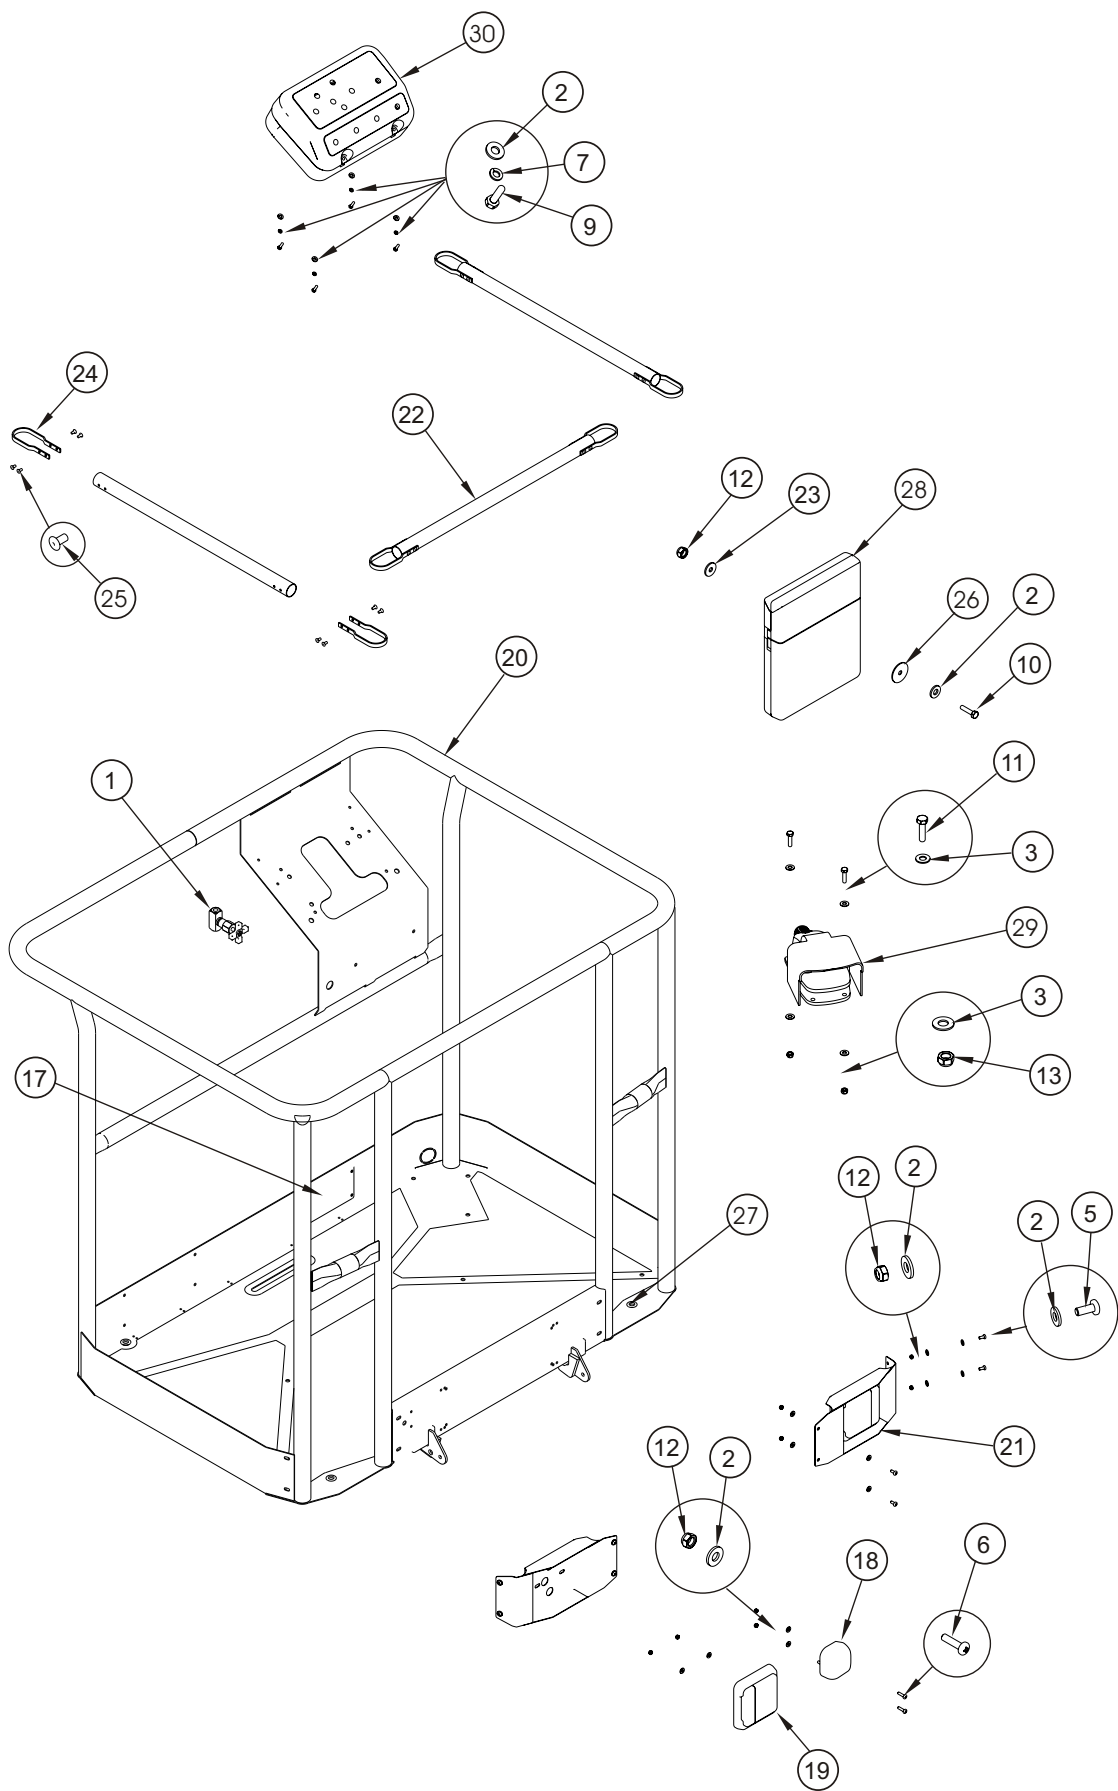

## Basket mount assembly

---


Item	Part No.	Qty	Description
1.	3610-10020	1	Bolt, metric
2.	3626-13	2	Permaglide bush, flanged
3.	8626	2	Pin keeper
4.	9790	1	Pin
5.	11492-3	1	Washer, tab
7.	13484A	1	Basket assembly
8.	3617-16035	8	Bolt, metric
9.	3631-16	8	Washer, nord-lock
10.	13468	1	Load cell
11.	9859	1	Pin
12.	8628	1	Pin keeper
13.	11492-1	1	Washer, lock, M6
14.	3610-06020	1	Bolt, M6 x 20
15.	3668-08020	6	Socket button head
16.	3603-08	12	Washer, plain
17.	3611-08	6	Nut, nyloc
18.	3624-3	2	Bush, 1" x 19.1"
19.	13498	1	Basket Quadrant, HD
20.	13497	1	Basket bottom mount

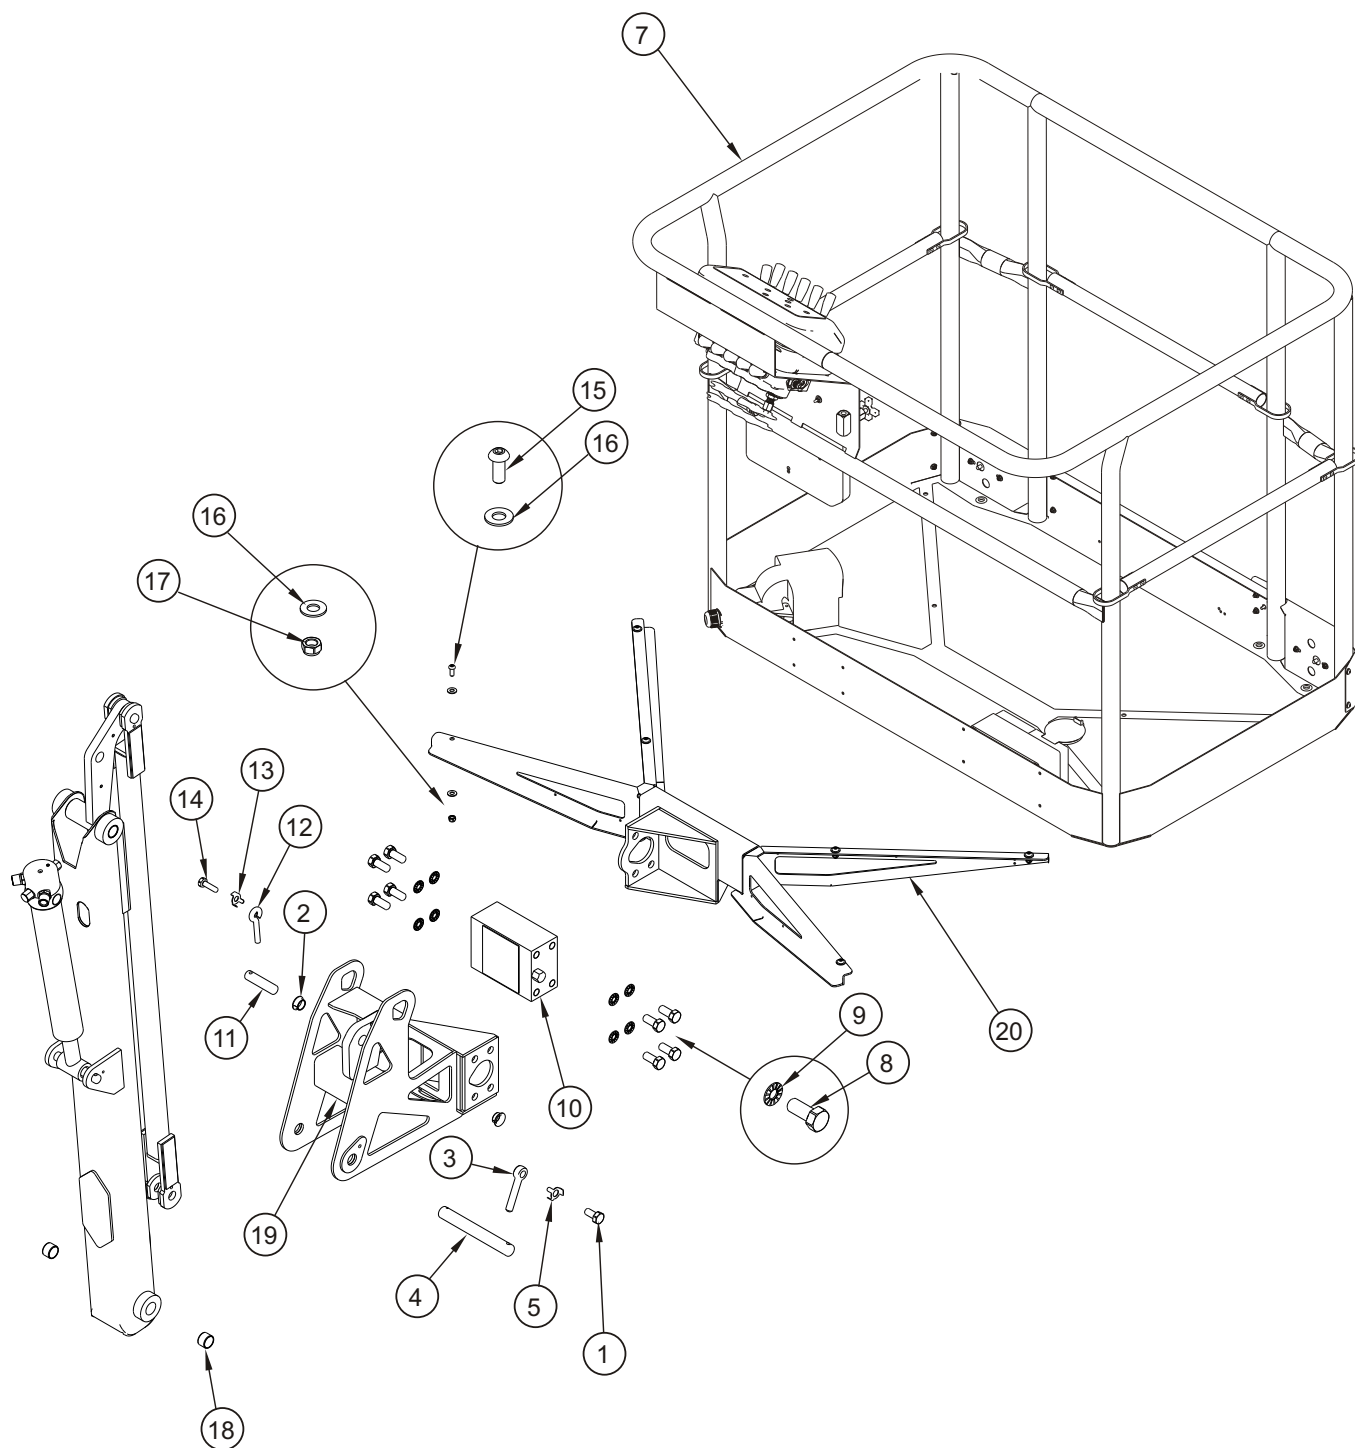

## Column assembly


Item	Part No	Qty	Description
1.	1034-120	12	Washer, M16, Galvanised and hardened
2.	1067	1	Slew ring
3.	2030-003	1	Grease nipple
4.	3027	1	Flow control valve
5.	3603-06	1	Washer, plain
6.	3603-08	2	Washer, plain
7.	3605-06	1	Washer, spring
8.	3610-06020	1	Bolt, metric
9.	3613-12035	10	Cap screw, metric
10.	3631-12	10	Washer, disc lock
11.	3631-16	12	Washer, disc lock
12.	7804-001	2	Restrictor, 1.0 x 1/16" NPT
13.	8626	1	Pin keeper
14.	10549	1	Selector valve
15.	11943	1	Slew drive brake assembly
16.	12381-25	1	Pinion gear guard
17.	12445	1	Micro switch
18.	12483	1	Remote grease nipple weld
19.	12483-2	1	Adapter
20.	12483-3	2	Connector, tube
21.	12521	1	Control box assembly, MHP lower, (machines with electric controls)
22.	12679-60	1	Column cover
23.	12875	1	Column weld
24.	12877	1	Control box assembly, MHP lower, (machines with hydraulic controls)
26.	13485-01	1	Trionics, GP400C
27.	13485-03	1	Trionics, TBM
28.	600020-028N	12	Bolt, UNF hex
29.	60021-016	12	Nut, UNF
30.	11415B	1	Main control manifold (electric controls only)
32.	1559A	1	Lower control valve (hydraulic controls only)



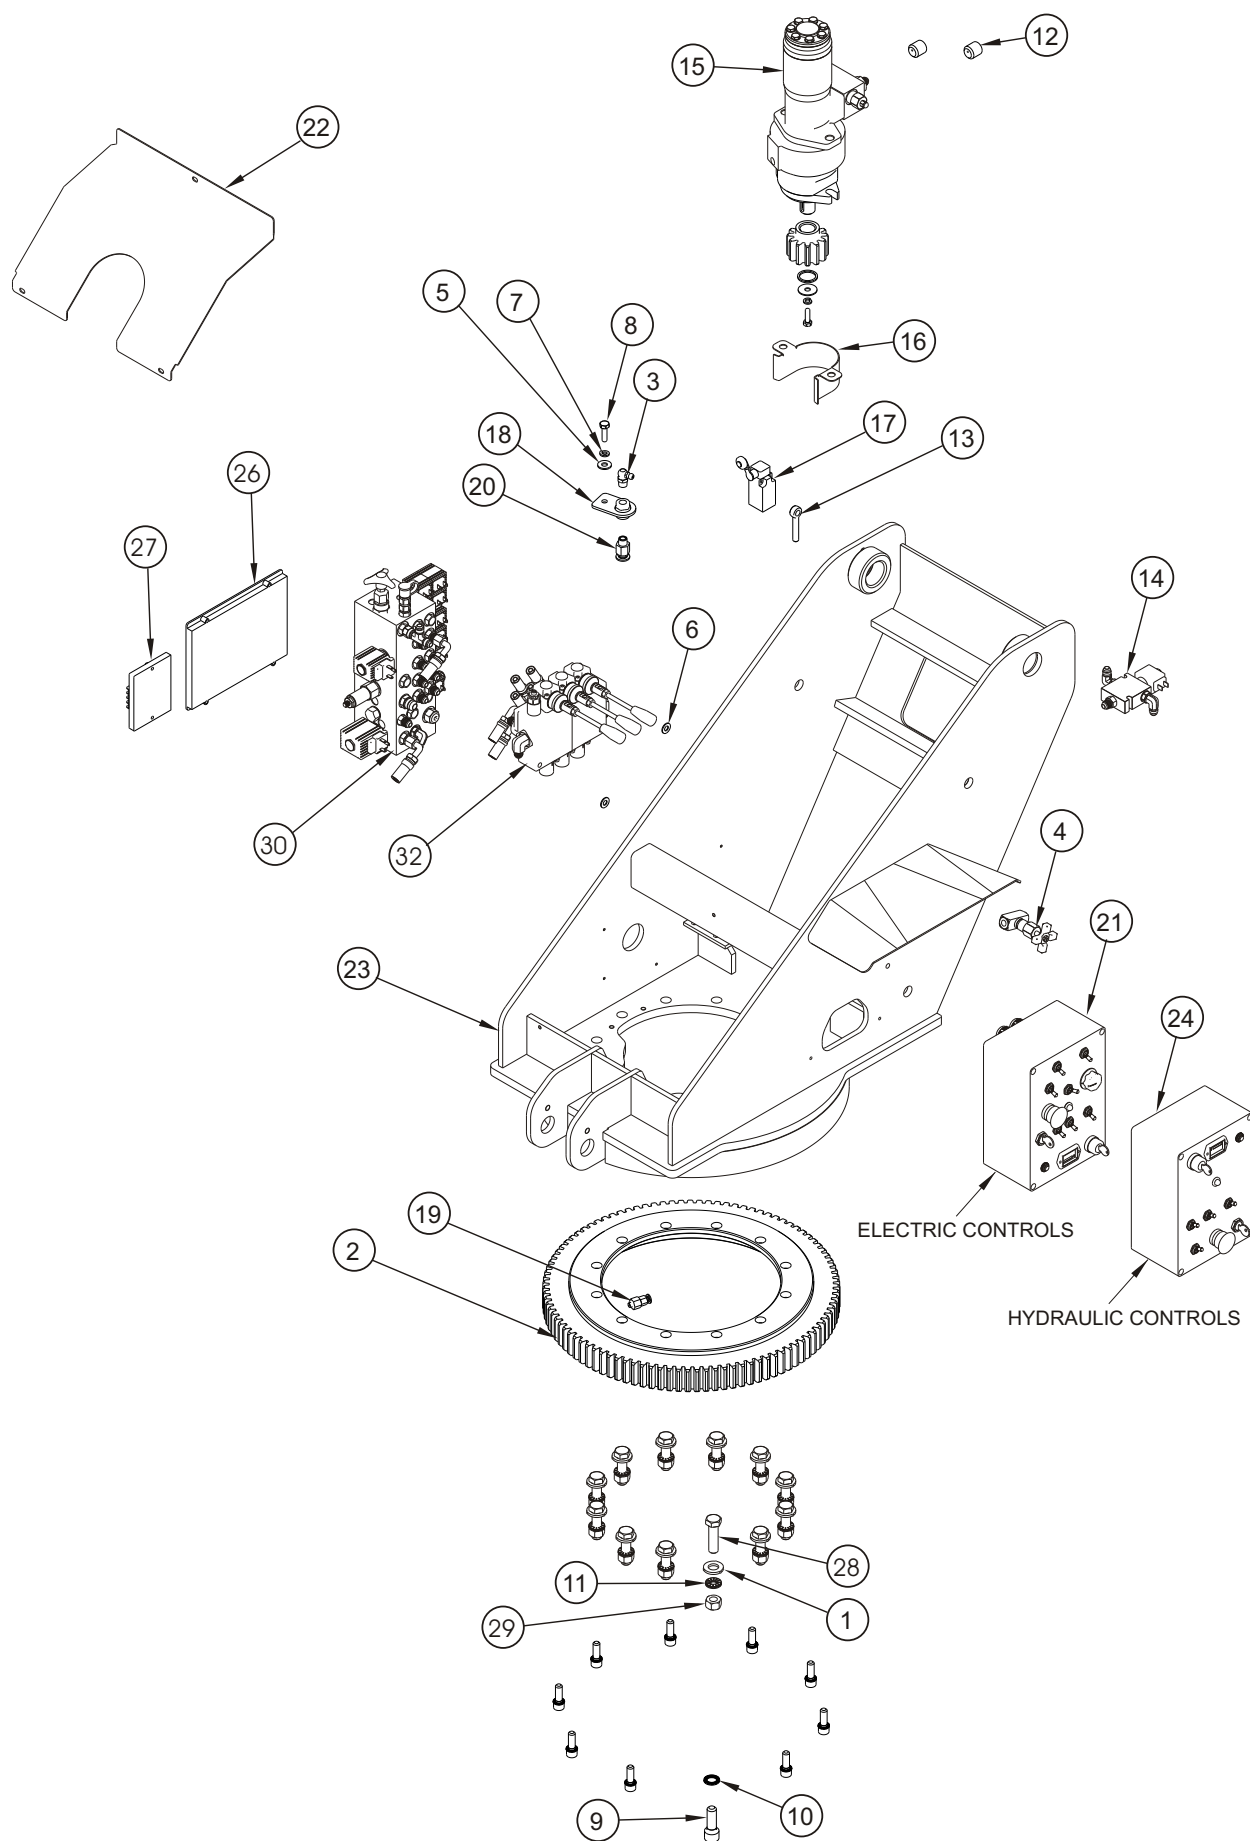


## Placards and decals - electric controls

Item	Part No	Qty	Description
1.	511067-000	2	Decal, Snorkel web site
2.	0150448	1	Decal, lanyard attachment
3.	032-3899	1	Decal, Electrocution hazard
4.	12814	1	Decal, Hydraulic fluid
5.	12833-2	1	Serial number plate
6.	13471-02	2	Decal, MHP15/44HD logo
7.	1843	1	Decal, Warning, New Zealand only
	9428	1	Decal, Electric hazard, Australia only
8.	300699	1	Decal, Operators checklist
9.	45198-6	3	Decal, Do not disable limit switch
10.	45198-7	2	Decal, Wind speed rating
11.	569295	2	Decal, Snorkel 3 logo
12.	12424	1	Decal, Towing speed
13.	7856-50	2	Decal, Tyre pressure
14.	8945	1	Vehicle identification plate
15.	9223-3	10	Chevron, Warning stripes (pieces)
16.	013-0025	1	Decal, Warning with stabilisers
17.	9751	1	Decal, New Zealand made logo
18.	12545	1	Decal, Auto stabiliser operation
19.	10036	1	Decal, Cradle latch
20.	1772-002-K	1	Decal, Fit boom cradle lock pin
21.	12753	1	Decal, Emergency bleed down valve
22.	0072531	1	Decal, Electrocution hazard (prior to serial number NZ070806)
23.	0323897	1	Decal, Danger must not operate
24.	12423-200	1	Decal, Rated load
25.	99228-1	1	Decal, Caution safety harness
26.	007-1925	1	Decal, Gasoline
27.	56242-6	1	Decal, Operator manual enclosed
28.	13030	1	Decal, Electrocution hazard (after serial number NZ070806)
29.	13183	1	Decal, Remove from towing vehicle before operating (after serial number NZ080622)
30.	13205	1	Decal, 10.9m height restriction, Australia only (from serial number NZ080821)
31.	12617	1	Decal, Approved lift method
32.	0080650	4	Decal, Shackle hook points
33.	501453-000	4	Decal, Foot crush hazard

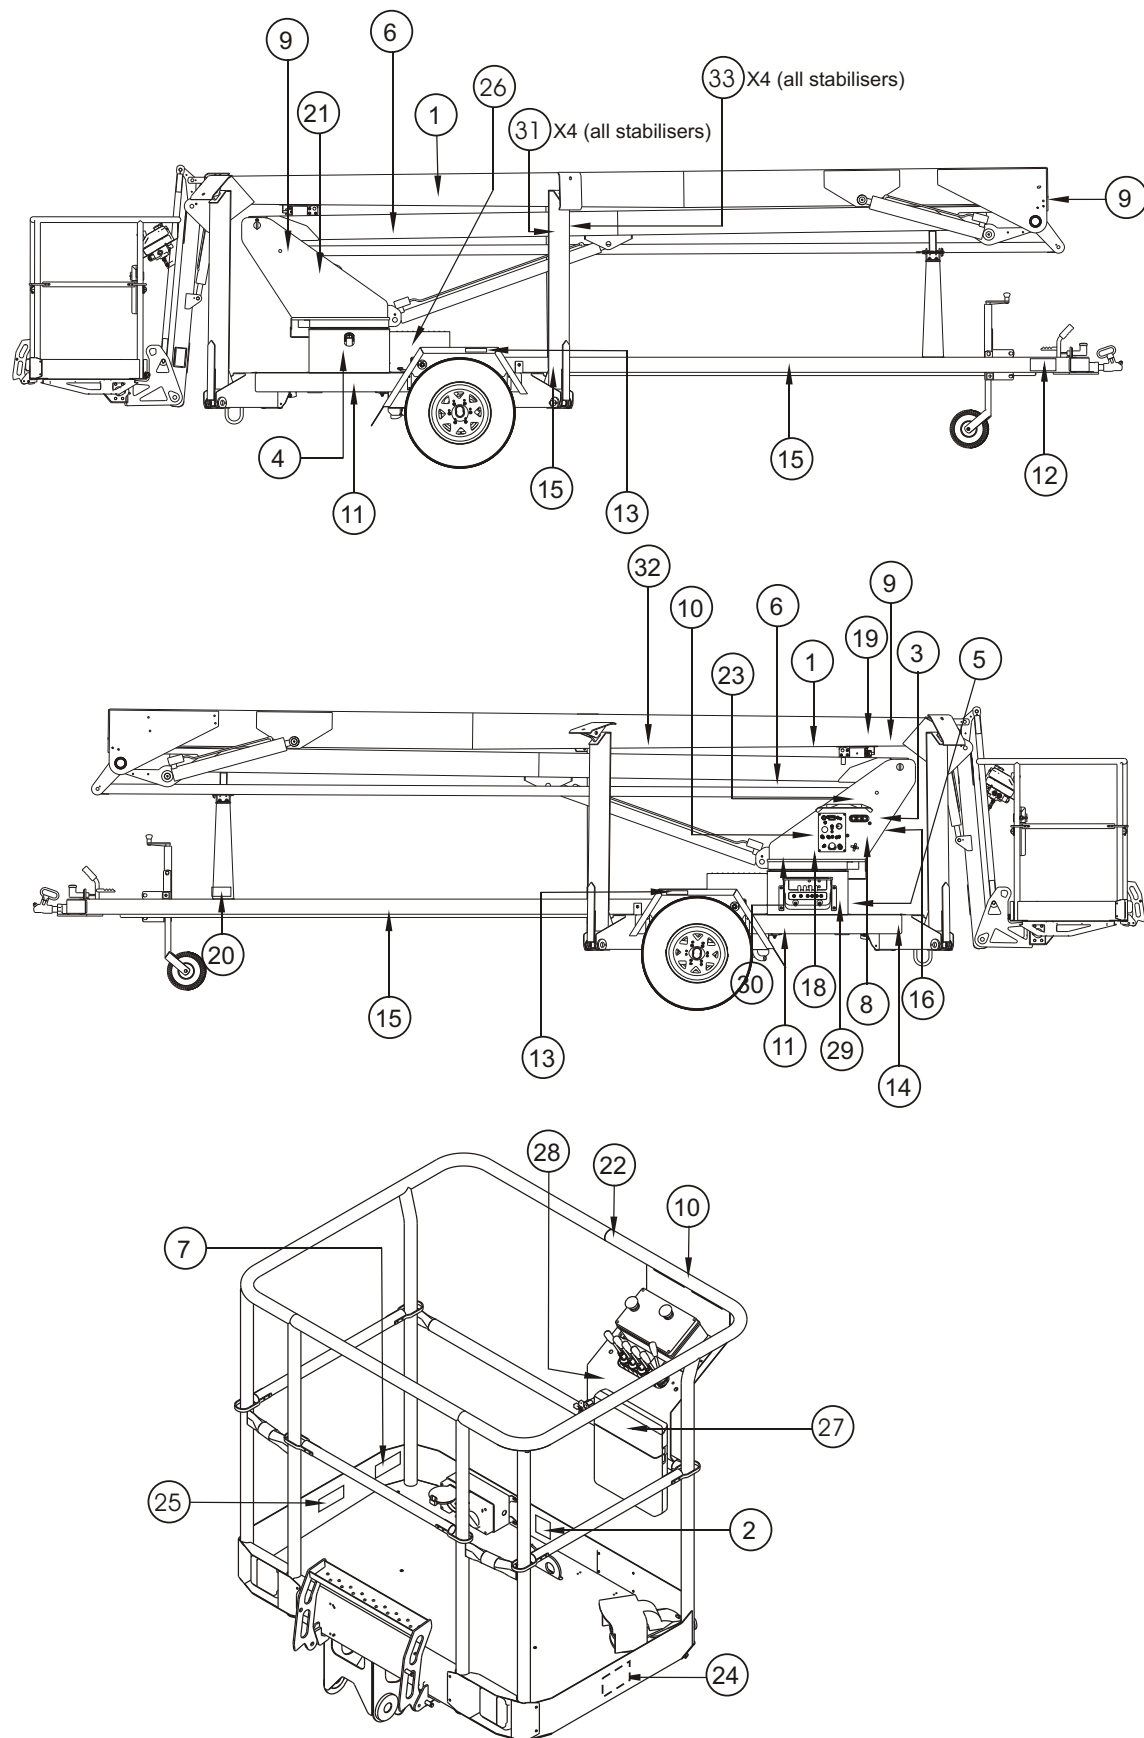


## Placards and decals - hydraulic controls

Item	Part No	Qty	Description
1.	511067-000	2	Decal, Snorkel website
2.	0150448	1	Decal, lanyard attachment
3.	032-3899	1	Decal, Electrocution hazard
4.	12814	1	Decal, Hydraulic fluid
5.	12833-2	1	Serial number plate
6.	13471-02	2	Decal, MHP15/44HD logo
7.	1843	1	Decal, Warning, New Zealand only
	9428	1	Decal, Electric hazard, Australia only
8.	300699	1	Decal, Operators checklist
9.	45198-6	3	Decal, Do not disable limit switch
10.	45198-7	2	Decal, Wind speed rating
11.	569295	2	Decal, Snorkel 3 logo
12.	12424	1	Decal, Towing speed
13.	7856-50	2	Decal, Tyre pressure
14.	8945	1	Vehicle identification plate
15.	9223-3	10	Chevron, Warning stripes (pieces)
16.	13052-1	1	Decal, Lower control valve operation
17.	9751	1	Decal, New Zealand made logo
18.	12545	1	Decal, Auto stabiliser operation (when fitted)
19.	013-0025	1	Decal, Warning with stabilisers
20.	1772-002-K	2	Decal, Fit boom cradle lock pin
21.	12753	1	Decal, Emergency bleed down valve
22.	13052-5	1	Decal, Manual stabilisers
23.	0323897	1	Decal, Danger must not operate
24.	12423-200	1	Decal, Rated load
25.	99228-1	1	Decal, Caution safety harness
26.	9213	1	Decal, Gasoline
27.	56242-6	1	Decal, Operator manual enclosed
28.	13030	1	Decal, Electrocution hazard
29.	13052-4	1	Decal, In case of function failure
30.	12877-1	1	Decal, Lower control box
31.	0070420	1	Decal, Emergency bleed down
32.	12861-1	1	Decal, Upper control box, non-rotate
	12861-2	1	Decal, Upper control box, rotate
33.	13029	1	Decal, Emergency lowering
34.	13183	1	Decal, Remove from towing vehicle before operating (after serial number NZ080622)
35.	13205	1	Decal, 10.9m height restriction, Australia only (from serial number NZ080821)
36.	12617	1	Decal, Approved lift method
37.	0080650	4	Decal, Shackle hook points
38.	501453-000	4	Decal, Foot crush hazard

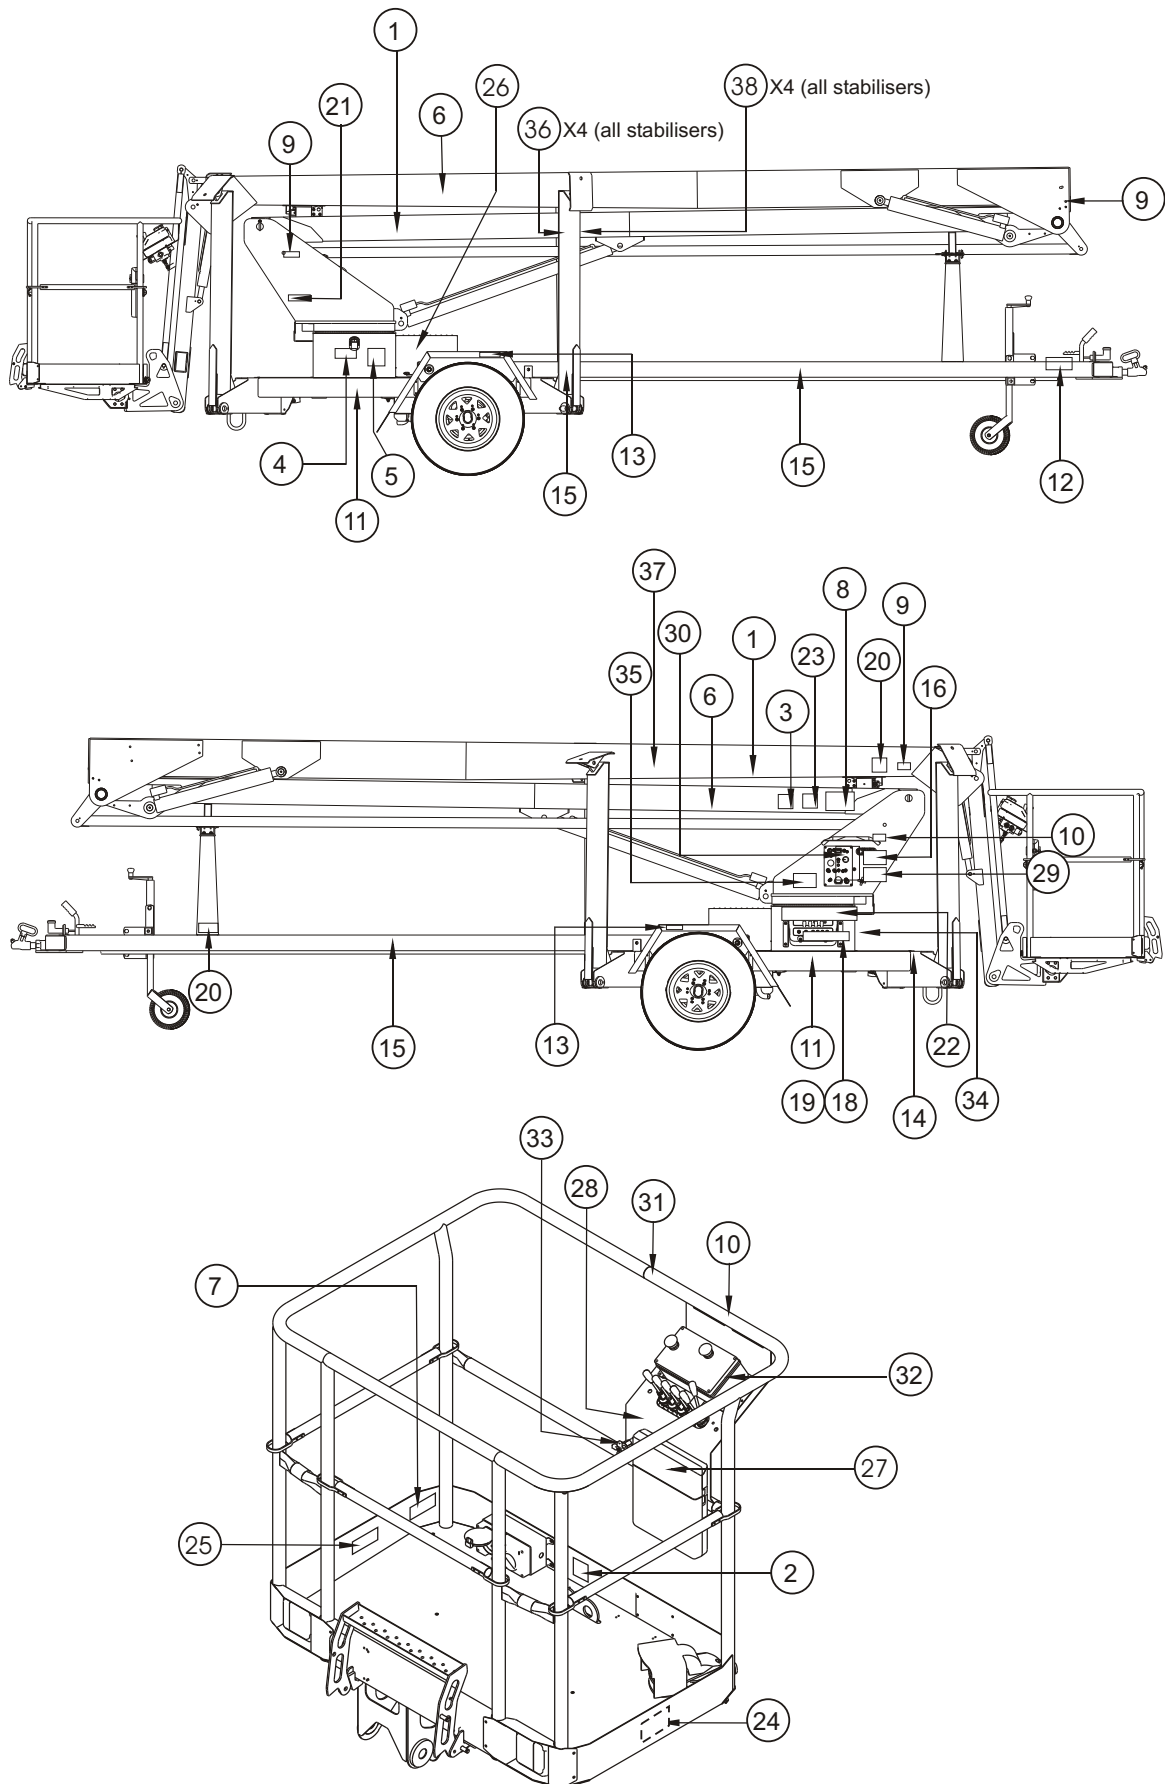

## Placards and decals - LV insulated machines

Item	Part No	Qty	Description
1.	511067-000	2	Decal, Snorkel website
2.	0150448	1	Decal, lanyard attachment
3.	2829-1	6	Decal, LV cover
4.	12814	1	Decal, Hydraulic fluid
5.	12833-2	1	Serial number plate
6.	13471-02	2	Decal, MHP15/44HD logo
7.	12829	2	Decal, Uninsulated
8.	300699	1	Decal, Operators checklist
9.	45198-6	3	Decal, Do not disable limit switch
10.	45198-7	2	Decal, Wind speed rating
11.	569295	2	Decal, Snorkel 3 logo
12.	12424	1	Decal, Towing speed
13.	7856-50	2	Decal, Tyre pressure
14.	8945	1	Vehicle identification plate
15.	9223-3	10	Chevron, Warning stripes (pieces)
16.	9963	1	Decal, Lower control valve operation
17.	9751	1	Decal, New Zealand made logo
18.	12545	1	Decal, Auto stabiliser operation (when fitted)
19.	013-0025	1	Decal, Warning with stabilisers
20.	1772-002-K	2	Decal, Fit boom cradle lock pin
21.	12829-2	2	Decal, Condition
22.	11843	1	Decal, Manual stabilisers
23.	0323897	1	Decal, Danger must not operate
24.	12423-200	1	Decal, Rated load
25.	99228-1	1	Decal, Caution safety harness
26.	007-1925	1	Decal, Gasoline
27.	56242-6	1	Decal, Operator manual enclosed
28.	12829-3		Decal, Warning stripe insulated/uninsulated (yellow/red)
29.	12877-1	1	Decal, Lower control box
30.	12861-1	1	Decal, Upper control box, non-rotate
	12861-2	1	Decal, Upper control box, rotate
31.	13029	1	Decal, Emergency lowering
32.	13183	1	Decal, Remove from towing vehicle before operating (after serial number NZ080622)
33.	13205	1	Decal, 10.9m height restriction, Australia only (from serial number NZ080821)
34.	12617	1	Decal, Approved lift method
35.	0080650	4	Decal, Shackle hook points
36.	501453-000	4	Decal, Foot crush hazard

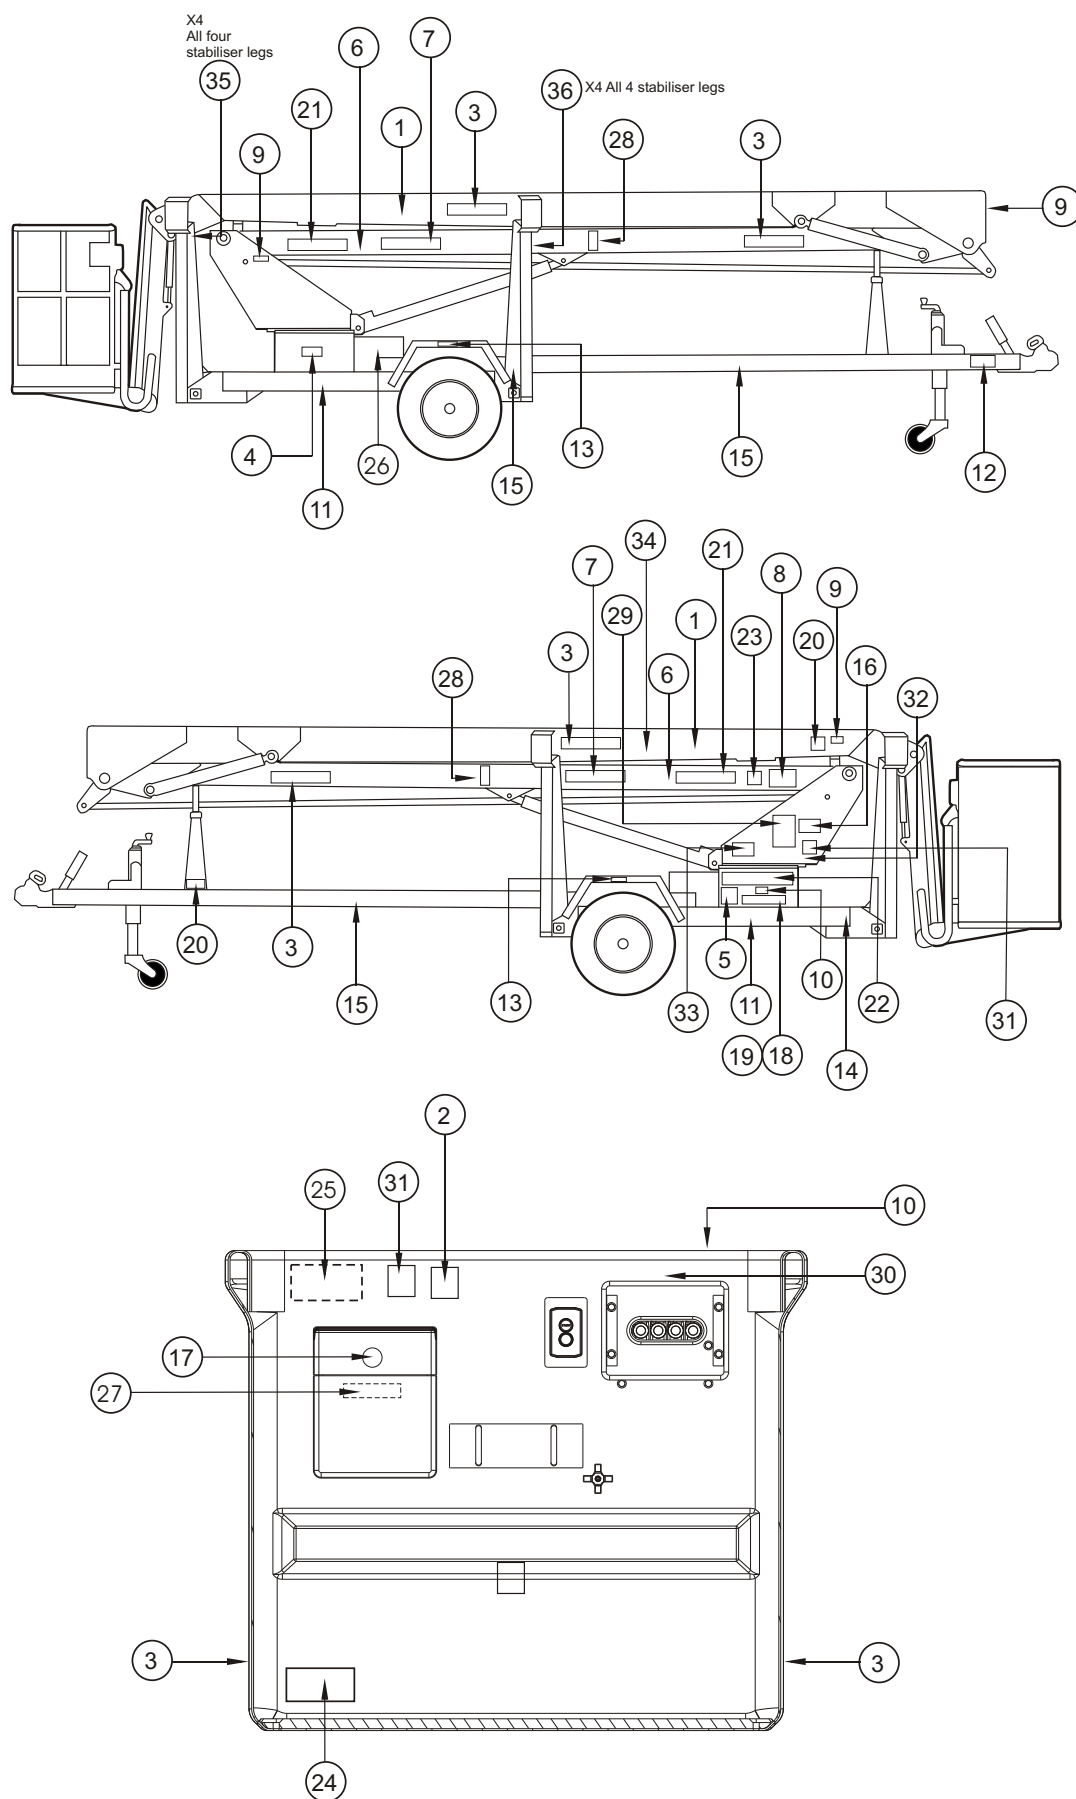

## 2000kg axle

Item	Part No	Qty	Description
A.	12773	Ref	Axle assembly
1.	12301-10	2	Bearing kit, includes 1, 2, 3, 4
2.		2	Bearing cone
3.		2	Bearing cup
4.		2	Bearing cone
5.	12773-3	2	Hub assembly, Pre NZ070806, (Includes 1, 5, 3, 25, 26)
6.	11027-4	Ref	Seal kit, hub
9.	60030-075	2	Flat washer ¾" I.D.
10.	60021-092N	2	Castle nut ¾" U.N.F.
11.	60038-043N	2	Split pin
12.	12301-3	2	Grease cap
13.	2045-001	2	Caliper assembly, plated, no pads
14.	9945-9	2	Anchor plate
15.	2045K	Ref	Seal kit, caliper
16.	2045-004	4	Brake pads
17.	2045-003	2	Bleed screw
18.	2045-13	2	Housing
19.	2045-5	4	Guide pin
20.	3605-08	4	Spring washer M8
21.	3610-08030	4	Set screw M8 x 30 HT
22.	60005-013	2	Lockwasher
23.	3610-12035	2	Set screw M12 x 35 HT
24.	2045-010	2	Piston
25.	1649-041	12	Wheel nut, UNF 1/2"
26.	1649-040	12	Wheel stud, UNF 1/2"
27.	3611-16	4	Nut, nyloc
28.	13017-2	2	Tyre, Post NZ070806
29.	3610-16100	2	Bolt
30.	12703-3	2	U-bolt
31.	12826	2	U-bolt attachment plate
32.	13017-2	2	Wheel rim, Post NZ070806
33.	13174	PR	Spring assembly
34.	3603-16	4	Plain washer
35.	3602-12	8	Nut
36.	3605-012	8	Washer



F


E

D

C

B

A

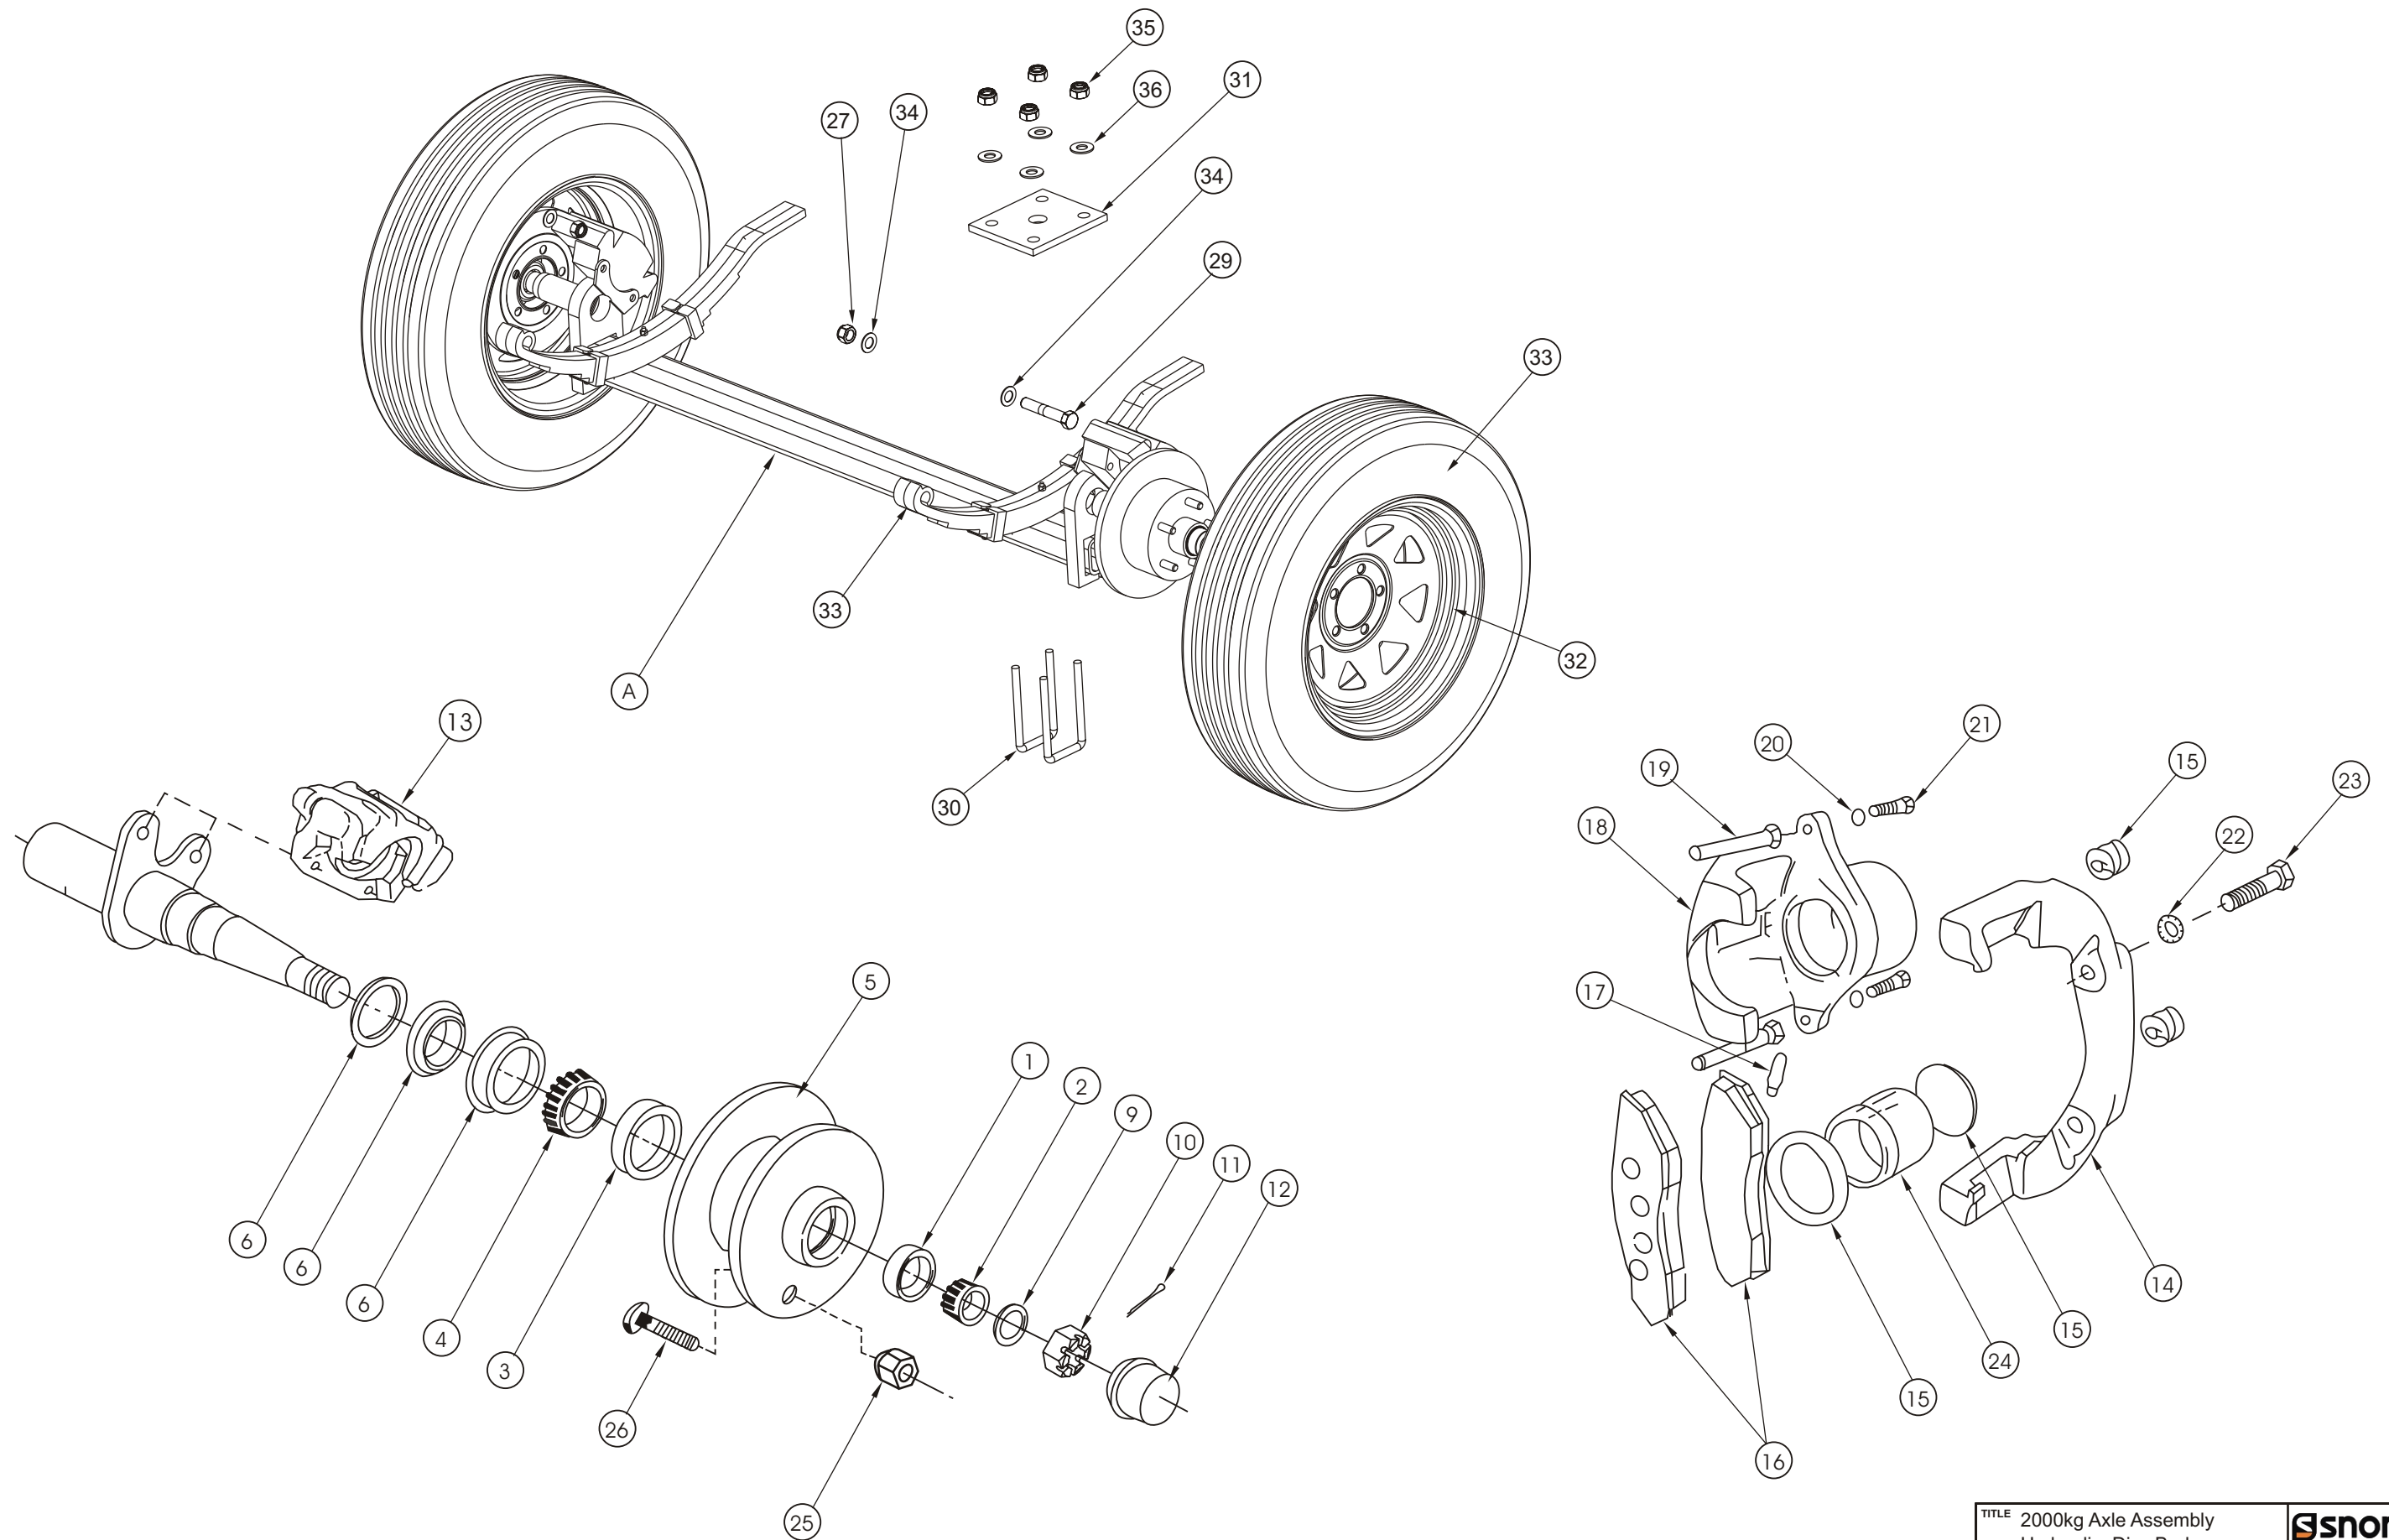

F


E

D

C

B


A

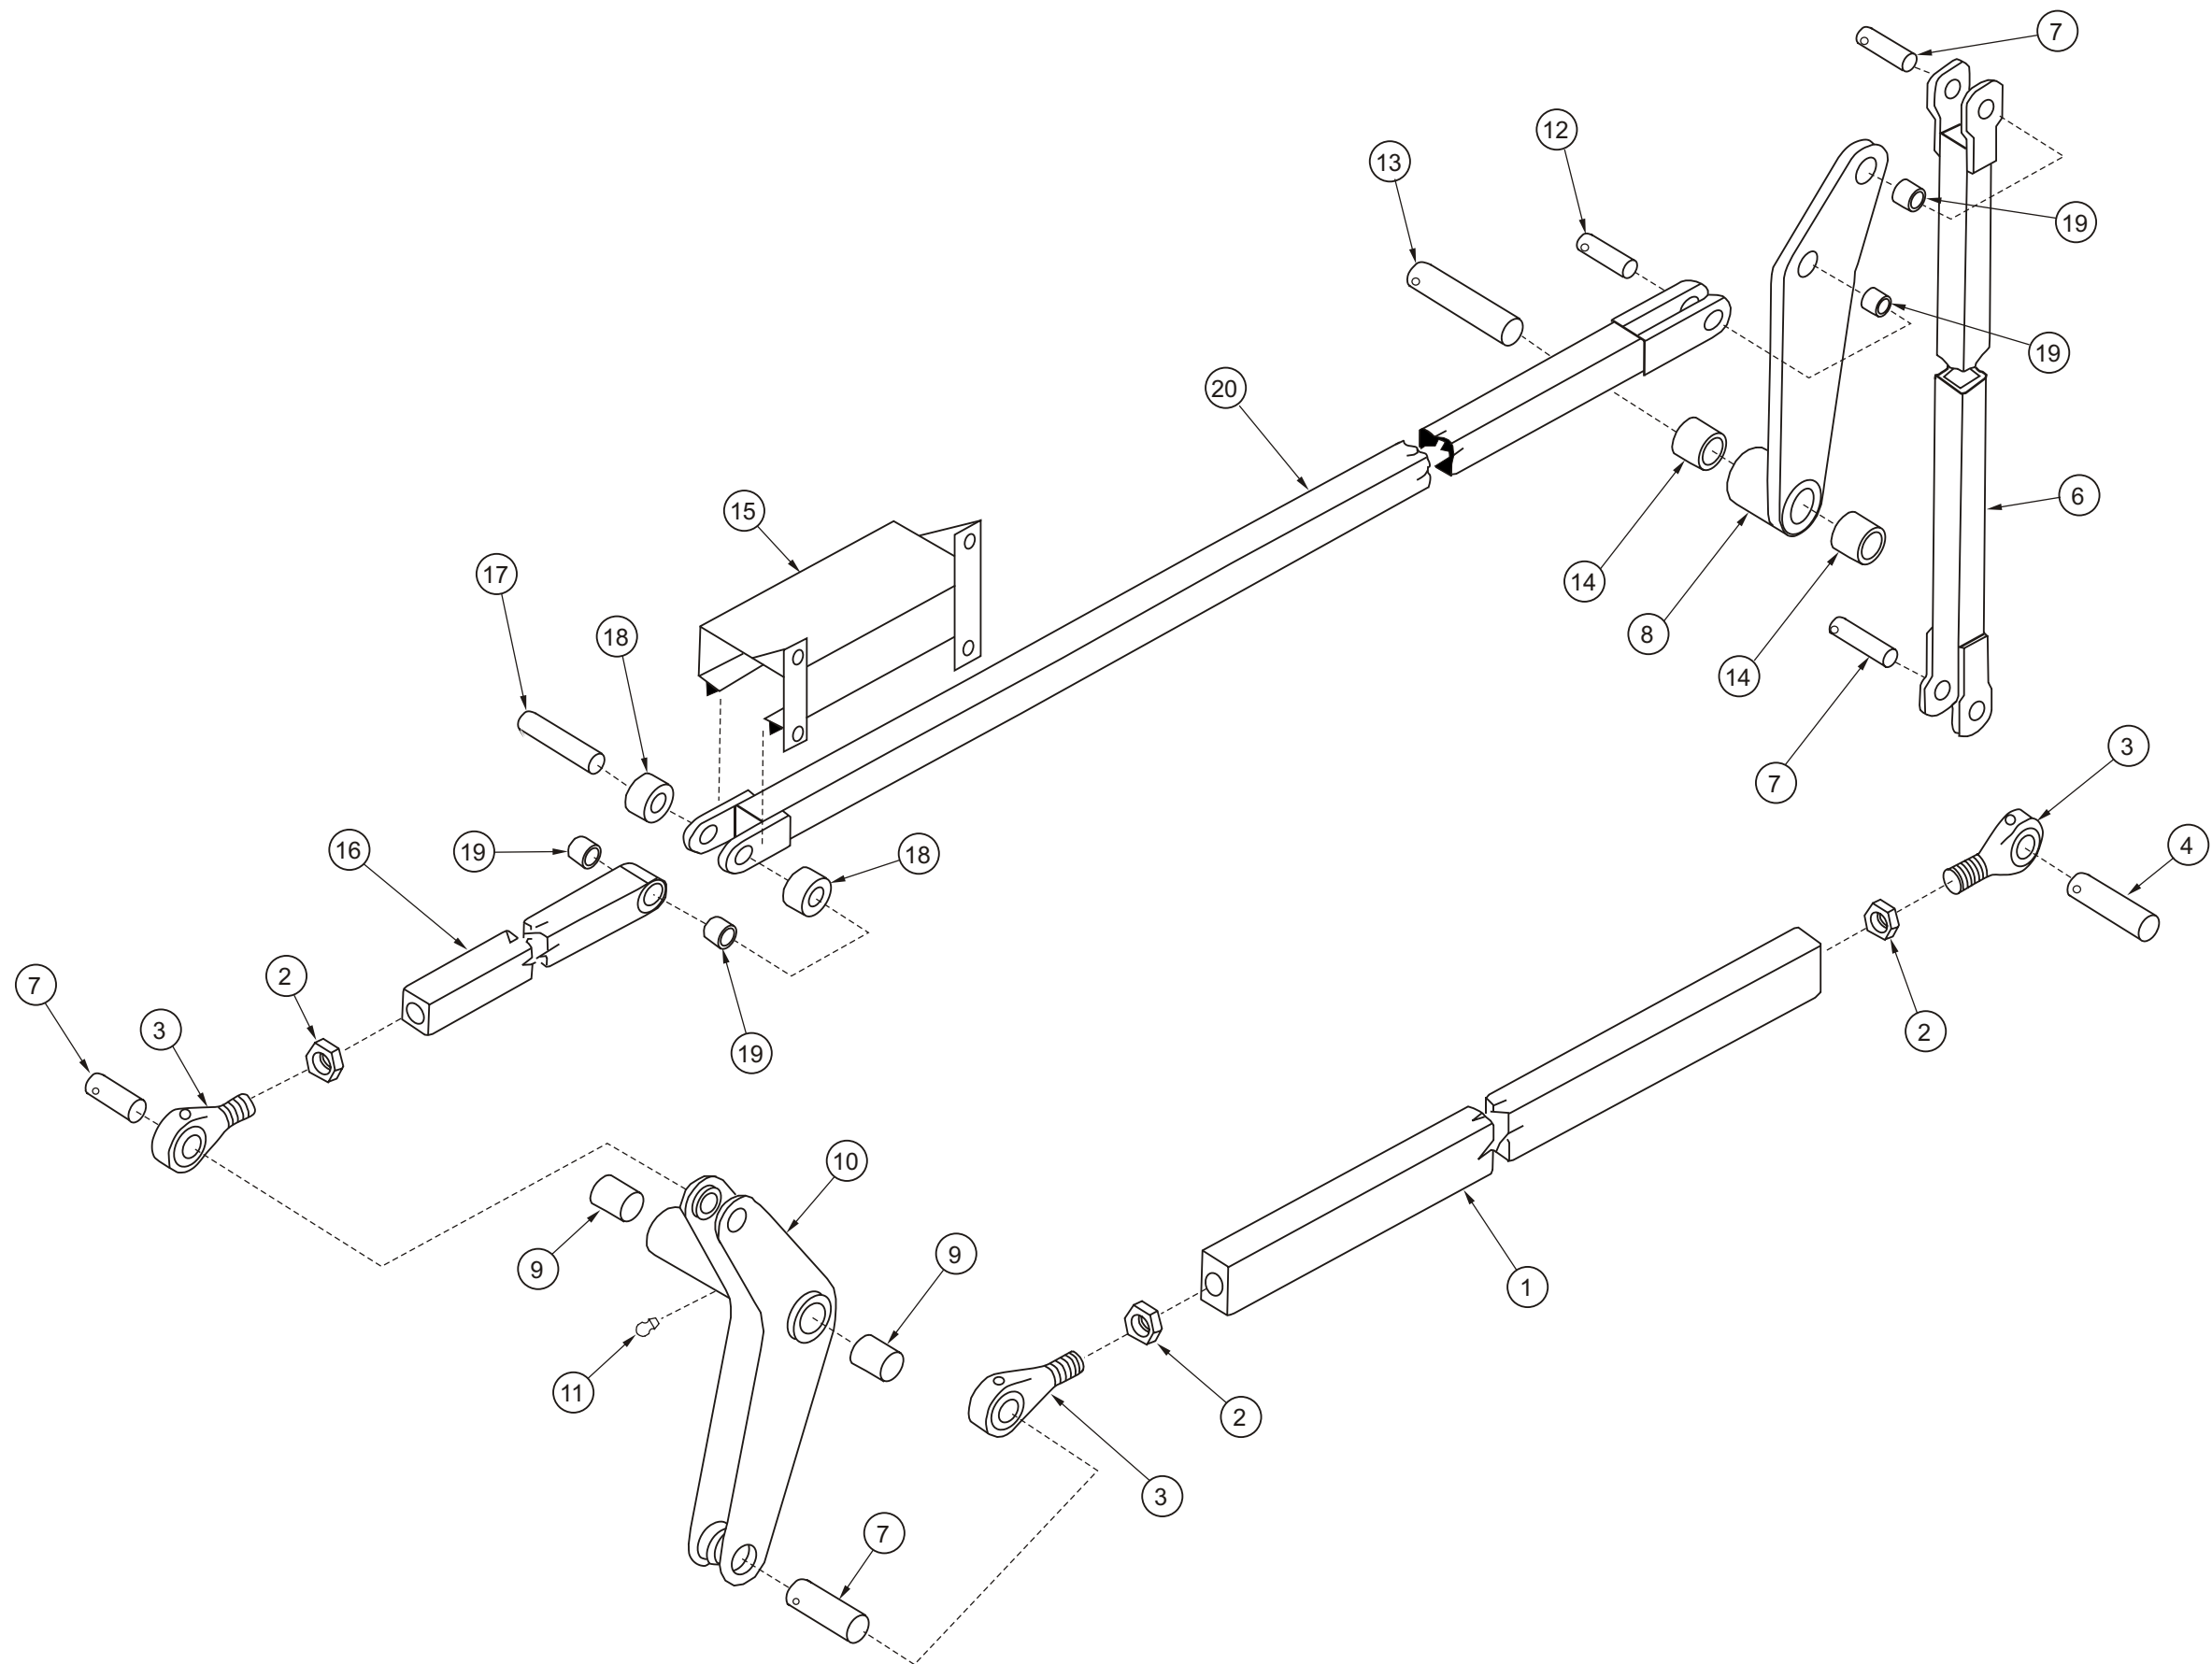

Item	Part No	Qty	Description
1.	9947-1	1	Lower level rod
2.	3608-20	3	Lock nut
3.	1750-120	3	Rod end
4.	9963	1	Pin
6.	9877	1	Extension level rod
7.	9859	4	Pin
8.	9884	1	Level quadrant
9.	1581-010	2	Bush
10.	9951	1	Level quadrant
11.	2030-001	1	Grease nipple
12.	9932	1	Pin
13.	9790	1	Pin
14.	3624-3	2	Bush
15.	9880	1	Level guide channel
16.	9879	1	Link level rod
17.	9882	1	Pin
18.	9881	2	Roller
19.	3624-8	4	Bush
20.	9878	1	Upper level rod

## Engine assembly

Item	Part No	Qty	Description
	12413	1	Engine assembly
1.	1171-4	1	Honda GX160
2.	1171-4-022	1	Regulator / rectifier GX160
3.	1171-4-025	1	Loom, Honda rectifier
4.	1650-030	1	Battery cable
5.	1650-031	1	Battery cable
6.	1659	1	Gear pump
7.	1880	1	Drive coupling
8.	3602-06	1	Metric nut
9.	3603-05	16	Plain washer
10.	3603-06	4	Plain washer
11.	3603-10	4	Plain washer
12.	3604-04040	2	Metric screw pan head
13.	3605-06	5	Spring washer
14.	3610-05016	8	Metric bolt
15.	3610-10020	1	Metric bolt
16.	3610-06016	1	Metric bolt
17.	3610-06025	2	Metric bolt
18.	3610-06030	4	Metric bolt
19.	3610-08045	4	Metric bolt
20.	3610-10055	1	Metric bolt
21.	3610-10065	3	Metric bolt
22.	3611-04	2	Metric nylock nut
23.	3611-05	8	Metric nylock nut
24.	3611-06	2	Metric nylock nut
25.	3611-08	4	Metric nylock nut
26.	3611-10	4	Metric nylock nut
27.	3612-06006	2	Grub screw
28.	3649-10	1	Battery cable
29.	7013-003	1	BSPP (Dowty) x JICM nipple
30.	7013-004	1	BSPP (Dowty) x JICM nipple
31.	8398	1	Spring
32.	8978-1	2	Screw, self tapping
33.	10254	1	Cover, battery terminal
34.	10350-4	1	Exhaust bracket
35.	10417	1	Bell housing
36.	11444	1	Choke solenoid 12V
37.	11497	1	Choke solenoid bracket
38.	12407	1	Exhaust weldment
39.	12524	4	Engine mount
40.	12526	1	Engine mount plate
41.	60005-054	4	Lockwasher
42.	60016-090N	4	Bolt, plated
43.	60030-3N	8	Flat washer
44.	5560179	4	Flat washer, special
45.	1875KEY	1	Key steel

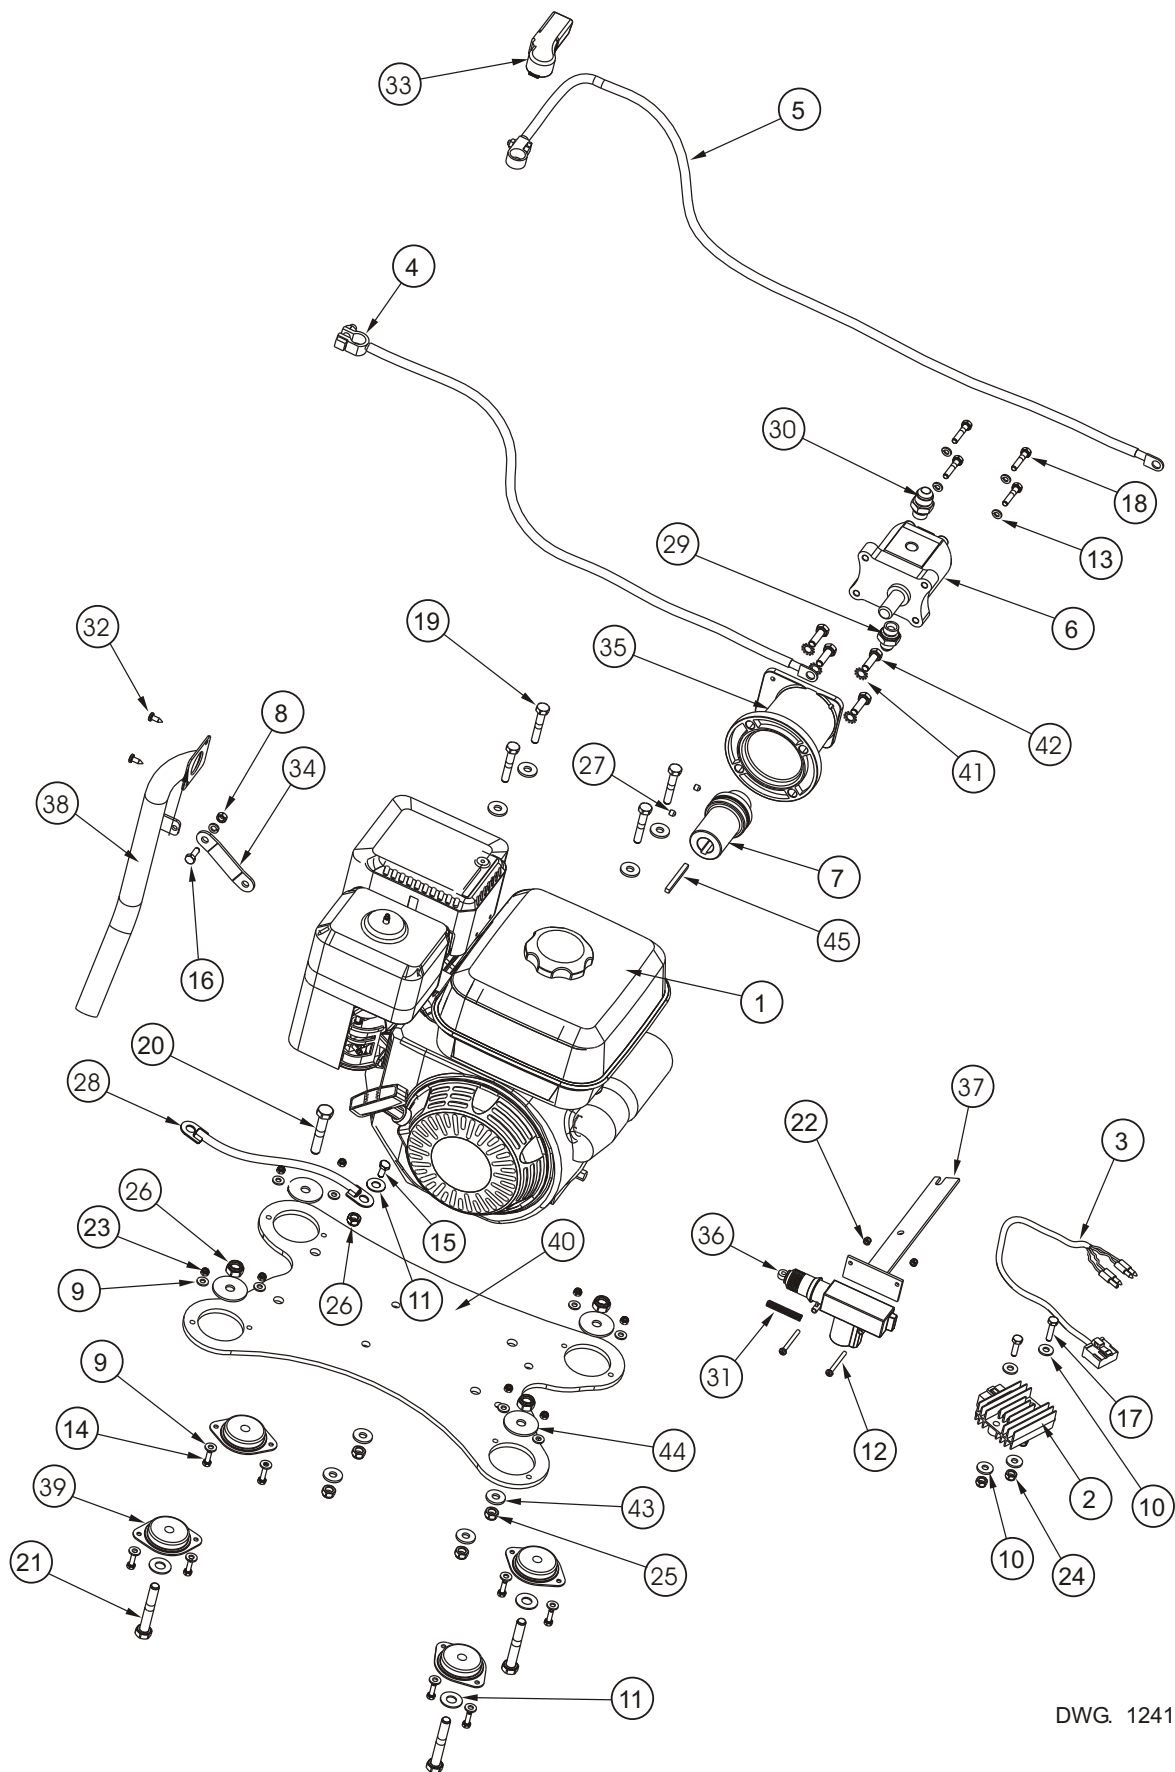

DWG. 12413



Hydraulic schematic standard	
Machines with electric controls . . . . .	2-3
Hydraulic schematic auto level option	
Machines with electric Controls . . . . .	2-4
Hydraulic schematic standard	
Machines with hydraulic controls . . . . .	2-5
Hydraulic schematic auto level option	
Machines with hydraulic Controls . . . . .	2-6
Main control valve - electric controls only . . . . .	2-7
Upper boom lift cylinder assembly . . . . .	2-8
Lower boom lift cylinder assembly . . . . .	2-9
Flyboom cylinder assembly . . . . .	2-10
Stabiliser leg cylinder assembly . . . . .	2-11
Continuous rotation (option) . . . . .	2-12
Automatic stabiliser (option) . . . . .	2-13

---



F


E

D

C

B

A

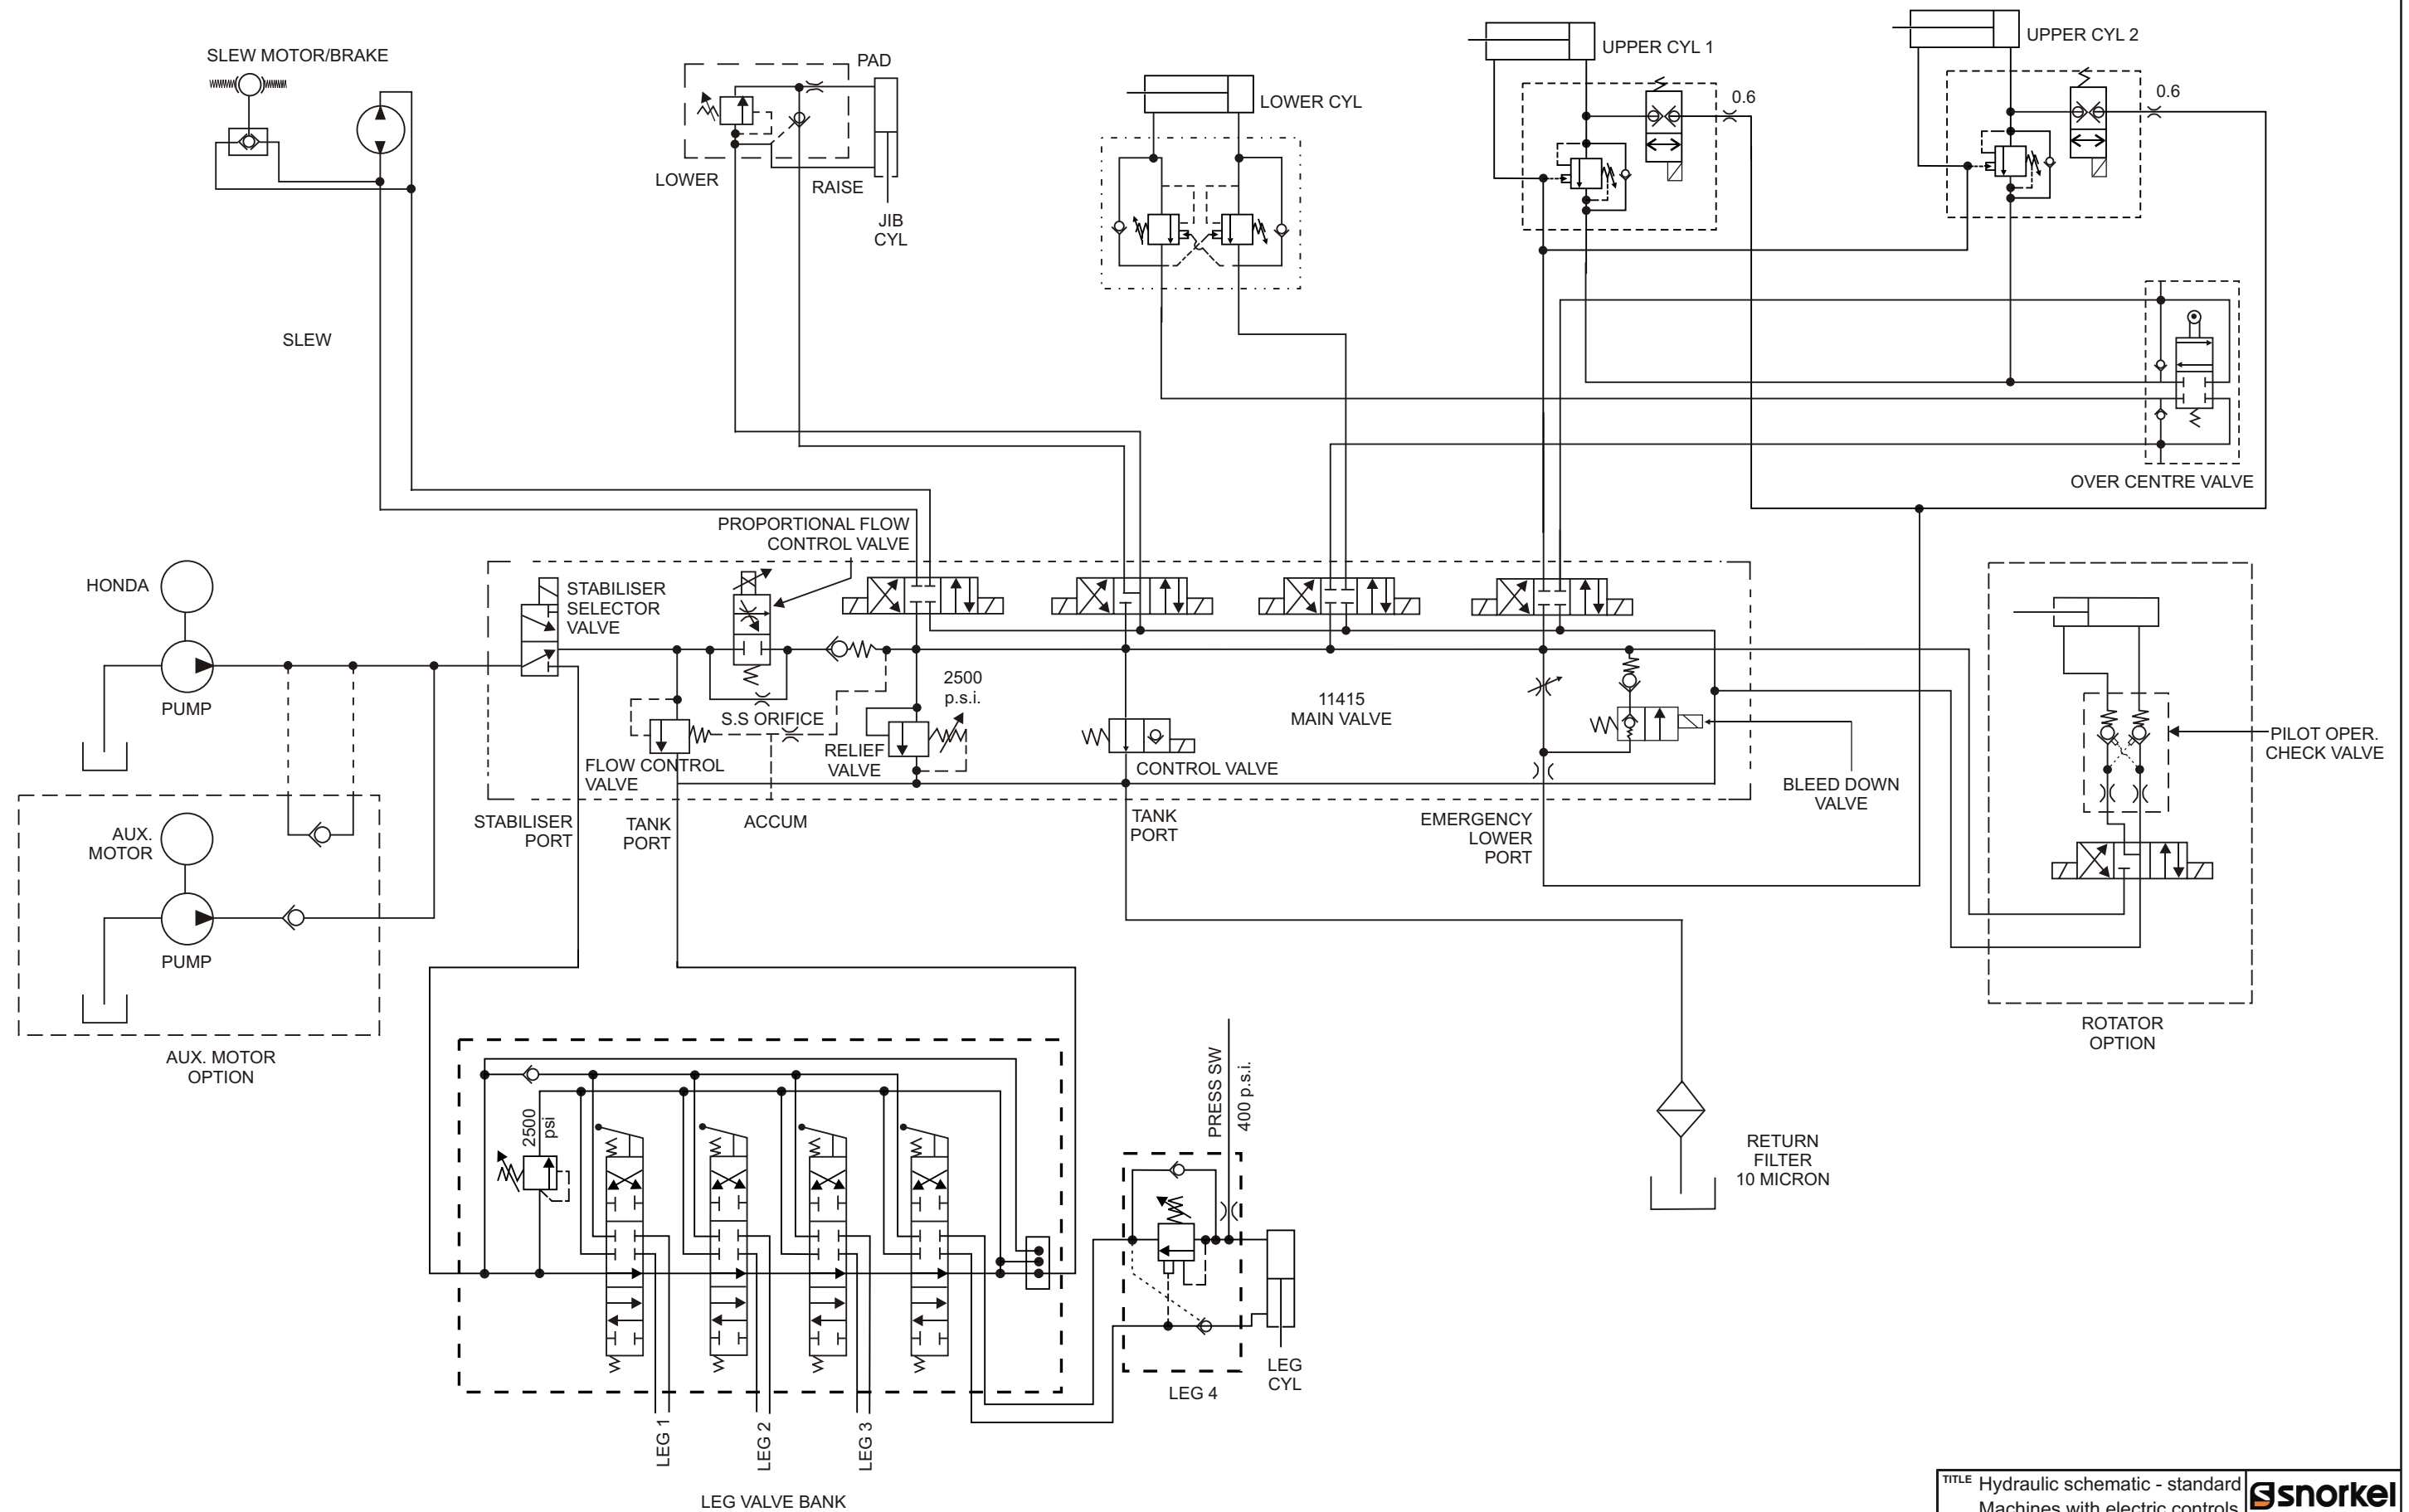

F


E

D

C

B

A

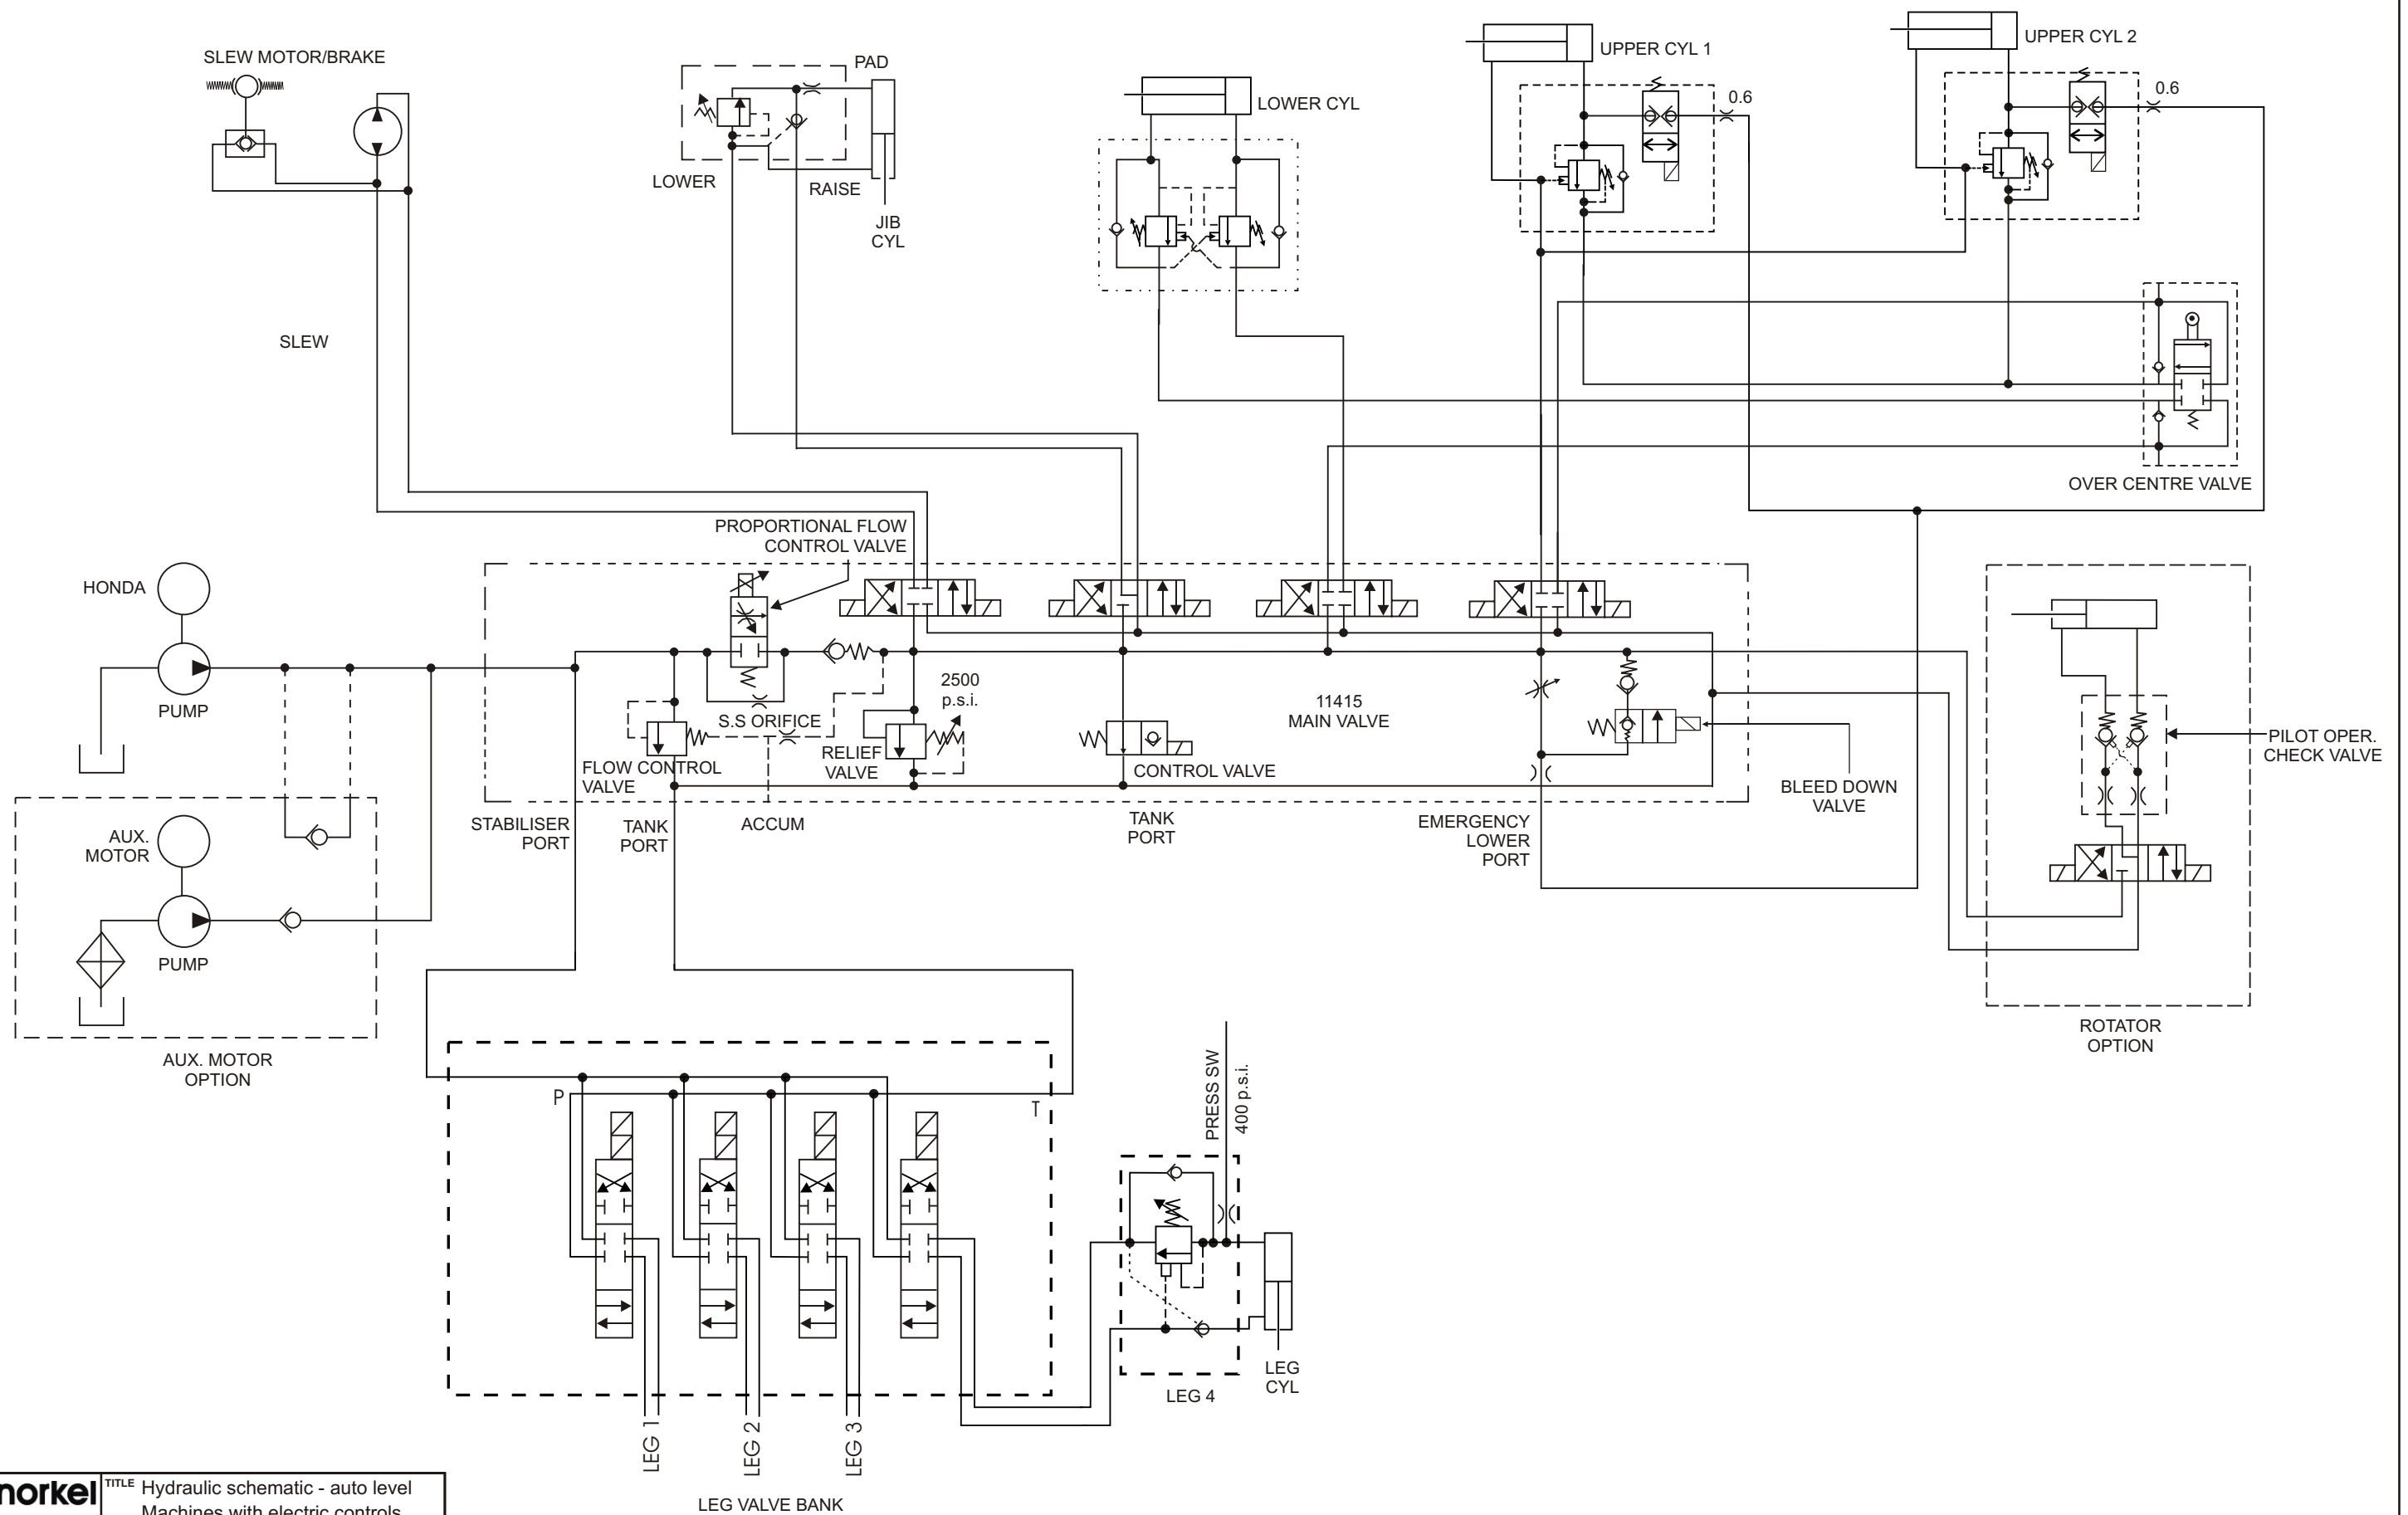

F


E

D


C

B


A

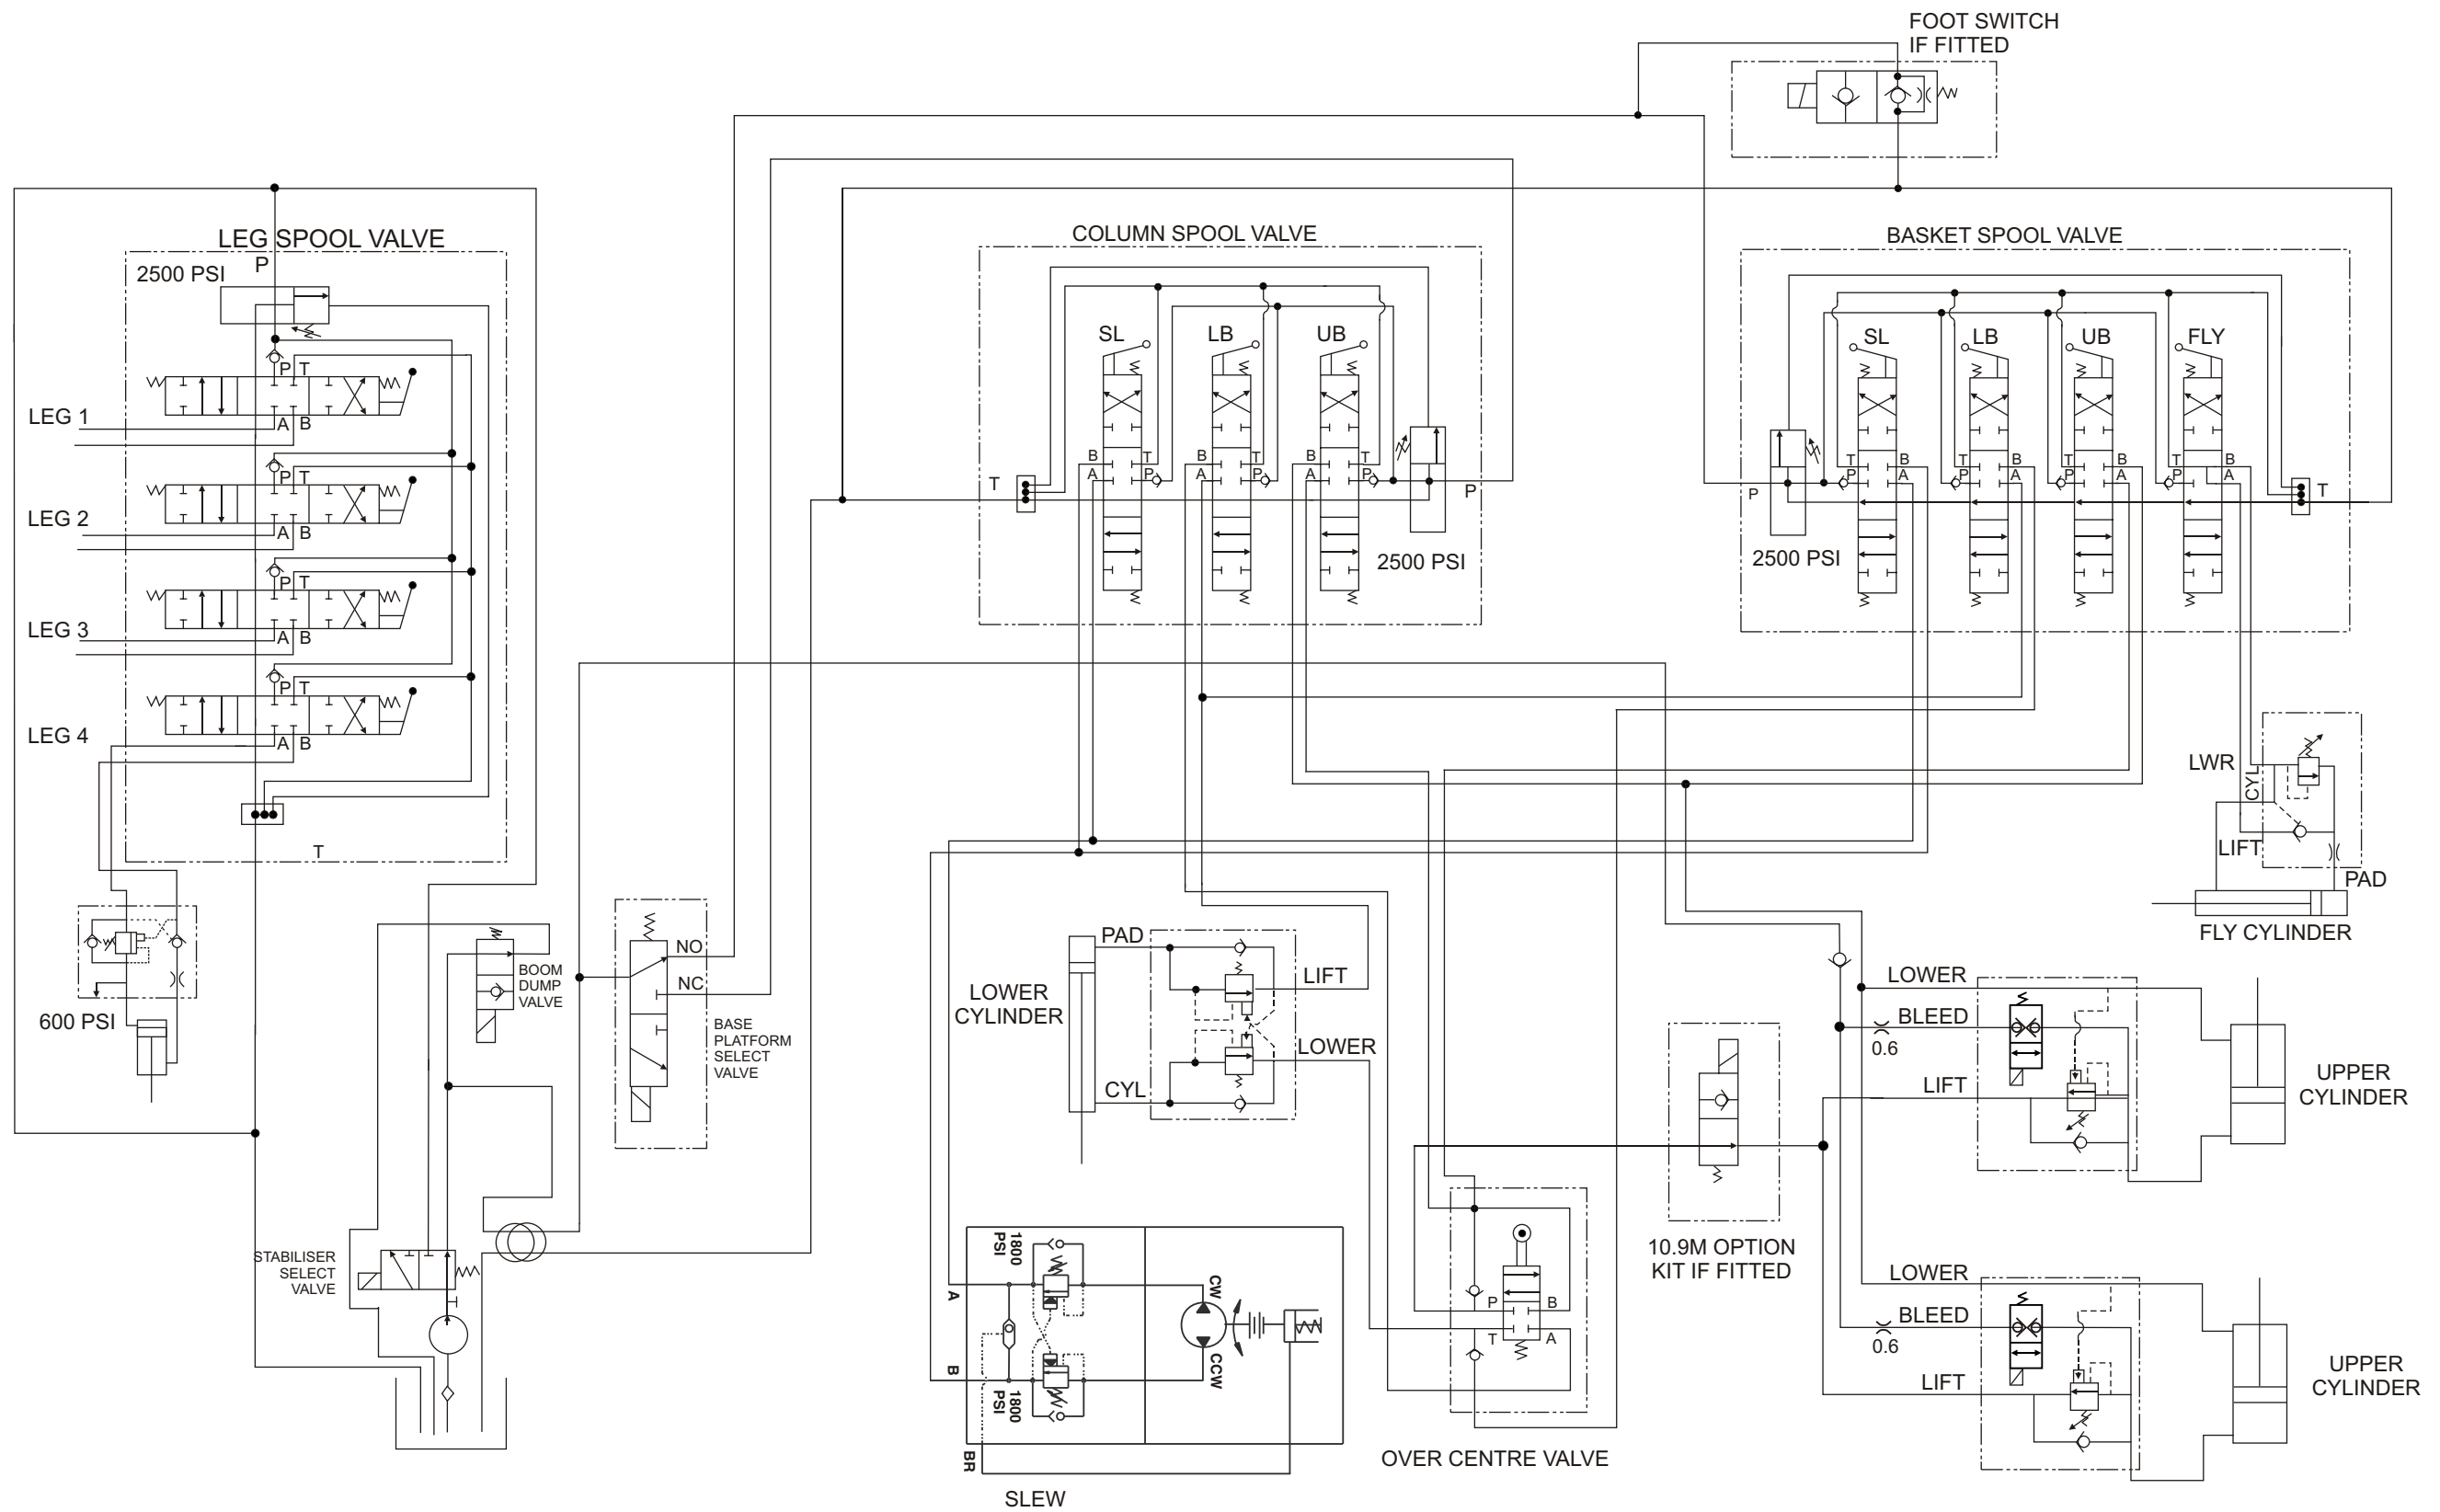

F  
E  
D  
C  
B  
A

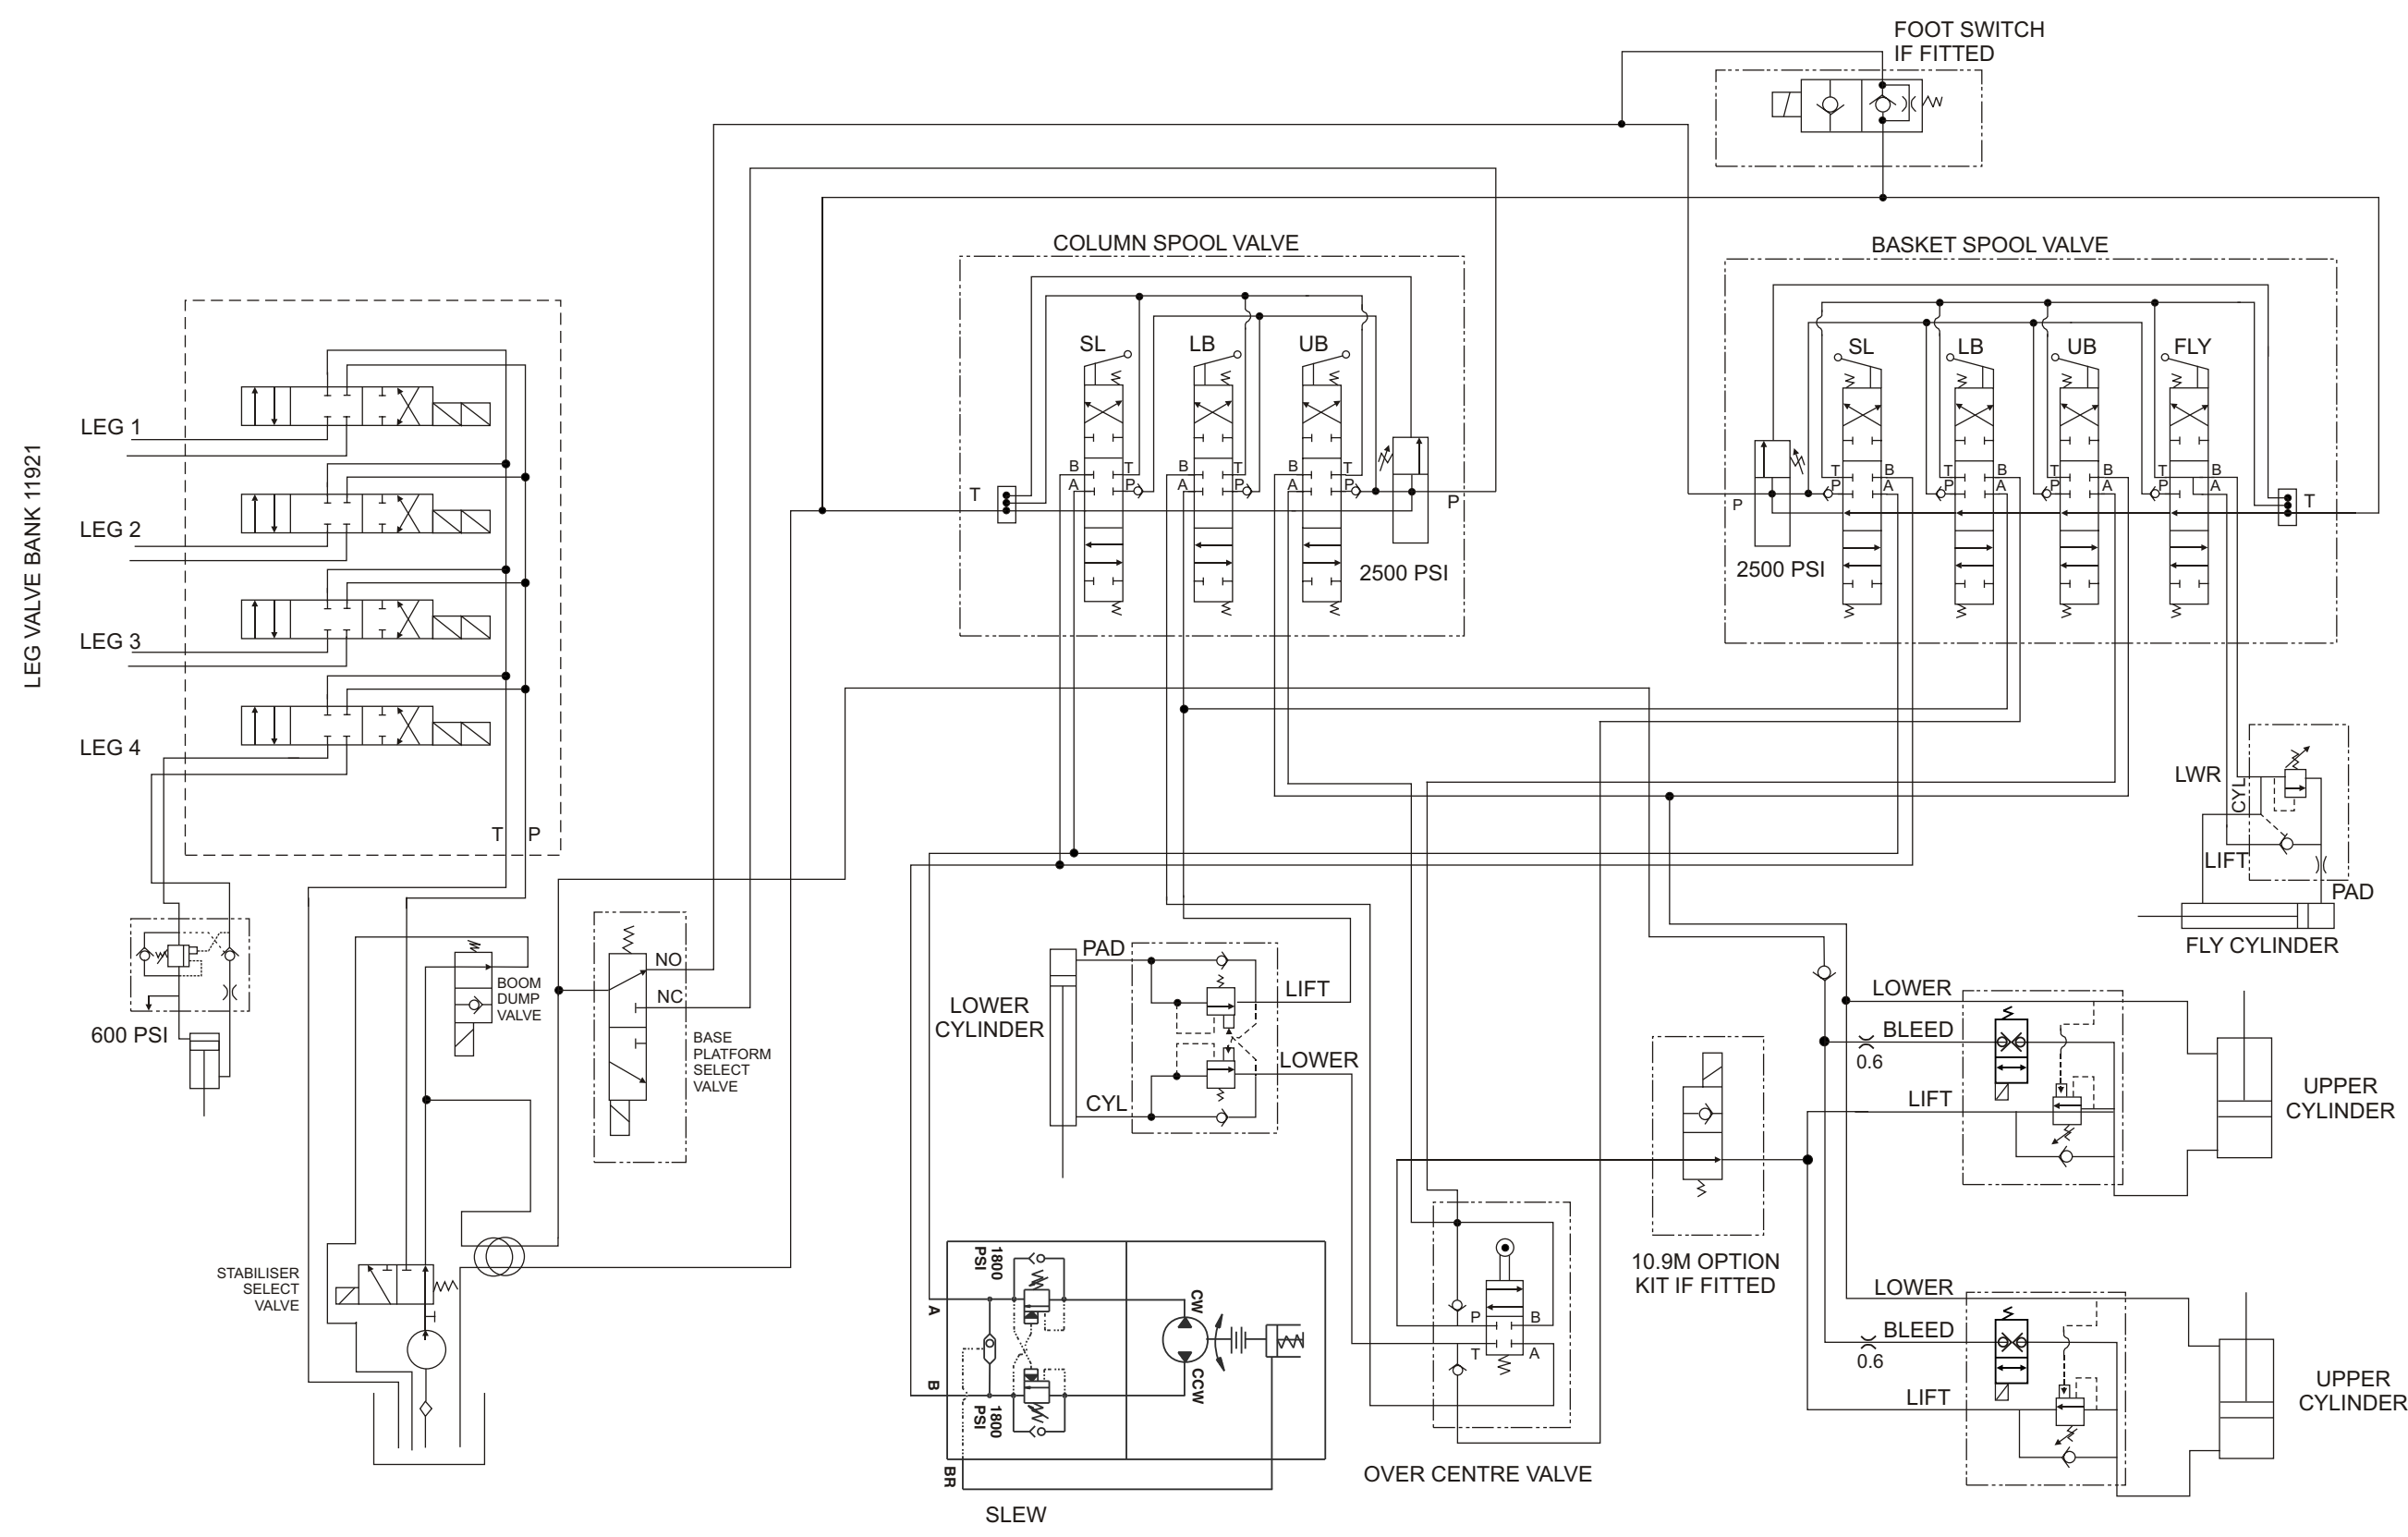


Item	Part No	Qty	Description
	12377A		Main control valve assembly
1.	11415-1P	1	Stabiliser solenoid
2.	11415-2	1	Flow compensator
3.	11415-3P	1	Main relief valve 2500 psi
4.	11415-4P	1	Solenoid emergency lower
5.	11415-5P	1	Manual emergency lower
6.	11415-6P	1	Check valve 4 psi
7.	11415-77	1	Proportional flow control
8.	11415-8P	1	Control solenoid
9.	11415-9P	1	Solenoid valve, closed centre
10.	11415-10P	4	Solenoid valve, floating centre
11.	11415-6P	1	Check valve 4 psi
12.	11415-11PS	12	Solenoid coil, 12 volt
13.	11415-12	1	Minimum flow setting orifice
14.	11415-12	1	Emergency lowering orifice
15.	10996-1	1	Test point

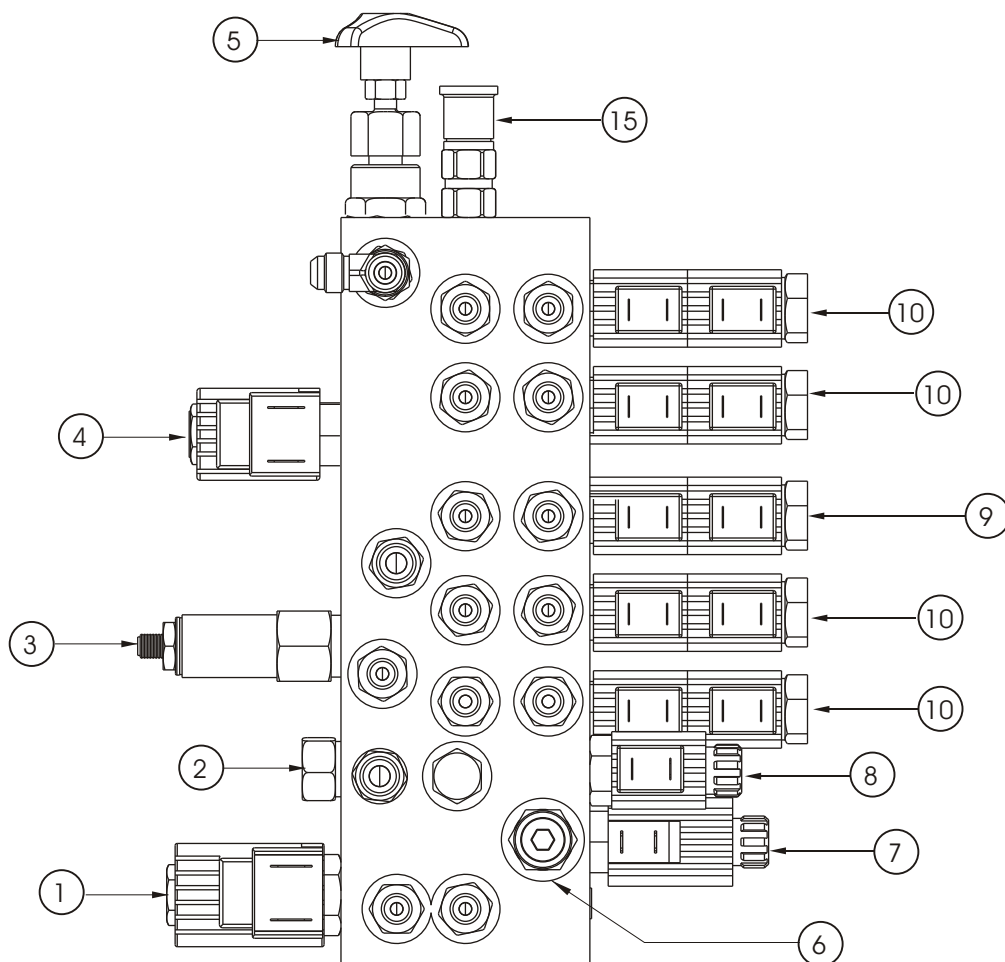


## Upper boom lift cylinder assembly

Item	Part No	Qty	Description
1.	1589	1	Lift cylinder, upper
2.	9935	1	Valve, H&L D/A
3.	3613-0804050	2	Cap screw M8 x 50
4.	506-5705	2	Fitting, hydraulic 7/16" x 9/16"
5.	11611-6	1	Fitting, ferrulok
6.	11057-1	1	Check valve, fitting
7.	9935-1	1	Counterbalance cartridge
8.	9405	1	Velocity fuse
9.	11934-6	1	Fitting, ferrulok
10.	3624-11	2	Bush, permaglide
	1589K	1	Seal kit

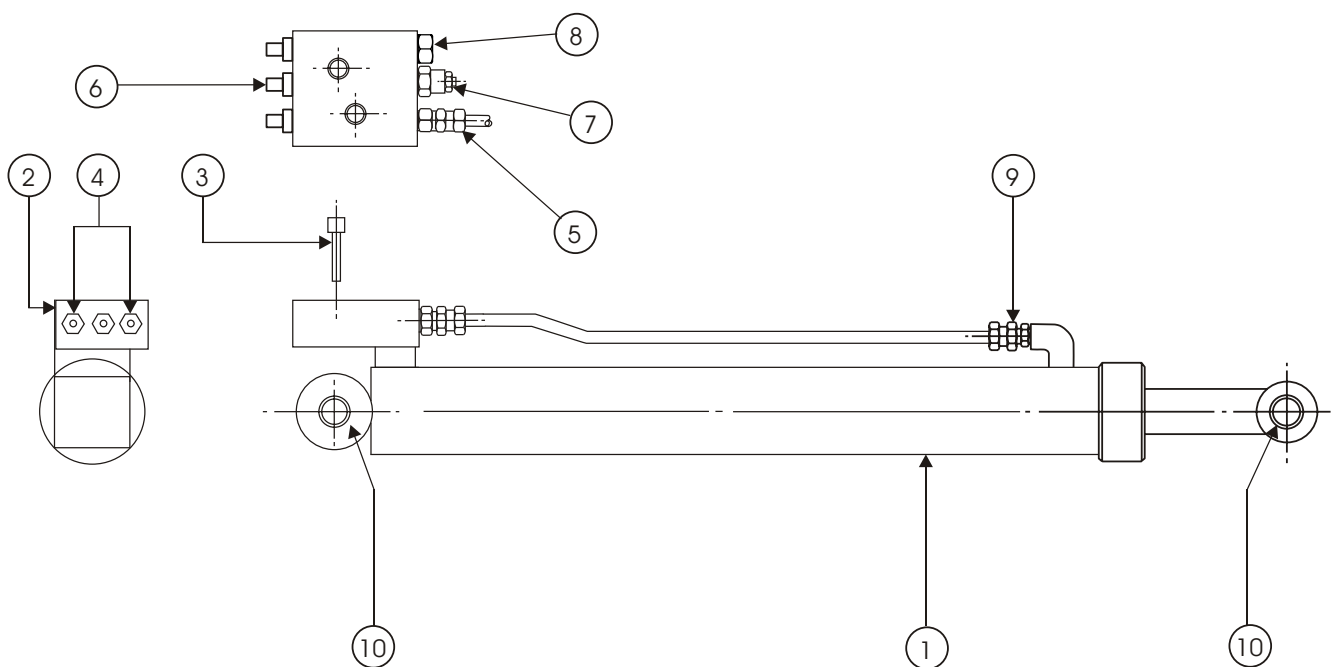


## Lower boom lift cylinder assembly

Item	Part No	Qty	Description
1.	9928	1	Lift cylinder, lower
2.	9931	1	Valve, H&L D/A
3.	3613-08040	2	Cap screw M8 x 40
4.	506-5705	2	Fitting, hydraulic 7/16" x 9/16"
5.	9401	1	Counterbalance cartridge
6.	7956	1	Counterbalance cartridge
7.	11611-6	1	Fitting, ferrulok
8.	11934-6	1	Fitting, ferrulok
9.	3624-4	4	Bush, permaglides
	9928K	1	Seal kit

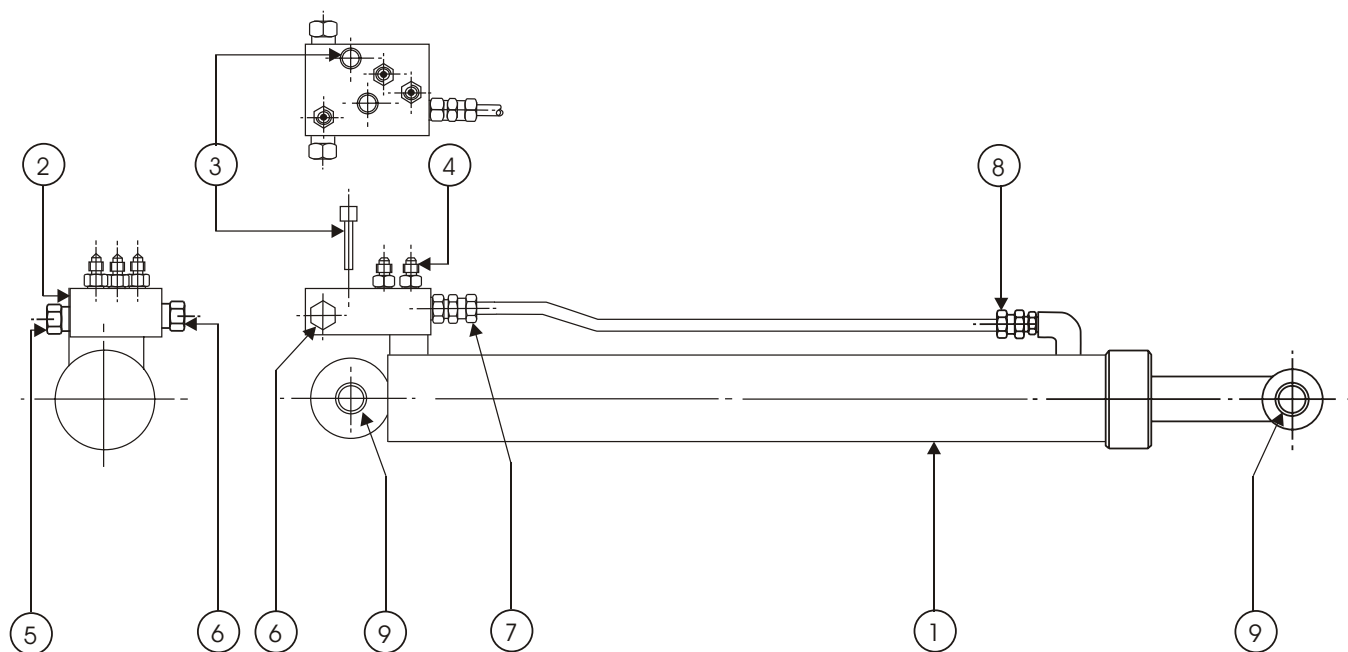

## Flyboom cylinder assembly


Item	Part No	Qty	Description
1.	12177	1	Flyboom cylinder assembly
2.	11412-1	1	Relief valve
3.	11367-2	1	Pilot check valve
	12177K	1	Seal kit

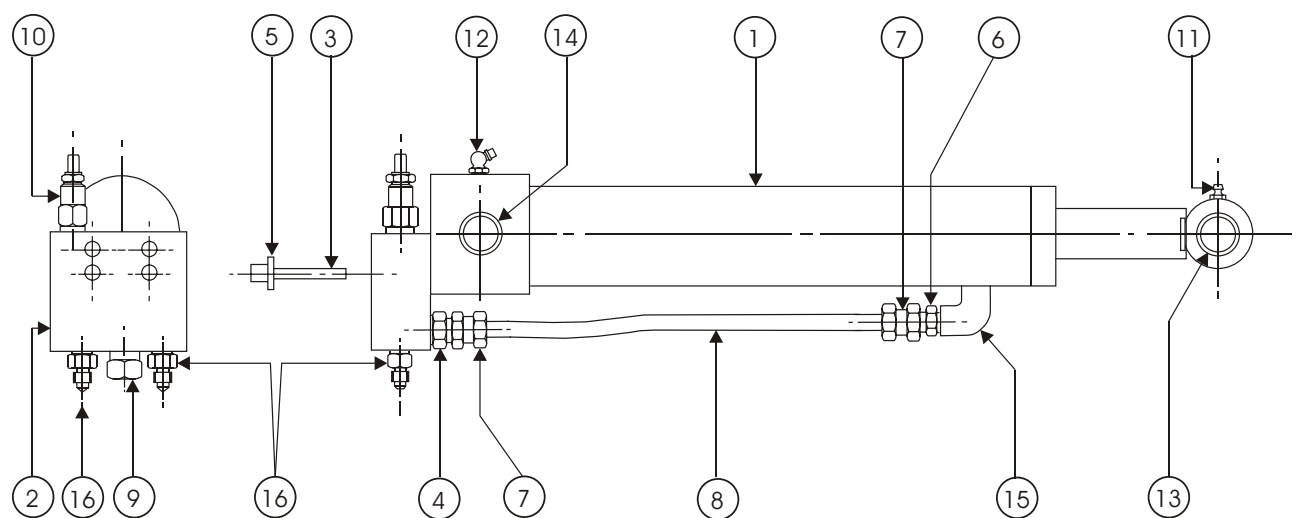




## Stabiliser leg cylinder assembly

Item	Part No	Qty	Description
1.	10275	1	Cylinder, stabiliser
2.	10286	1	H and L valve, MHP15J Leg
	13656	1	H and L valve, MHP15J Leg from MHP15HD-07-000007 onwards
3.	3613-08040	2	Cap screw M8 x 40
4.	11934-6	1	Fitting, ferrulok
5.	11611-6	1	Fitting, ferrulok
6.	9981	1	Pressure switch, set 400 psi
	9981-4	1	Pressure switch, set 400 psi from MHP15HD-07-000007 onwards
7.	3624-4	2	Bush, permaglides
8.	3624-18	2	Bush, permaglides
9.	10286-4	1	P.O. Check valve
10.	10286-3	1	Counterbalance valve
11.	7084-005	1	Dowty seal from MHP15HD-07-000007 onwards
	10275K	1	Seal kit

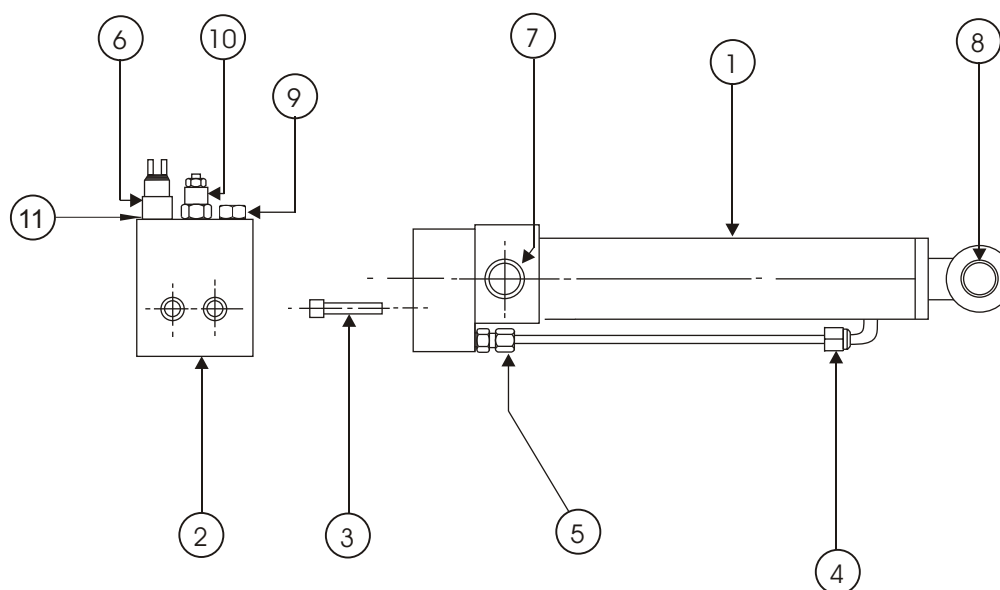


## Continuous rotation (option)

Item	Part No	Qty	Description
1.	13-228	4	O-Ring Nitrile 90 DUR
2.	3605-06	3	Spring washer
3.	3610-06016	3	Metric bolt
4.	11768-228	4	PTFE backup washer
5.	11956-1	1	Distributor 3 part pillar
6.	11956-2	1	Distributor barrel
7.	11956-3	1	Distributor cap
8.	11956-5	2	Wiper seal
	11956K	1	Seal kit (includes items 1 & 4)

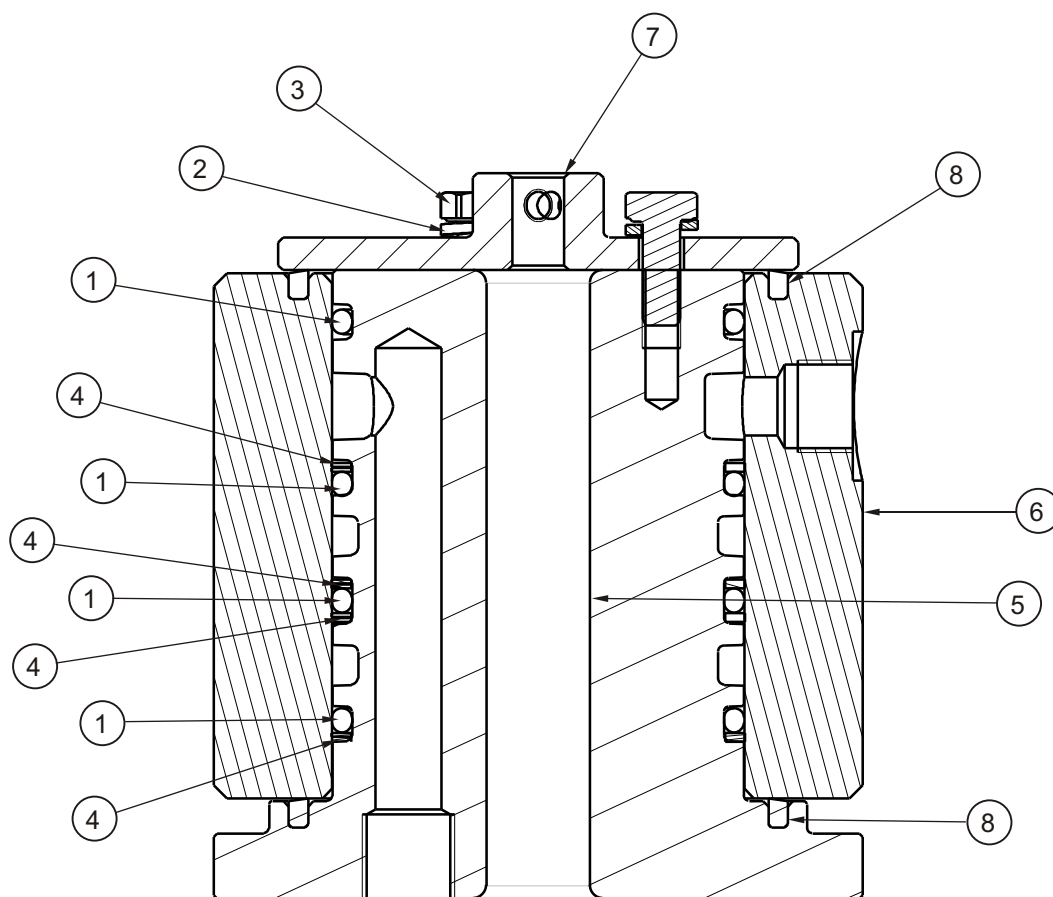


Item	Part No	Qty	Description
	11921A	Ref	Manifold block assembly
1.	11415-11	8	12V coil
2.	11415-9	4	Valve spool
3.	7034-001	1	Cavity Plug

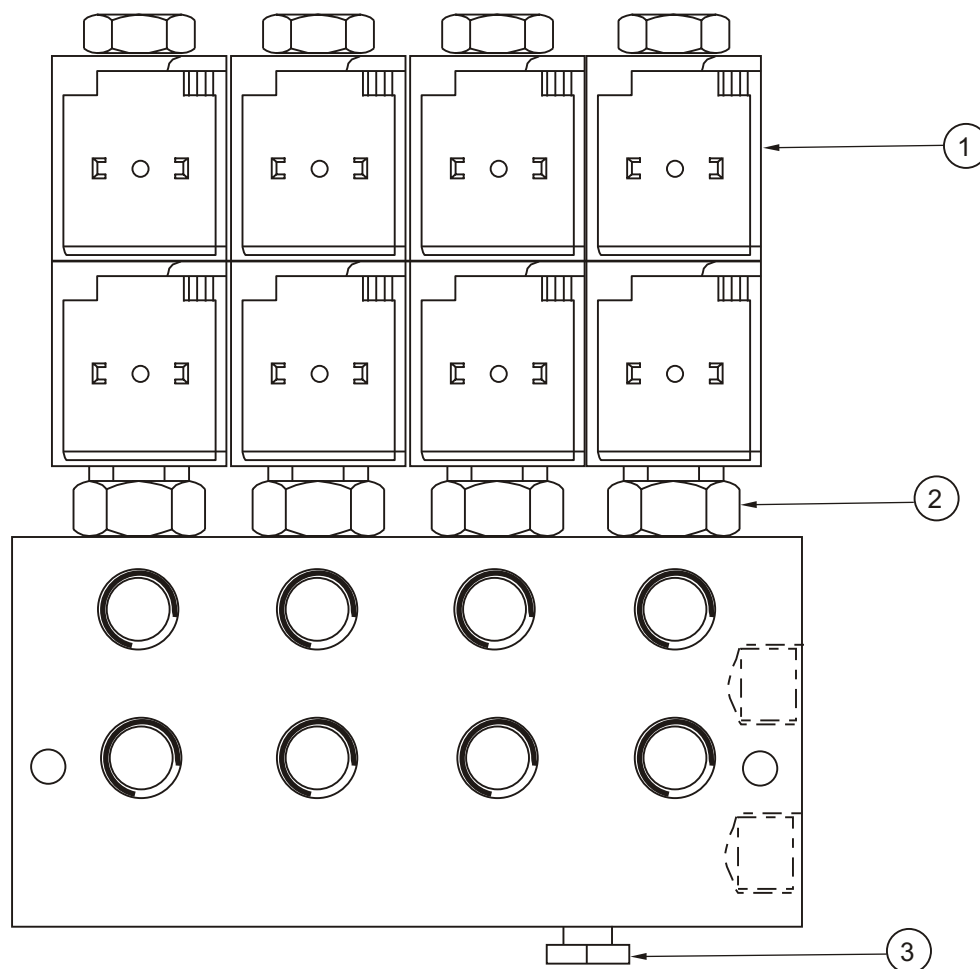





Electrical schematic standard	
Machines with electric controls . . . . .	3-3
Electrical schematic 240VAC option	
Machines with electric controls . . . . .	3-4
Electrical schematic standard	
Machines with hydraulic controls . . . . .	3-5
Upper control box assembly - electric controls . . .	3-7
Upper control box assembly - hydraulic controls . .	3-8
Lower control box assembly - electric controls . . .	3-9
Lower control box assembly - hydraulic controls .	3-10
Auto stabiliser control box assembly . . . . .	3-11
Wiring diagram for LED tail lights . . . . .	3-12

---

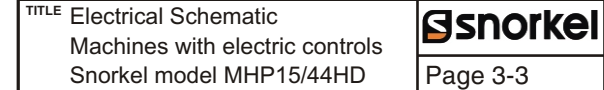

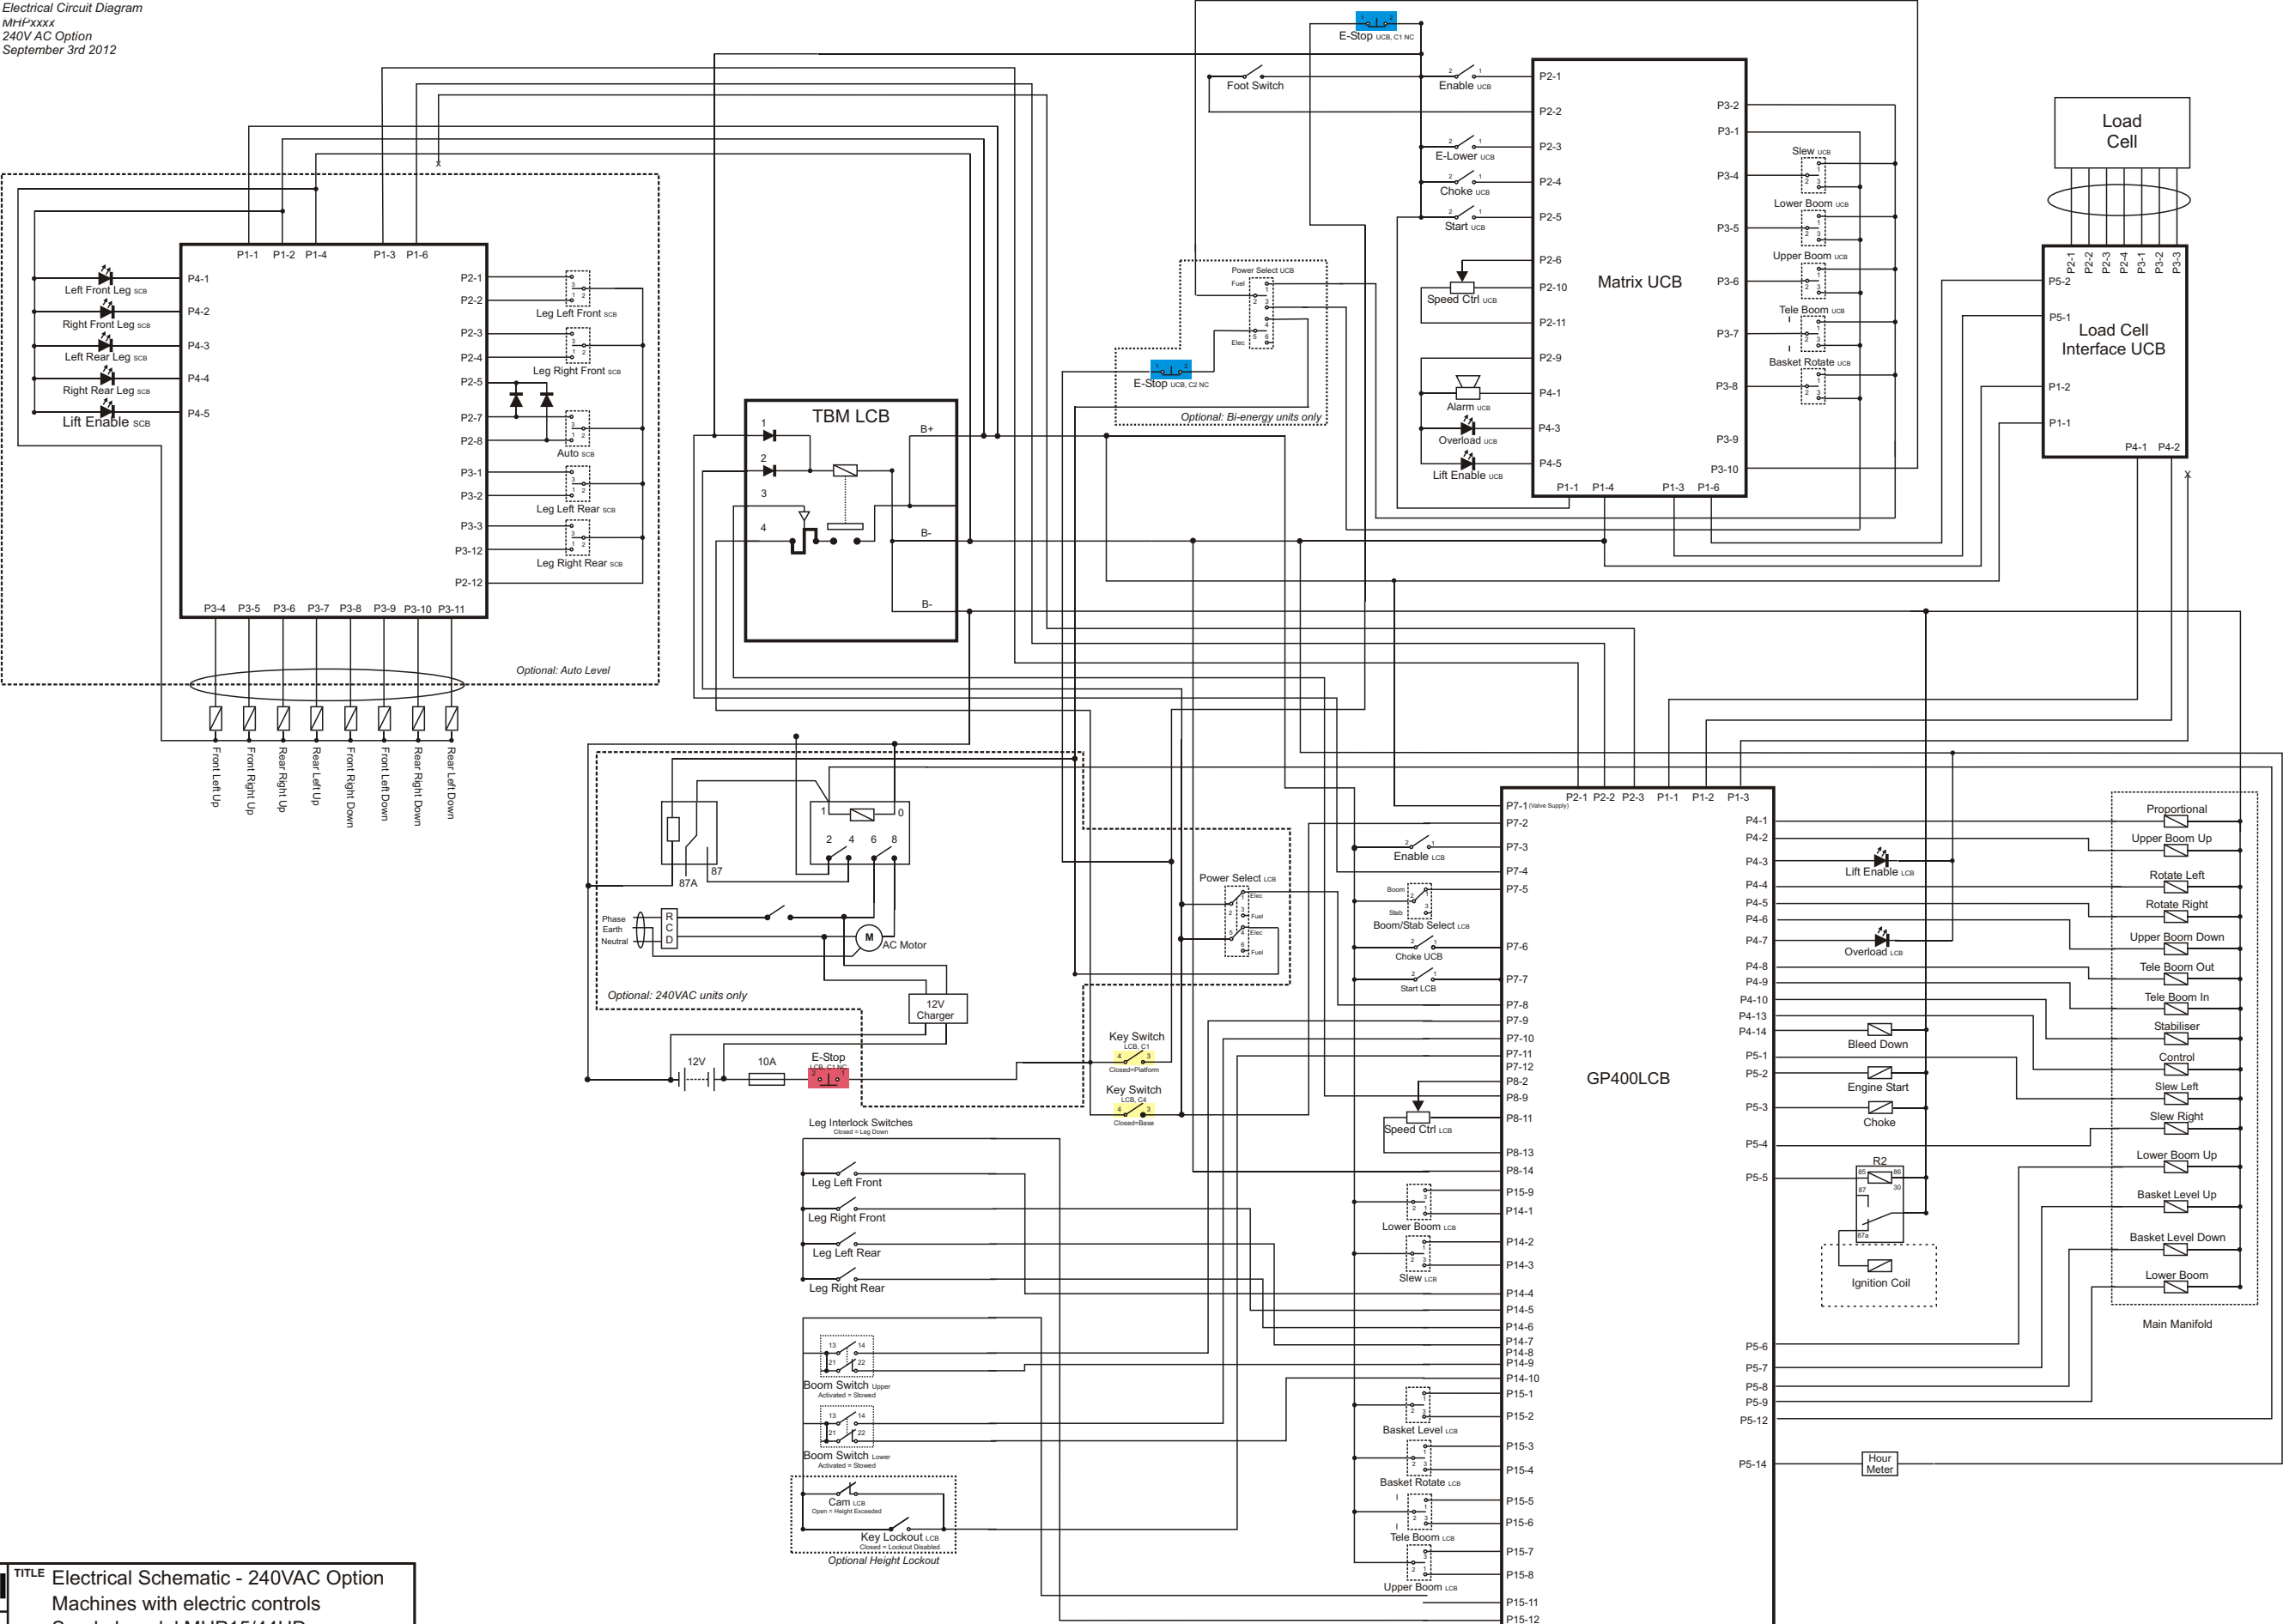




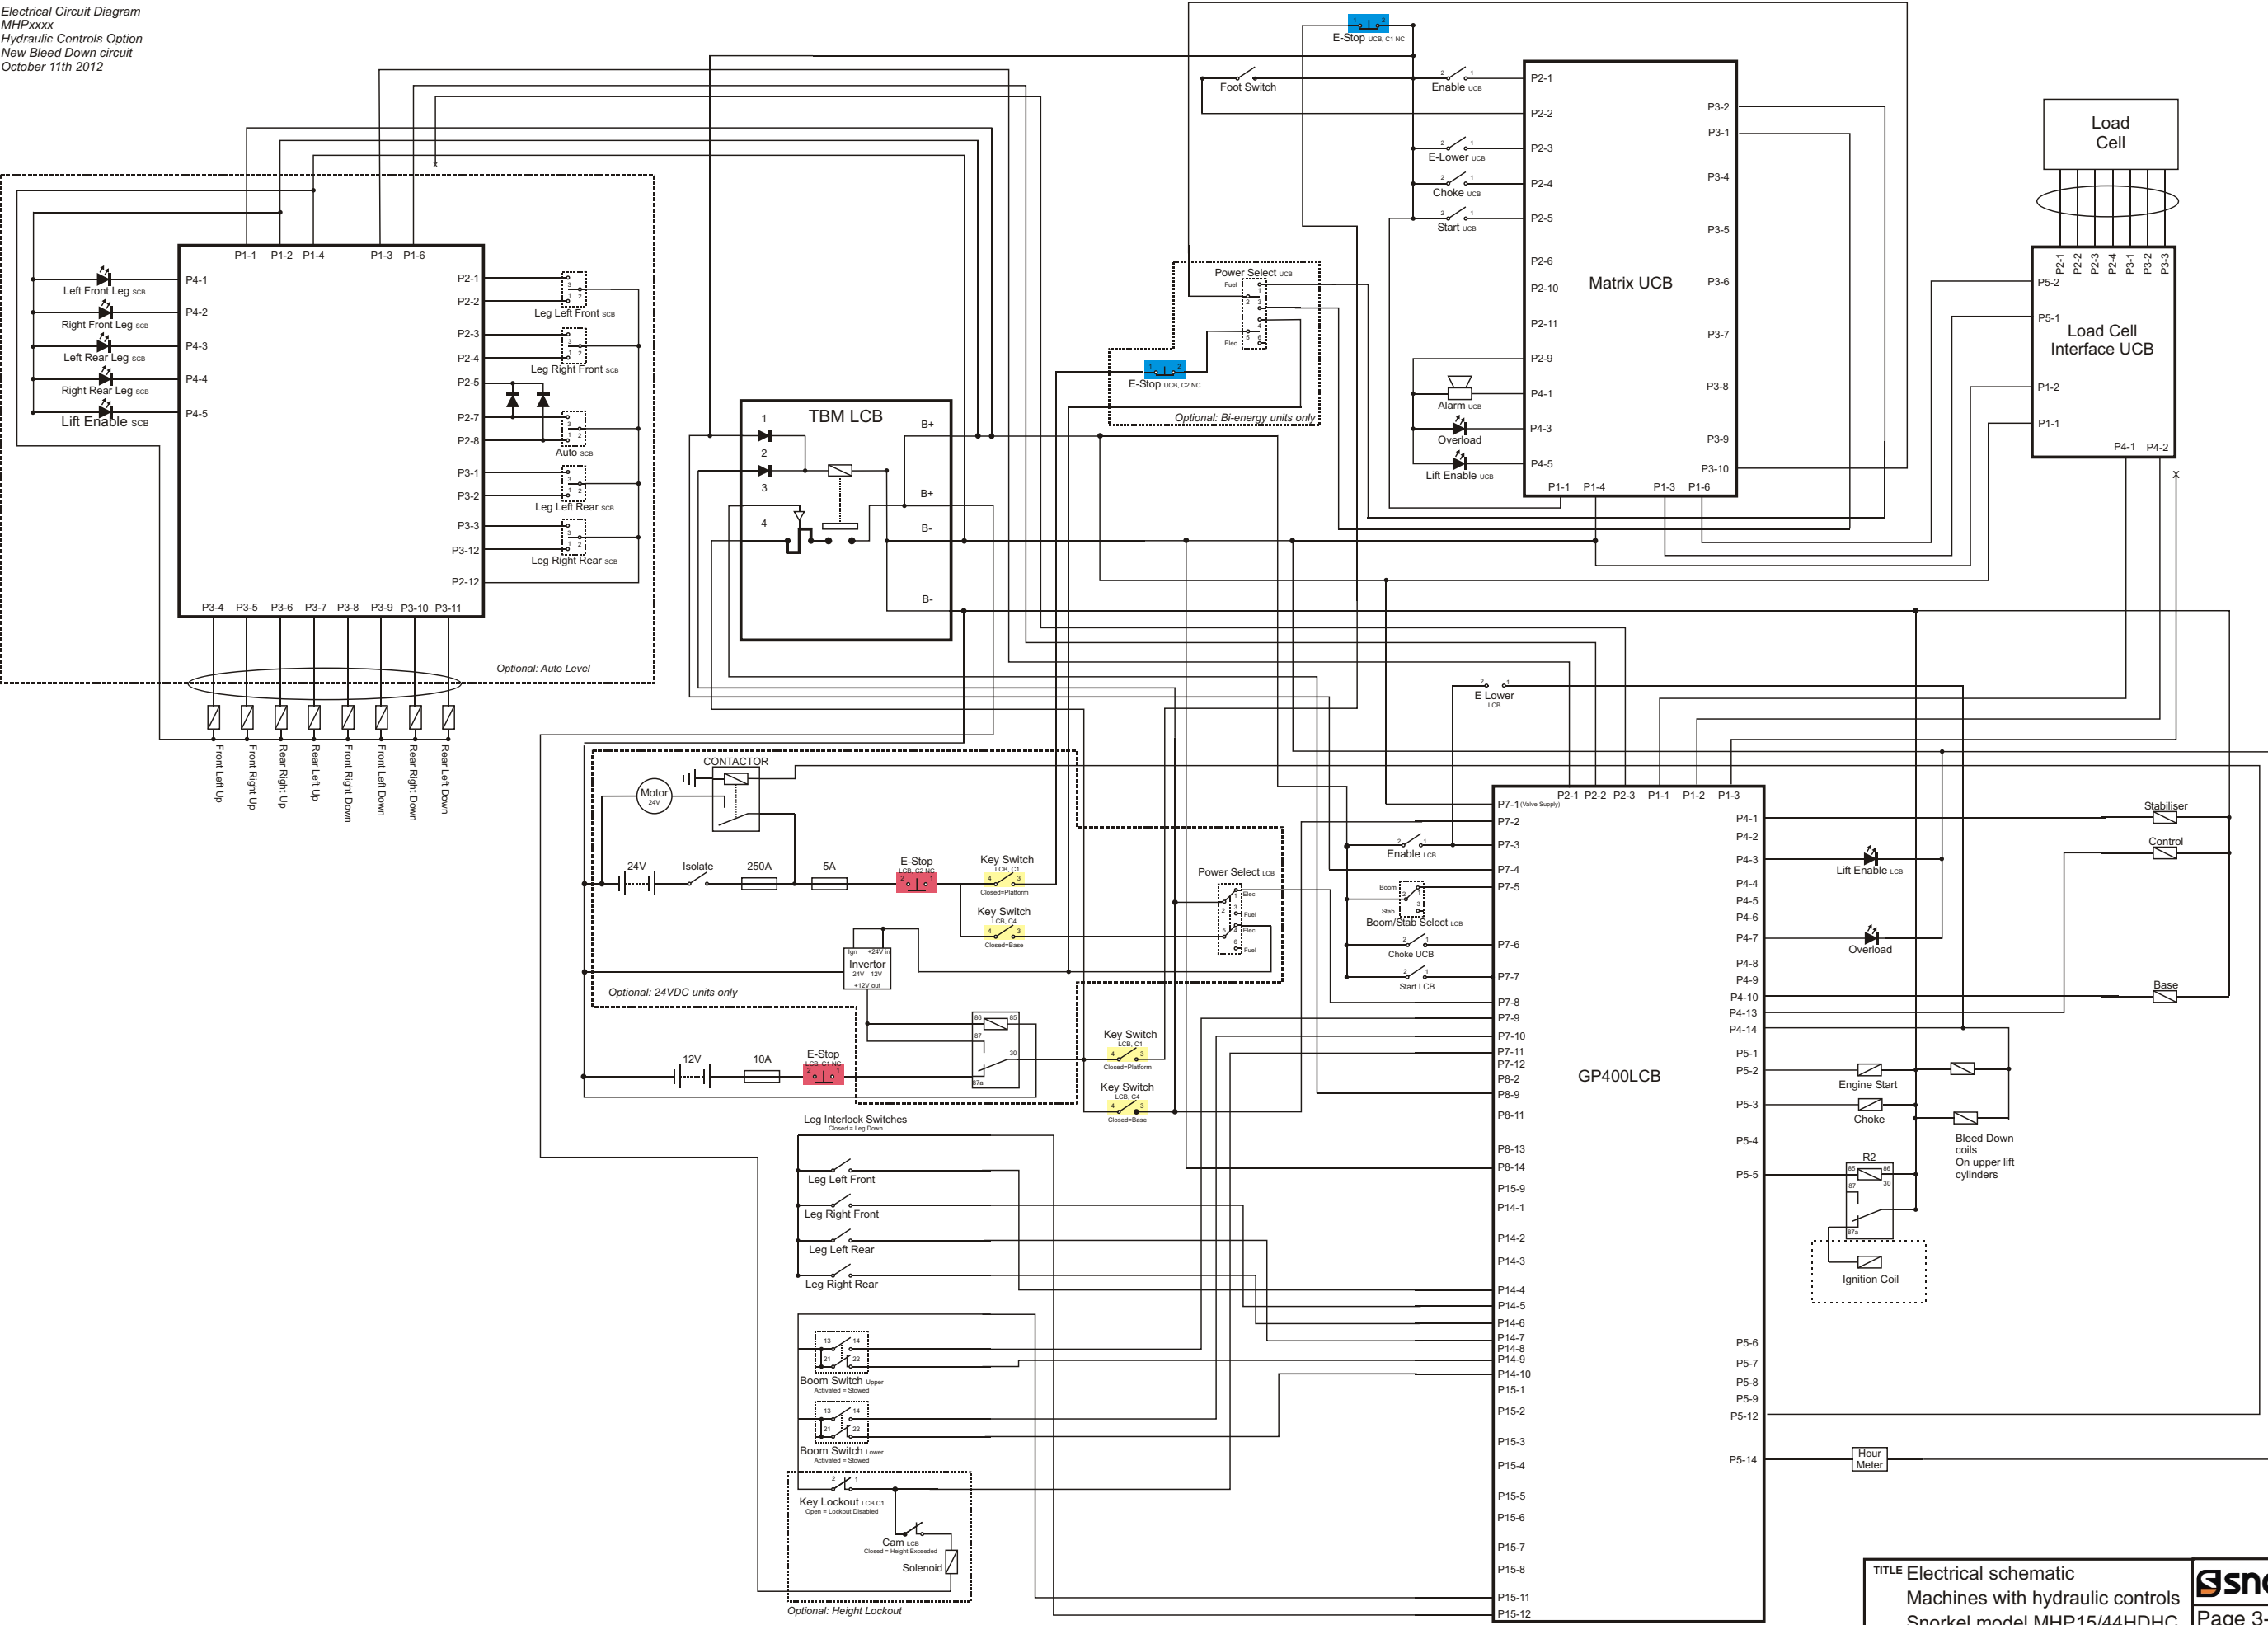




## Upper control box assembly - electric controls

Item	Part No.	Qty	Description
	13488A		Upper control box assembly
1.	13251-1	1	Control Box
2.	9775	1	Emergency stop switch, pull release
3.	13380	1	Collar
4.	10118	1	Contact, normally closed
5.	3604-05020	2	Screw, pan head, M5 x 20
6.	3605-05	2	Washer, spring, M5
7.	3603-06	2	Washer, flat, M6 x 16
8.	12536-3	1	LED, 12V, green, 10mm lens
9.	12536-4	1	LED, 12V, red, 10mm lens
10.	13489-1	1	Knob, speed control
11.	13489	1	Rheostat
12.	12516	1	Washer, M10, rubber
13.	302-0018	5	Switch, toggle, DPDT (M/OFF/M)
14.	12515	10	Washer, M12, rubber
15.	302-0097	1	Switch, toggle, DPDT (ON/ON)
16.	302-0015	3	Switch, toggle, SPST (MON/OFF)
17.	3020081	1	Switch, toggle, SPST (MON)
18.	1815-1	1	Cable gland, M32, nylon (not shown)
19.	12416	1	Hinge, (not shown)
20.	12408	1	Rubber seal, (not shown)

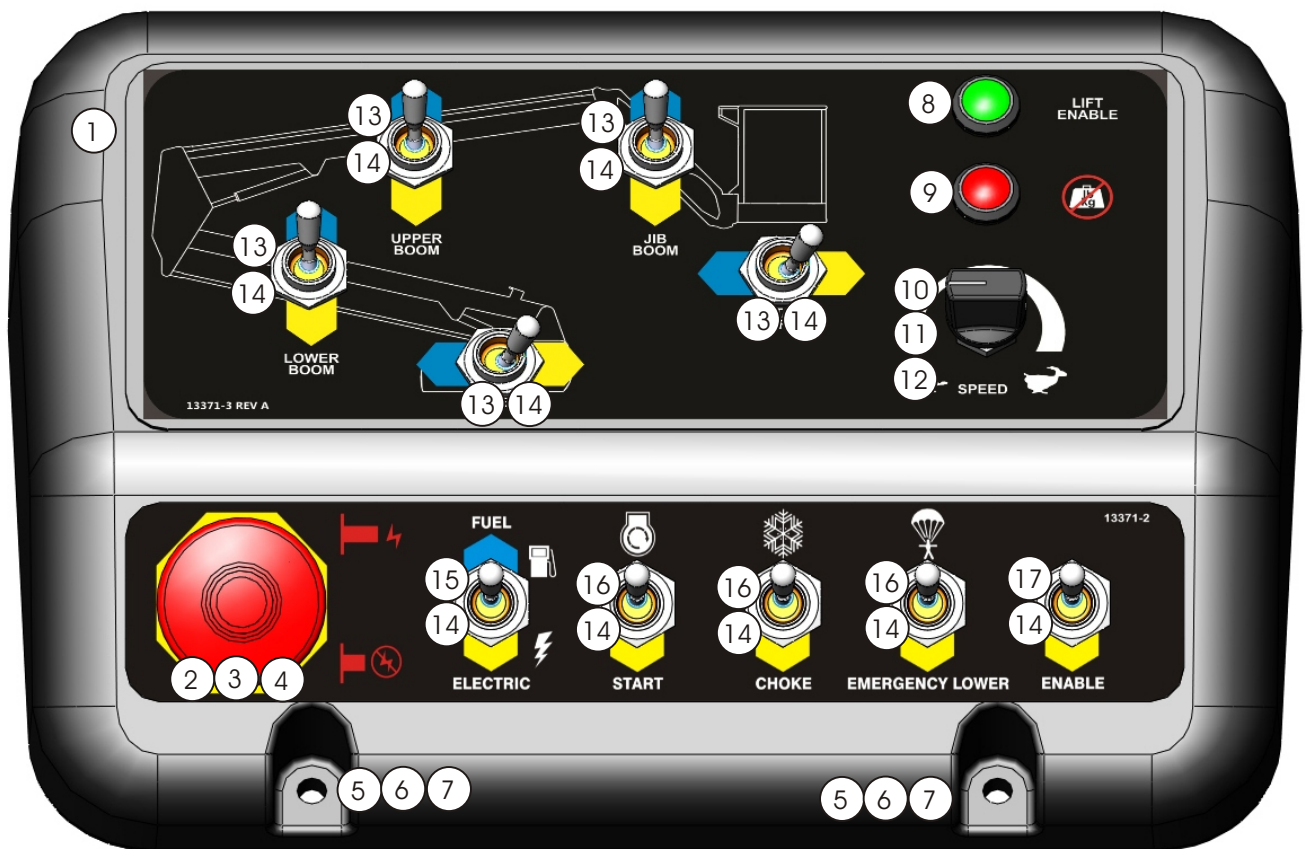


## Upper control box assembly - hydraulic controls

Item	Part No.	Qty	Description
	13586A		Upper control box assembly
1.	13586-1	1	Decal, upper control box, hydraulic controls
2.	9775	1	Emergency stop switch, pull release
3.	10118	1	Contact, normally closed
4.	13380	1	Collar
5.	12536-3	1	LED, 12V, green, 10mm lens
6.	12536-4	1	LED, 12V, red, 10mm lens
7.	3020097	1	Switch, toggle, (ON/OFF)
8.	12515	1	Washer, M12, rubber
9.	302-0015	2	Switch, toggle, SPST, (MON/OFF)
10.	304-0411	1	Alarm buzzer

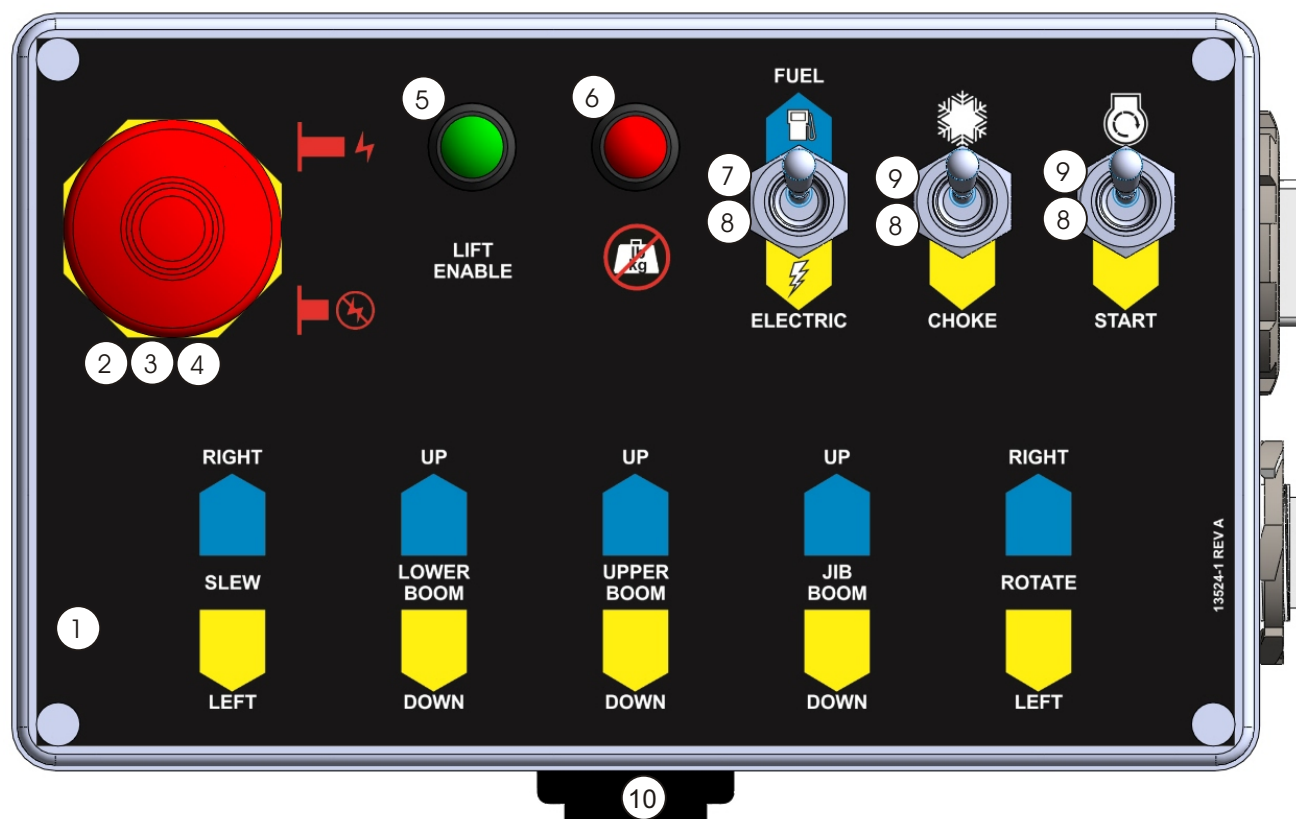


## Lower control box assembly - electric controls

Item	Part No.	Qty	Description
	13573A	1	Lower control box assembly
1.	12521-1	1	Control box, lower
2.	12536-4	1	LED, 12V, red
3.	13489-1	1	Knob, speed control switch
4.	1814	3	Cable gland (not shown)
5.	1815	1	Cable gland (not shown)
6.	9775	1	Stop switch head
7.	10744	1	Key switch
8.	455186	1	Hourmeter
9.	12536-3	1	LED, 12V, green
10.	13456	1	Key switch
11.	13489	1	Rheostat
12.	9776	2	Collar and contact block
13.	302-0018	4	Switch,toggle, DPDT (M/OFF/M)
14.	302-0015	2	Switch, toggle, SPST (MOM/OFF)
15.	302-0018	1	Switch, toggle, SPST (MON)
16.	302-0097	2	Switch, toggle, DPDT (ON/ON)
17.	13573-02	1	Decal, lower control box
18.	12515	9	Washer, M12, rubber
19.	12516	1	Washer, M10, rubber

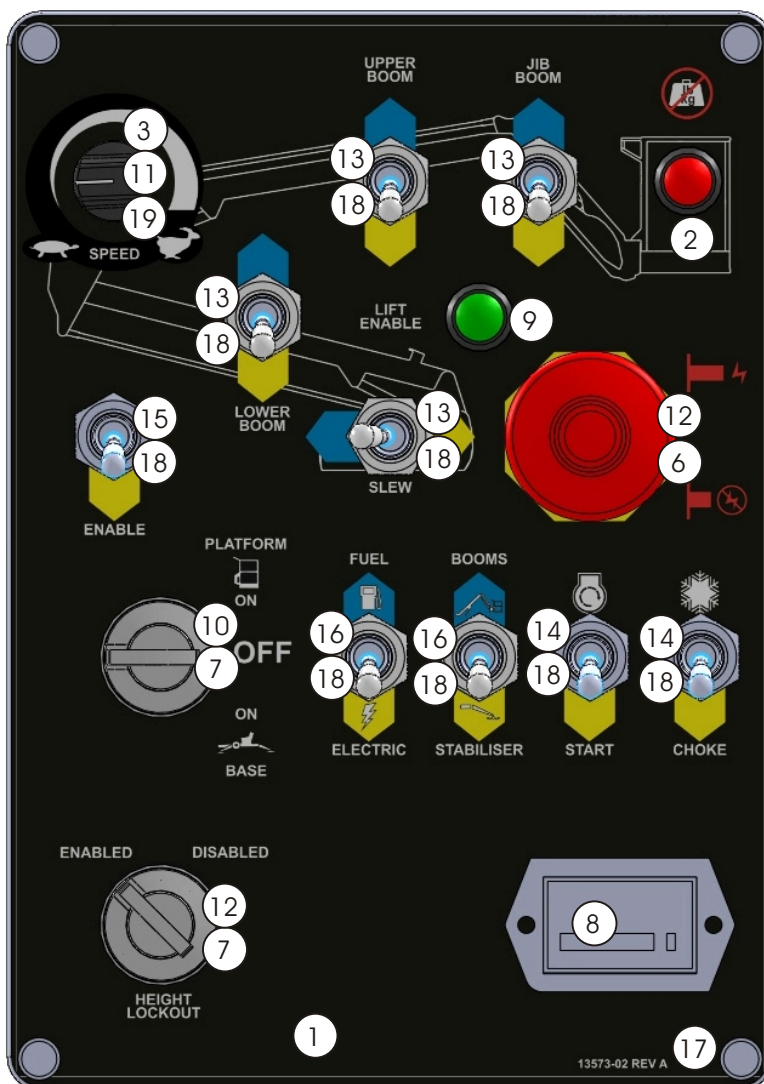


## Lower control box assembly - hydraulic controls


Item	Part No.	Qty	Description
	13540A	1	Lower control box assembly
1.	12521	1	Control box, lower
2.	12536-4	1	LED, 12V, red
3.	302-0018	1	Switch, toggle, SPST (MOM)
4.	9776	2	Collar and contact block
5.	302-0097	2	Switch, toggle, DPDT (ON/ON)
6.	9775	1	Stop switch head
7.	10744	1	Key switch
8.	455186	1	Hourmeter
9.	12536-3	1	LED, 12V, green
10.	13456	1	Key switch
11.	302-0015	1	Switch, toggle, SPST (MON/OFF)
12.	12515	5	Washer, M12, rubber
13.	13540-1	1	Decal, lower control box

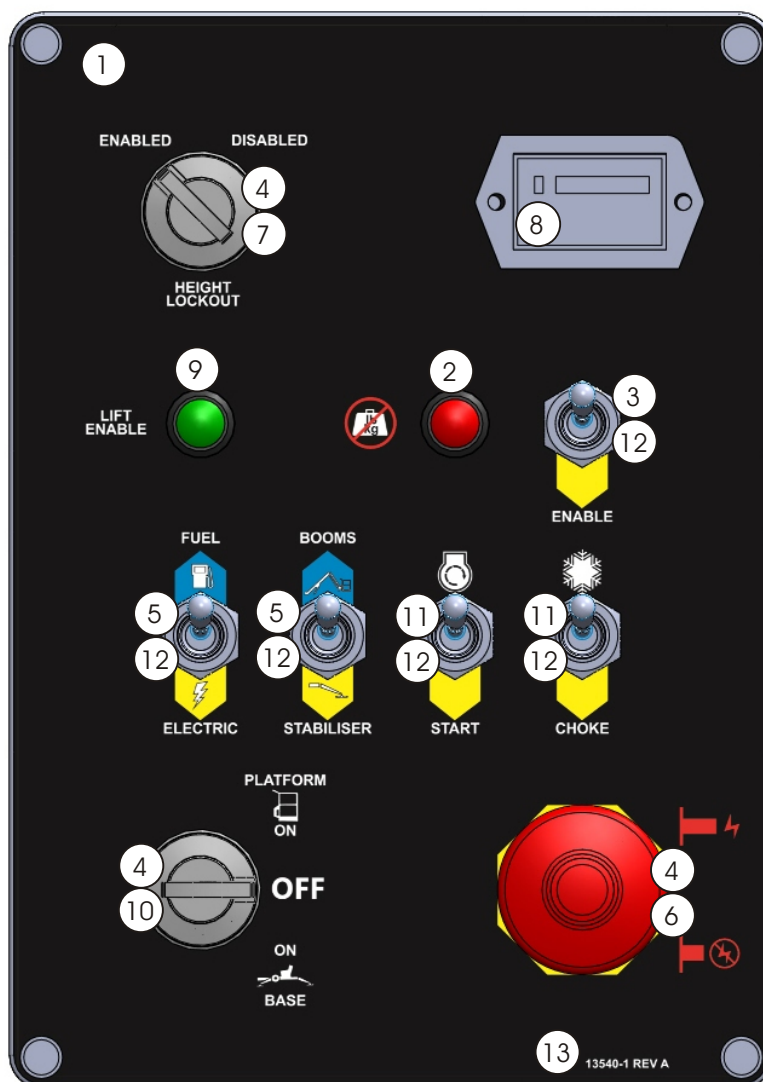

Item	Part No.	Qty	Description
	13581	1	Control box assembly, auto stabiliser
1.	12404	1	Control box
2.	302-0018	5	Switch, toggle, DPDT (M/OFF/M)
3.	12536-3	5	LED, 12V green
4.	3604-05020	2	Screw, pan head M5 x 20 ZP
5.	3605-05	2	Washer, spring, M5, ZP
6.	3603-06	2	Washer, flat, M6 x 16 ZP
7.	12515	6	Washer, M12, rubber
8.	302-0097	1	Switch, toggle, DPDT, (ON/ON)
9.	1815-1	1	Cable gland, M32, nylon, (not shown)
10.	12416	1	Hinge, (not shown)
11.	12408	1	Rubber seal, (not shown)

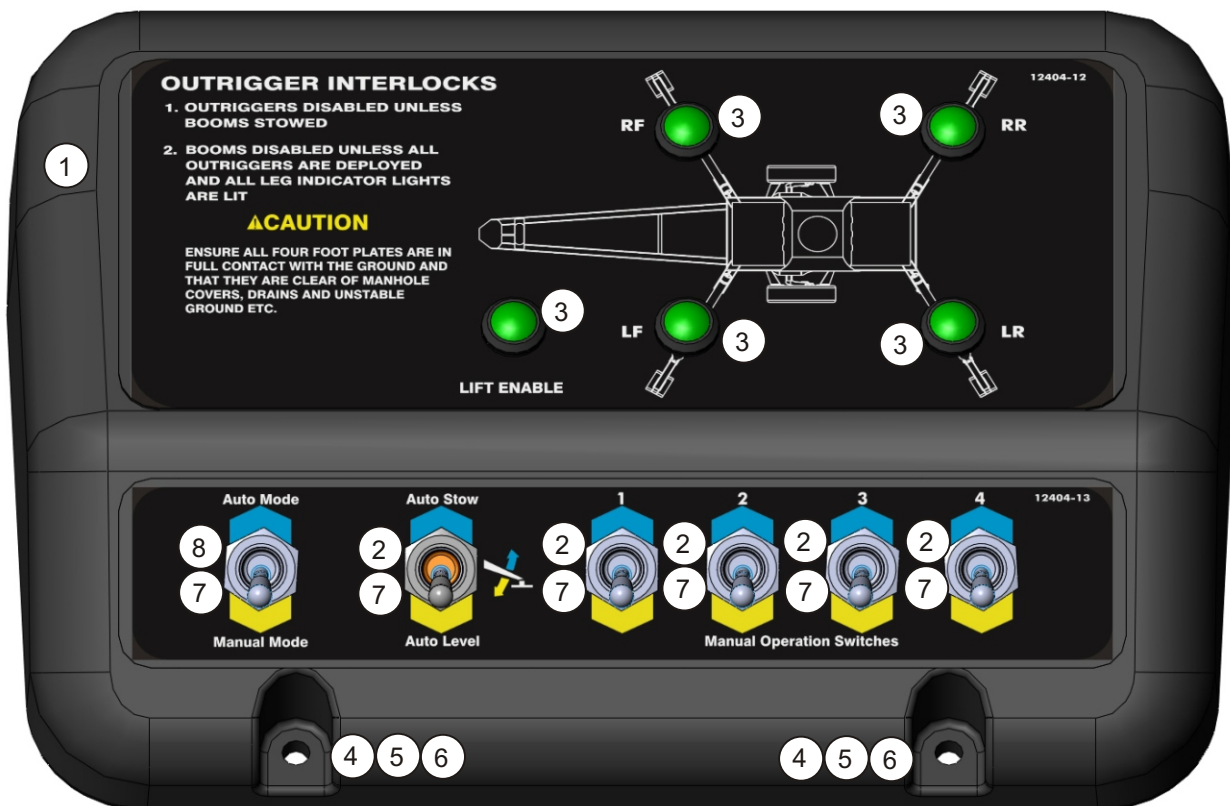

## Wiring diagram for LED tail lights

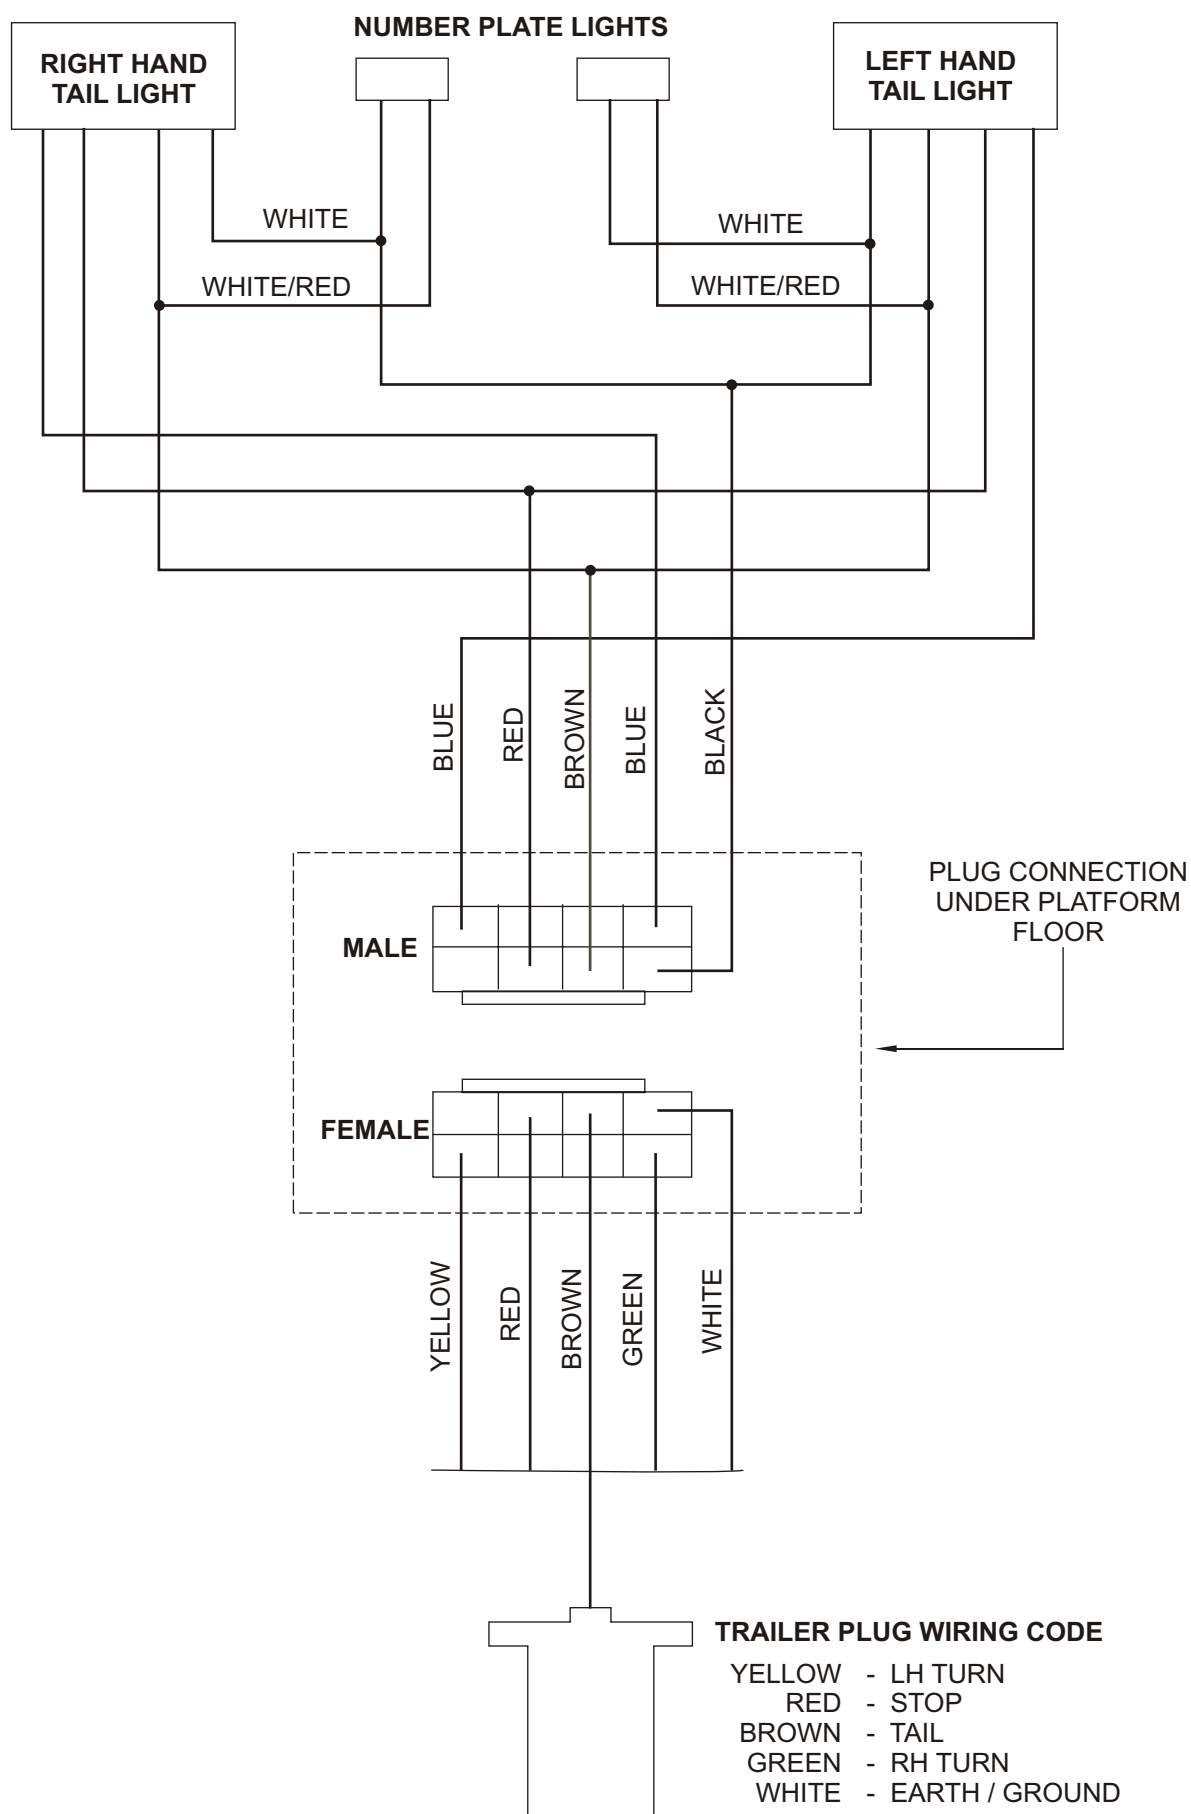




Engine assembly, Lombardini (Sheet 1) . . . . .	4-2
Engine assembly, Lombardini (Sheet 2) . . . . .	4-3
Basket rotator (Sheet 1) . . . . .	4-4
Basket rotator (Sheet 2) . . . . .	4-5
Continuous rotation option (sheet 1) . . . . .	4-6
Continuous rotation option (sheet 2) . . . . .	4-7
Spare wheel mount . . . . .	4-8

## Engine assembly, Lombardini (Sheet 1)

Item	Part No	Qty	Description
0.	12449		Engine assembly
1.	1171-8	1	Lombardini 15LD315 diesel engine
2.	1650-030	1	Battery cable
3.	1650-031	1	Battery cable
4.	1657-11	1	Drive coupling
5.	1659	1	Gear pump
6.	3603-05	16	Plain washer
7.	3603-08	2	Plain washer
8.	3603-10	3	Plain washer
9.	3605-06	4	Spring washer
10.	3610-05016	8	Metric bolt
11.	3610-06030	4	Metric bolt
12.	3610-08020	1	Metric bolt
13.	3610-08025	4	Metric bolt
14.	3610-10045	3	Metric bolt
15.	3610-10050	1	Metric bolt
16.	3610-10055	1	Metric bolt
17.	3610-10060	3	Metric bolt
18.	3611-05	8	Nyloc nut
19.	3611-08	1	Nyloc nut
20.	3611-10	7	Nyloc nut
21.	3612-06006	2	Grub screw
22.	3649-10	1	Battery cable
23.	7013-003	1	BSPP (Dowty) x JICM nipple
24.	7013-004	1	BSPP (Dowty) x JICM nipple
25.	10254	1	Cover, battery terminal
26.	10417	1	Bell housing
27.	12409	1	Exhaust clamp
28.	12450	1	Exhaust weld, Lombardini
29.	12524	4	Engine mount
30.	12526	1	Engine mount plate
31.	60005-054	4	Lockwasher
32.	60030-061	8	Washer, heavy duty
33.	5560179	4	Flat washer, special

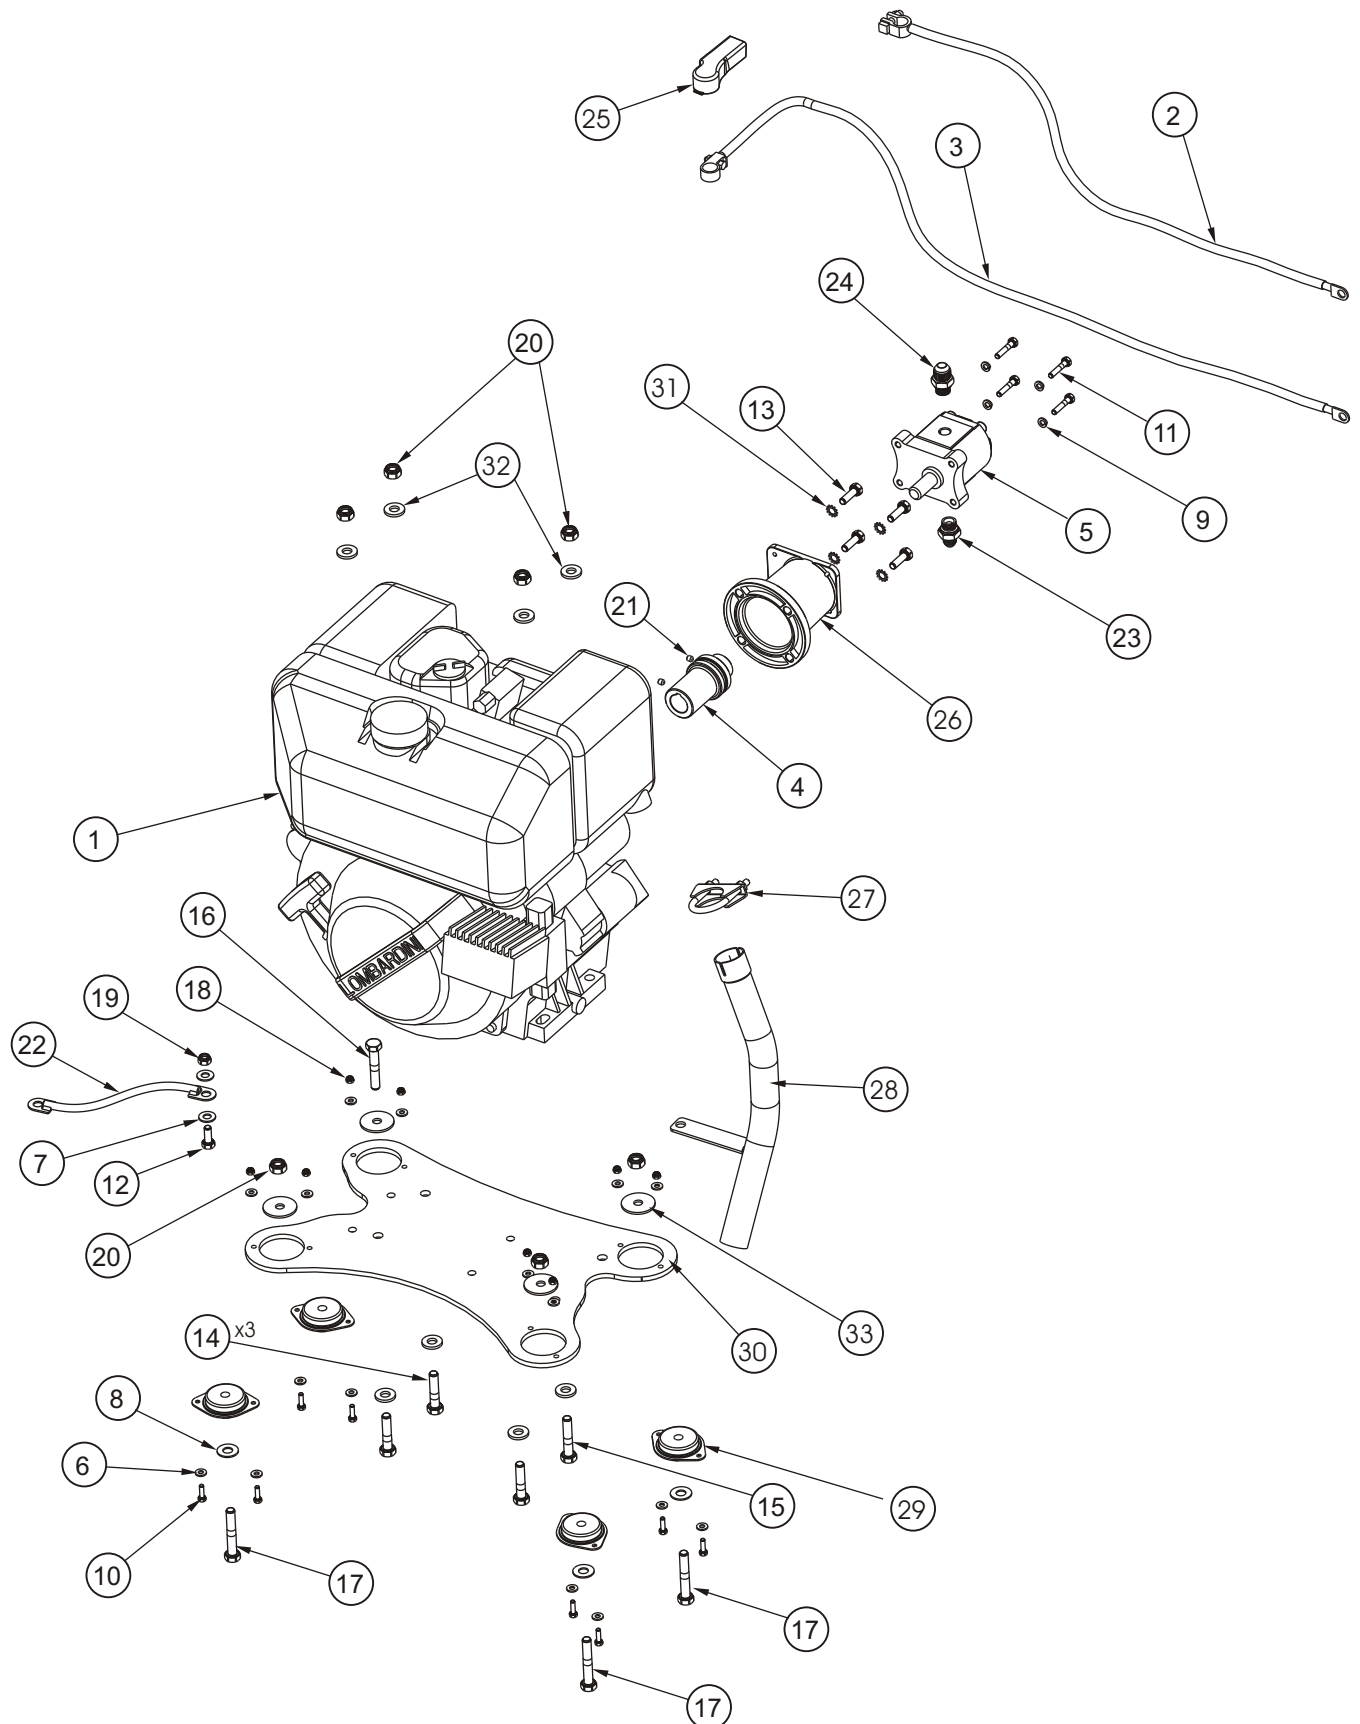


## Basket rotator (Sheet 1)

---

Item	Part No	Qty	Description
0.			Basket rotator assembly
1.	3603-16	2	Washer, plain
2.	3608-16C	2	
3.	3610-10020	2	Bolt, metric
4.	3626-13	2	Permaglide bush, flanged
5.	3626-5	2	Permaglide bush, flanged
6.	8626	2	Pin keeper
7.	9790	1	
8.	11492-3	2	Washer, tab
9.	12880	1	
10.	13563-1	1	Rotator half, jib
11.	13563-2	1	Rotator half, basket
12.	13570	1	Pin, 25 x 176, stepped pin
13.	12330A	1	Basket assembly
14.	13484A	1	Basket assembly
15.	9859		Pin
16.	8628		Pin keeper
17.	11492-1		Washer, tab
18.	13497		Basket bottom mount
19.	3610-06020		Bolt, metric
20.	3617-16035		Bolt, metric
21.	3631-16		Washer, nord lock
22.	13468		Load cell
23.	3624-3		Bush, permaglide


F  
E  
D  
C  
B  
A

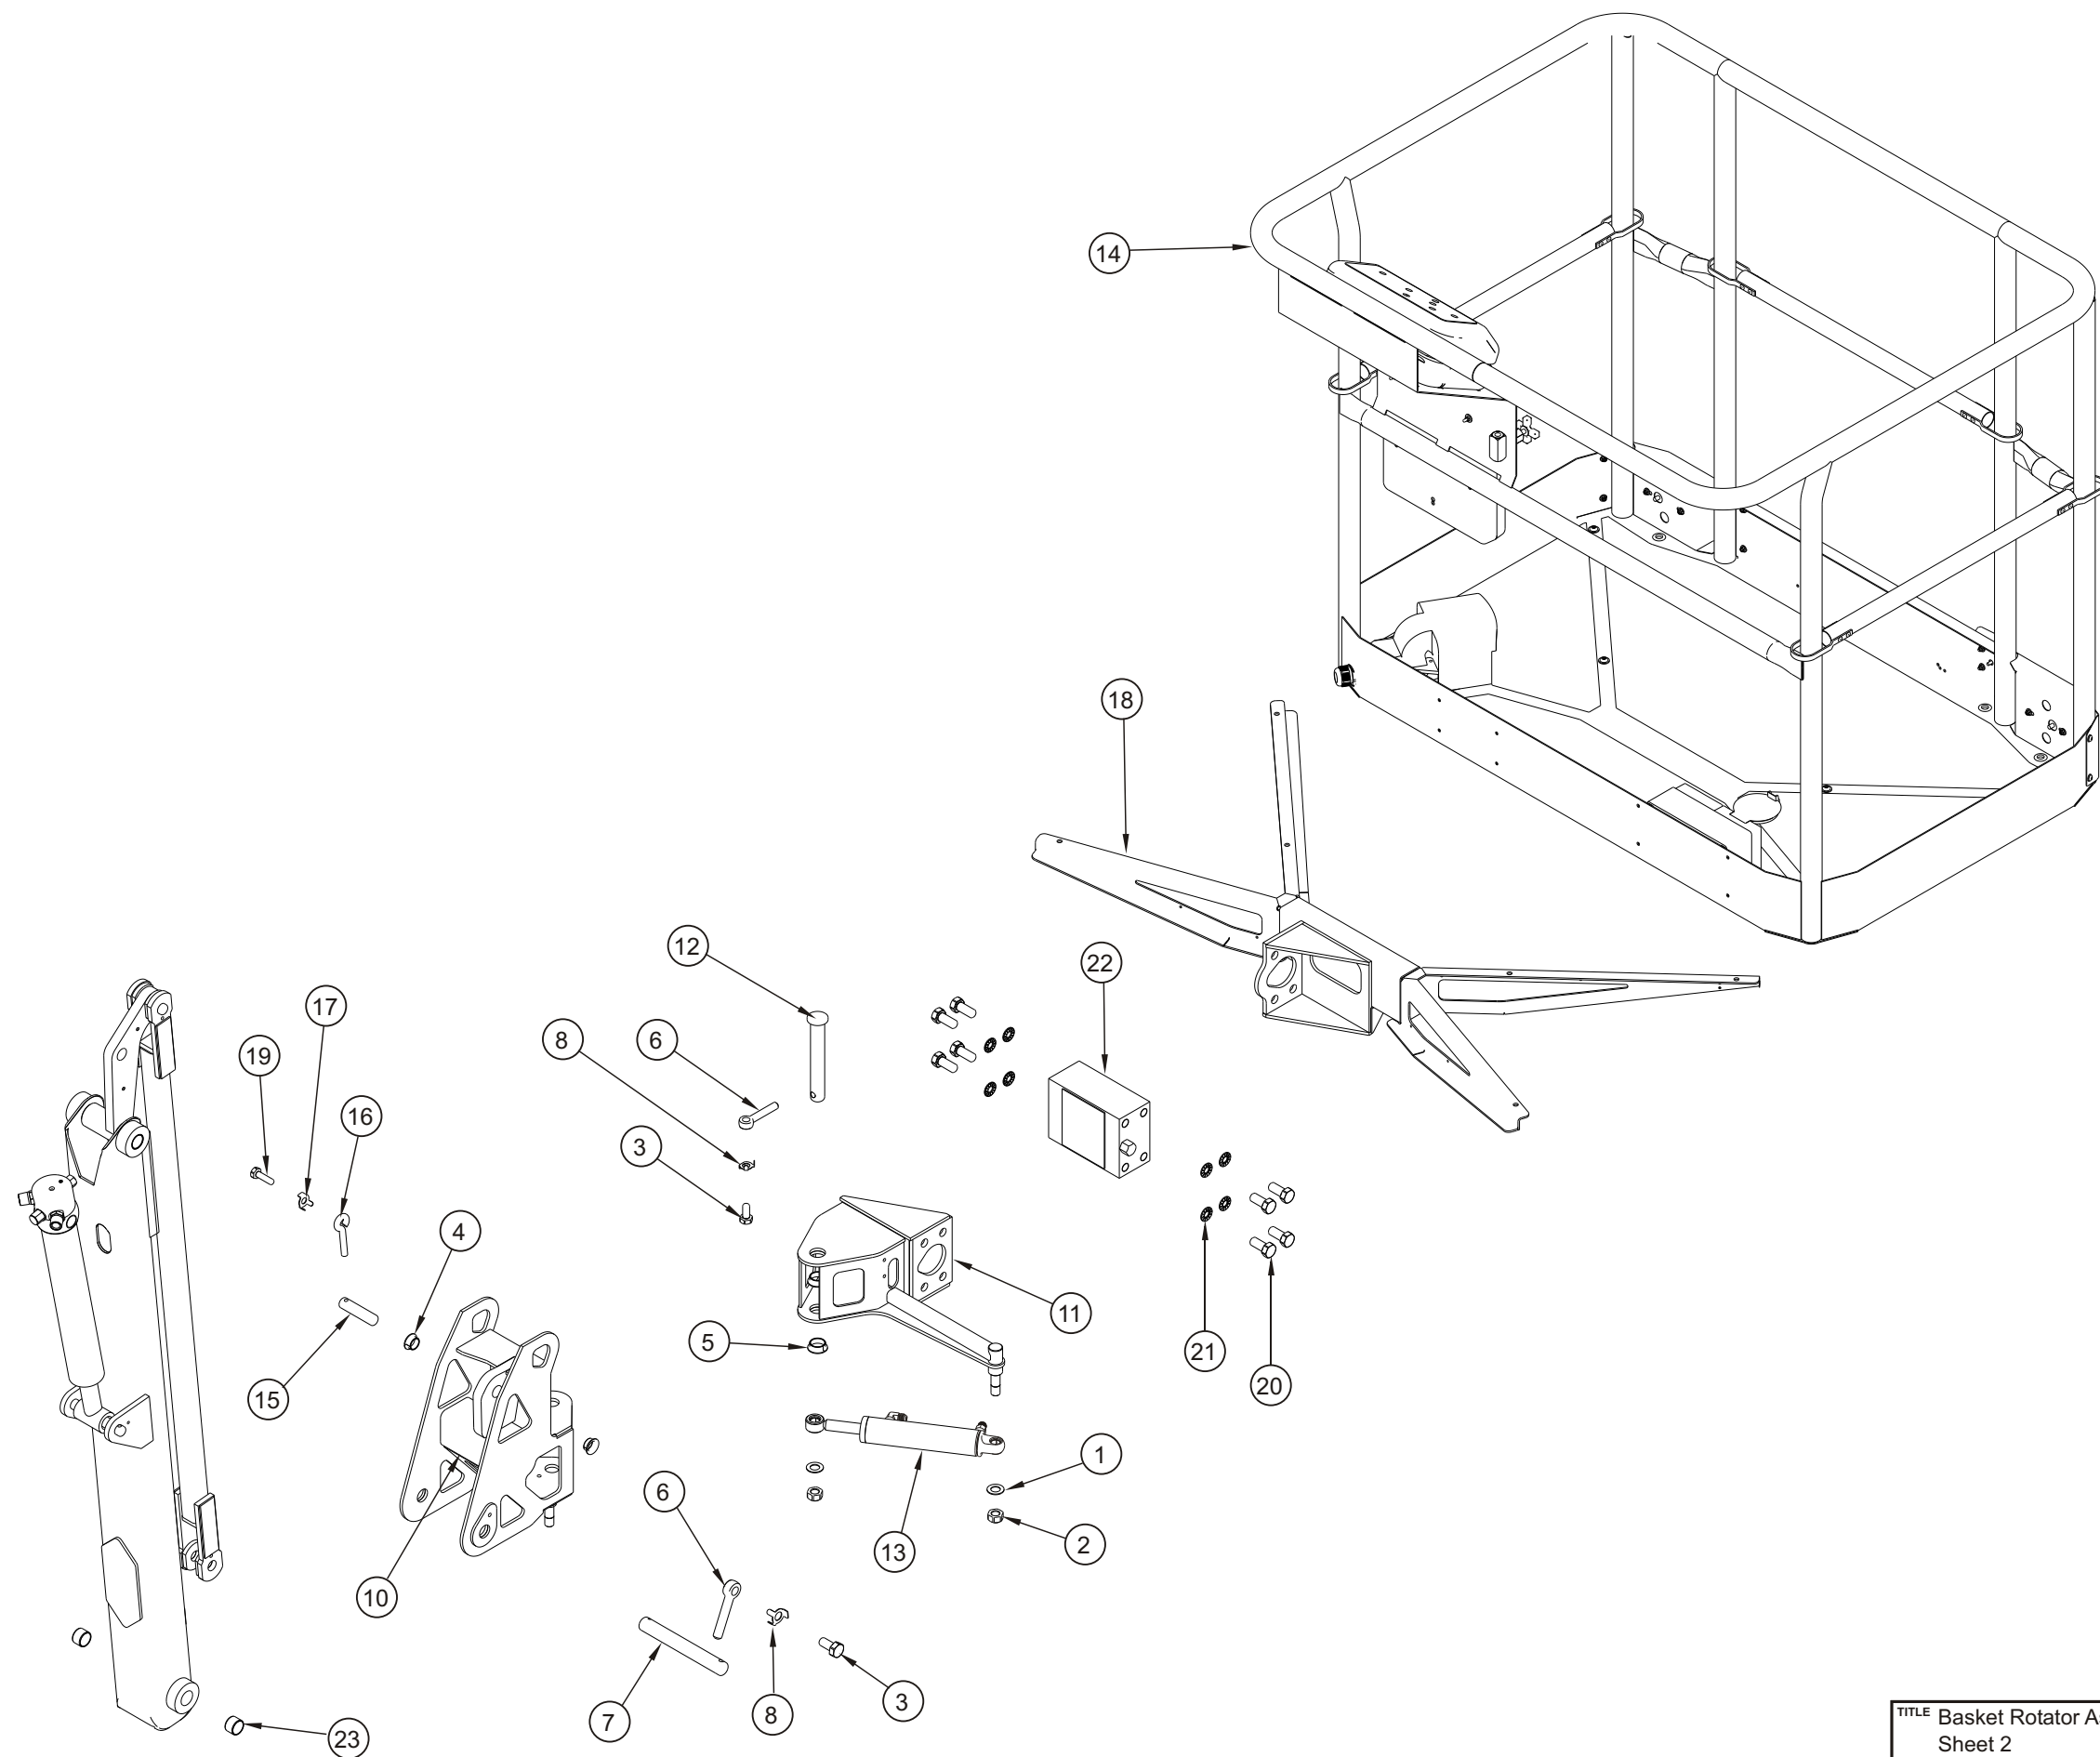

## Continuous rotation option (sheet 1)


---

Item	Part No	Qty	Description
1.	506-5707	5	Fitting, hydraulic (not shown)
2.	3602-12	1	Metric hex nut
3.	3603-06	10	Plain washer
4.	3603-08	4	Plain washer
5.	3605-06	10	Spring washer
6.	3605-08	4	Spring washer
7.	3610-06012	3	Metric bolt
8.	3610-06020	7	Metric bolt
9.	3610-08016	4	Metric bolt
10.	3610-08040	4	Metric bolt
11.	3610-12075	1	Metric bolt
12.	11957-3	1	Distributor cap
13.	12679	1	Hydromotion 12 way slip ring
14.	12679-20	1	Spacer plate
15.	12679-50	2	Three port spacer plate
16.	12679-55	1	Moving bracket
17.	12679-60	1	Column cover
18.	60005-008	2	Spring washer
19.	60016-003	2	Bolt, 5/16" x 3/4"

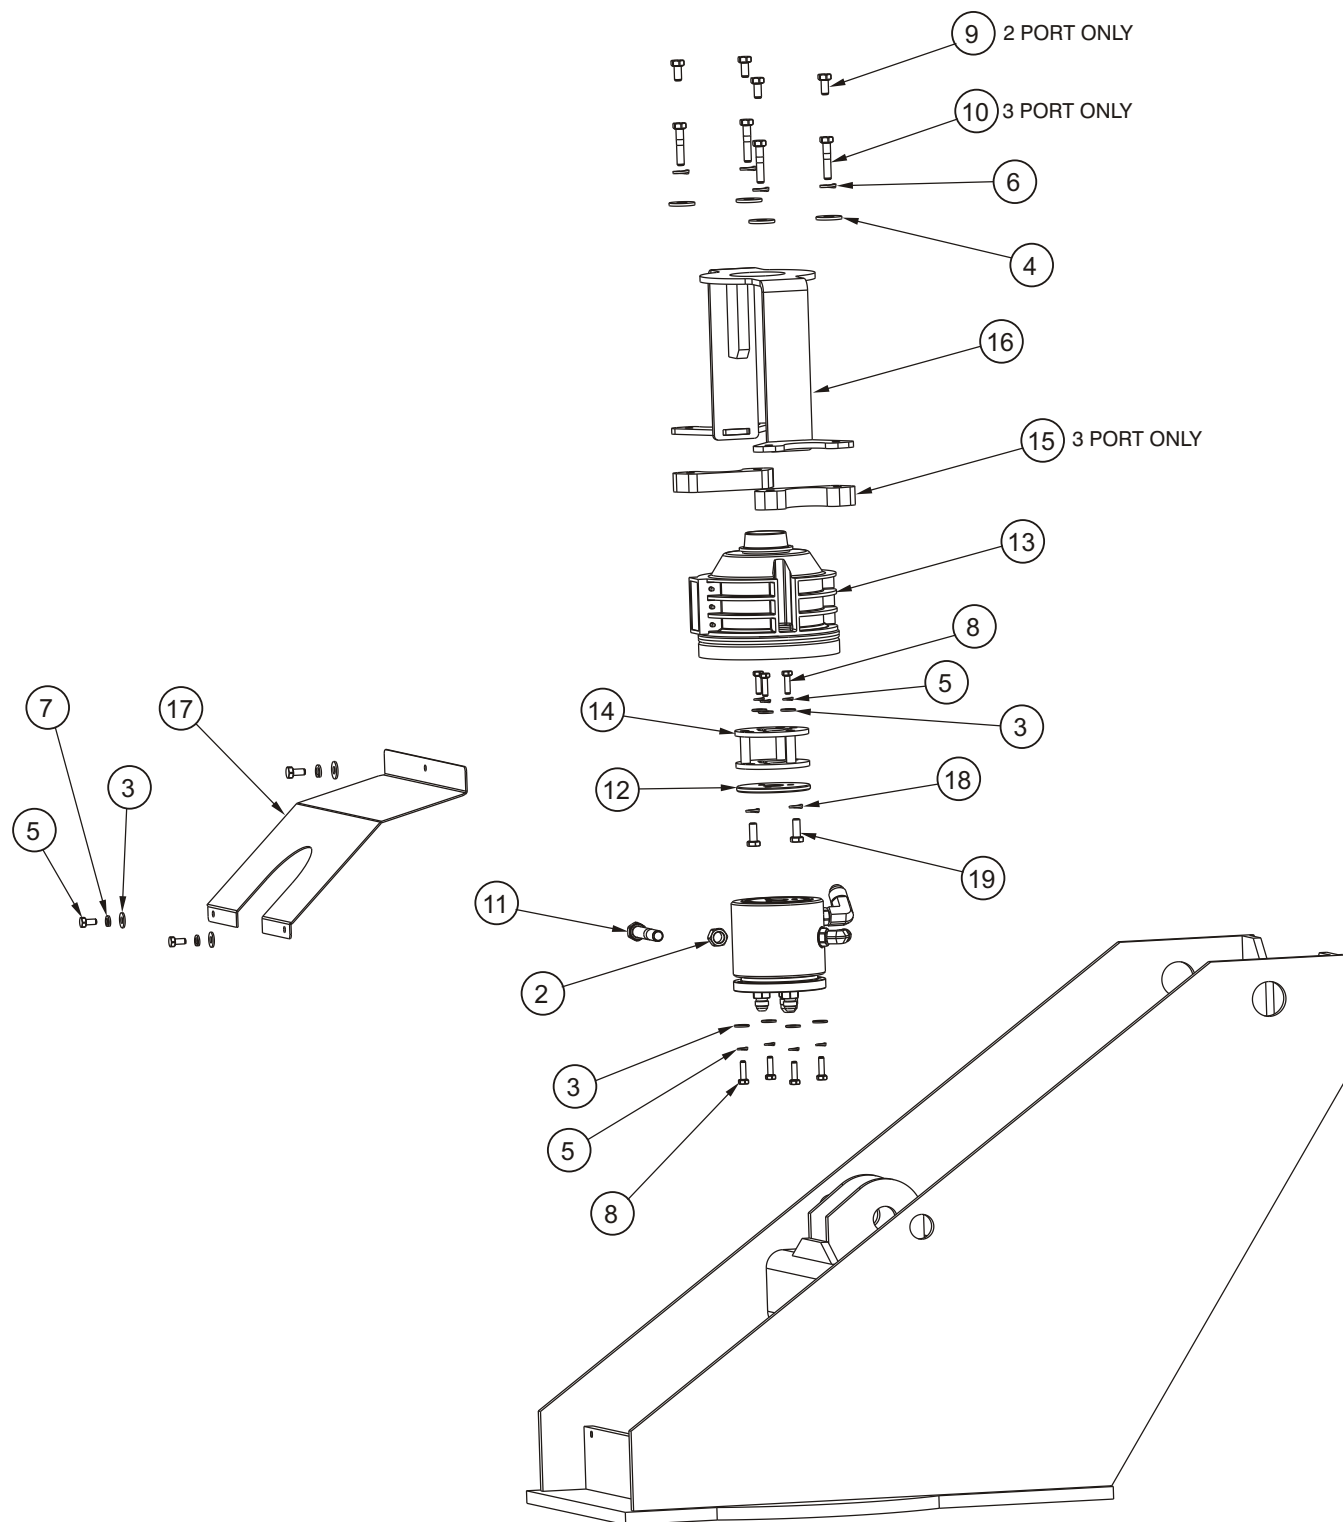

## Spare wheel mount

Item	Part No.	Qty	Description
1.	13050-1	1	Spare wheel mount, sub weld
2.	1649-041	2	Wheel nut
3.	13017-2	1	Wheel rim
4.	13017-1	1	Tyre

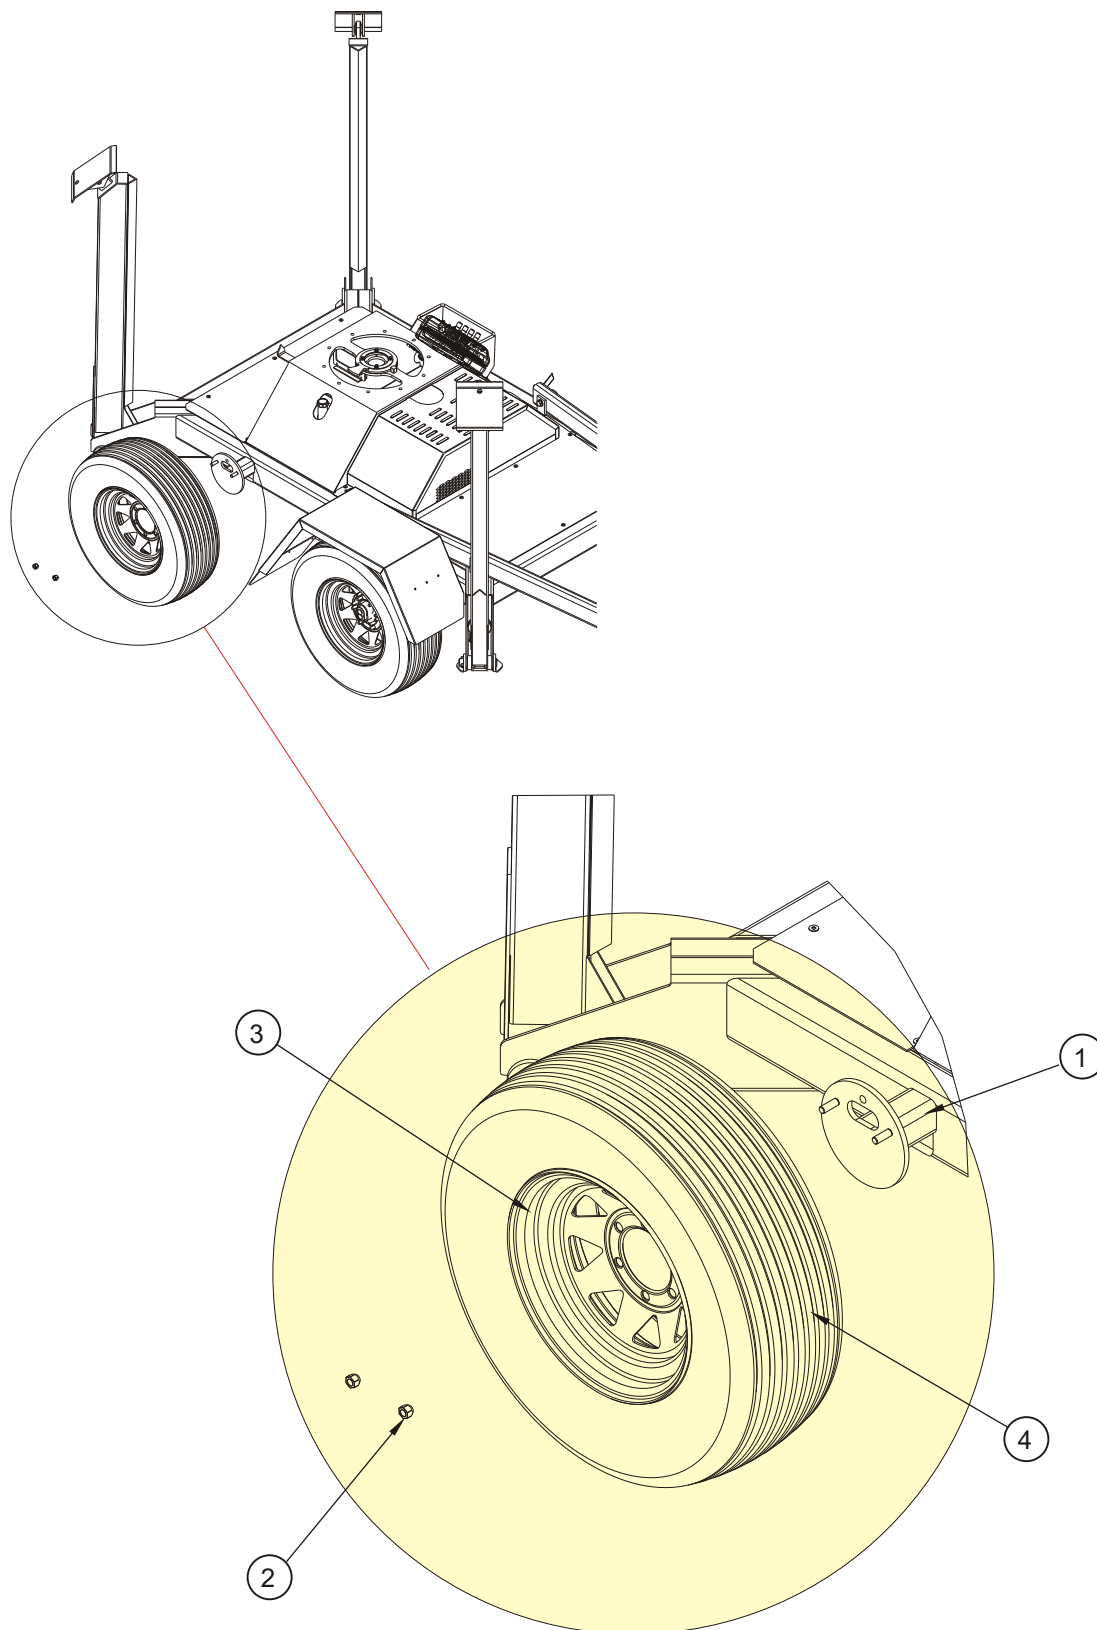



## A

Automatic stabiliser, 2-13  
Automatic stabiliser control box assembly, 3-11

## B

Basket assembly, 1-6  
Basket rotator assembly, 4-4

## C

Cylinder, stabiliser, 2-11

## D

Drawings  
Basket rotator assembly (Sheet 2), 4-5

## E

Engine  
Cooling system, 2-4  
Displacement, 2-4  
Fuel, 2-4  
Fuel consumption, 2-4  
Fuel grade, 2-4  
Ignition system, 2-4  
Make, 2-4  
Model, 2-4  
Oil capacity, 2-4  
Oil grade, 2-4  
Type, 2-4

## I

Insulation rating, 2-3

## L

Lift cylinder, lower, 2-9  
Lift cylinder, upper, 2-8  
Lower control box assembly, 3-9, 3-10

## M

Main control valve assembly, 2-7  
Maintenance, 1-1  
Maintenance schedules, 1-2  
Manual organisation  
See Maintenance information - page 3  
Manual Organization, 1-1  
Maximum height to basket floor, 2-3  
Maximum outreach, 2-3  
Maximum rated axle capacity, 2-3  
Maximum towing speed, 2-3

## O

Overall height, 2-3

## P

Platform size, 2-3

## S

Safe working load, 2-3

## T

Trailer tongue weight, 2-3  
Travelling height, 2-3  
Turntable rotation, 2-3

## U

Upper control box assembly, 3-7, 3-8

## W

Weight, 2-3  
Working height, 2-3

# snorkel

## Product Warranty

- 1) Snorkel warrants each new machine manufactured and sold by it to be free from defects in material and workmanship for a period of one (1) year from date of delivery to a Customer. The warranty will apply subject to the machine being operated in accordance with the rules, precautions, instructions and maintenance requirements outlined in the Snorkel Operator and Parts/Service manual.
- 2) Snorkel further warrants the structural components, specifically the mainframe chassis, turntable, booms and/or scissor arms of each new machine manufactured by it to be free from defects in material and workmanship for an additional period of four (4) years. Any such part or parts which, upon examination by the Snorkel Warranty department, are found to be defective will be replaced or repaired by Snorkel through its local Authorised Dealer. The structural warranty specifically excludes adverse affects on the machine structure arising from damage, abuse or misuse of the equipment.
- 3) Machines may be held in an authorised Distributor stock for a maximum of six (6) months from the date of shipment from Snorkel, before the warranty period is automatically initiated.
- 4) It is the responsibility of the Distributor to complete and return a Pre delivery /Warranty registration, before the act of rental / loan / demonstration of the machine or delivery to an end user.
- 5) The Customer and Dealer shall not be entitled to the benefits of this warranty and Snorkel shall have no obligations here under unless the "Pre-Delivery and Inspection Report" has been properly completed and returned to the Snorkel Warranty department within ten (10) days after delivery of the Snorkel product to the Customer or Dealer's demonstration / rental fleet. Snorkel must be notified, in writing, within ten (10) days, of any machine sold to a Customer from a Dealer's rental fleet during the warranty period.
- 6) Any part or parts which upon examination by the Snorkel Product Support Department are found to be defective within the specified warranty period, will be replaced or repaired at the sole discretion of Snorkel, through its local Authorised Distributor, at no charge.  
Any parts replaced under warranty must be original Snorkel parts obtained through an authorised Snorkel Distributor unless expressly agreed otherwise in writing and in advance by Snorkel's warranty department.
- 7) All parts being claimed under warranty must be held available for return and inspection upon request for a period of 90 days from date of claim submission, it is necessary that all parts are individually tagged or marked with their part number and the warranty claim number. After 90 days all parts replaced under warranty which have not been returned to Snorkel should be destroyed. Failure to produce parts requested by the Warranty Administrator for inspection within a period of 14 days will result in the claim being automatically rejected in full. Materials returned for warranty inspection must have the following procedure :
  - Carefully packaged to prevent additional damage during shipping
  - Drained of all contents and all open ports capped or plugged
  - Shipped in a container tagged or marked with the RMA number
  - Shipped PREPAID. Any item(s) returned for warranty by any other means maybe refused and returned , unless prior approval is agreed with Snorkel.

# snorkel

## Product Warranty

8) At the direction of the Snorkel Warranty department, any component part (s) of Snorkel products to be replaced or repaired under this warranty programme must be returned freight prepaid for inspection. An RMA (Returns material authorisation) must be requested from Snorkel Warranty department, a copy to be placed with the returning component part(s)

9) All warranty replacement part will be shipped freight prepaid (standard charge) from the Snorkel Parts Service Department or from the Vendor to Dealer or Customer.

10) All warranty claims are subject to approval by Snorkel Service department. Snorkel reserves the right to limit or adjust claims with regard to defective parts, labour or travel time based on usual and customary guidelines.

### **REPLACEMENT PARTS WARRANTY**

Any part replaced under this limited warranty is not subject to further warranty cover beyond the normal warranty period of the machine upon which the part was installed.

Any replacement parts sold (not delivered under a warranty claim) will be subject to a warranty period of (6) six months from the date of invoice.

Parts held by a Distributor are covered under warranty for a period of (12) twelve months from the date of invoice, provided that those parts have been subject to appropriate storage to prevent damage and deterioration.

### **CLAIM PROCEDURE**

The Snorkel Warranty department must be notified within (48) forty-eight hours of any possible warranty situation during the applicable warranty period. Personnel performing major warranty repair or parts replacement must obtain specific approval by the Snorkel Warranty department prior to performing the warranty repair or replacement.

When a Distributor / Customer perceive a warranty issue to exist the following steps must be adhered to:

- All warranty claims must be submitted within 30 days of the date of the machine repair

- All correspondence in respect of the claim to be on an official Snorkel warranty claim form as supplied by Snorkel's warranty department

- Allocate a warranty claim number to the repair

- Place a purchase order for genuine Snorkel replacement parts

- Snorkel to dispatch parts via the requested method (in line with the required response time)

- Confirmation that a qualified technician is available to replace the part and that this person has been accepted by Snorkel to carry out such work under the warranty of the machine. Failure to do this may nullify the warranty.

### **FREIGHT DAMAGE**

If a machine is received in a damaged condition, then the damage must be noted on the bill of lading and /or delivery documents and if possible photographs taken, prior to signing acceptance of the consignment.

The freight company must be contacted by the Distributor and a damage claim registered immediately.

# snorkel

## Product Warranty

### **THIS WARRANTY EXCLUDES AND SNORKEL DOES NOT WARRANT:**

1. Engines, motors, tyres and batteries are manufactured by suppliers to Snorkel, who furnish their own warranty. Snorkel will, however, to the extent permitted; pass through any such warranty protection to the Distributor / Customer.
2. Any Snorkel product which has been modified or altered outside Snorkel factory without Snorkel written approval, if such modification or alteration, in the sole judgment of Snorkel Engineering and/or Service Departments, adversely affects the stability, reliability or service life of the Snorkel product or any component thereof.
3. Any Snorkel product which has been subject to misuse and abuse, improper maintenance or accident. "Misuse" includes but is not limited to operation beyond the factory-rated load capacity and speeds. "Improper maintenance" includes but is not limited to failure to follow the recommendations contained in the Snorkel Operation, Maintenance, and repair Parts Manuals.
4. Normal wear of any Snorkel component part(s). Normal wear of component parts may vary with the type, application or type of environment in which the machine may be used; such as, but not limited to sandblasting applications
5. Routine maintenance, routine maintenance items and minor adjustments are not covered by this warranty, including but not limited to hydraulic fluid, filters and lubrication, paint and decals.
6. Any Snorkel product that has come into direct contact with any chemical or abrasive material.
7. Incidental or consequential expenses, losses, or damages related to any part or equipment failure, including but not limited to freight cost to transport the machine to a repair facility, downtime of the machine, lost time for workers, lost orders, lost rental revenue, lost profits, expenses or increased cost. This warranty is expressly in lieu of all other warranties, representations or liabilities of Snorkel, either expressed or implied, unless otherwise amended in writing by Snorkel
8. Snorkel Warranty policy does not cover any duties, taxes, environmental fees including without limitation, disposal or handling of tyres, batteries and petrochemical items.
9. Item specifically excluded are, fuel injectors, motor brushes, glow plugs, contactor tips and springs, oil filters, lamp bulbs, lamp lenses, o rings, coolants, lubricants and cleaning material.
10. Failure of replacement parts due to fault misdiagnosis or incorrect fitting by the Distributor / Customer

**SNORKEL MAKES NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION OF THIS LIMITED WARRANTY  
SNORKEL MAKES NO IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE  
AND DISCLAIMS ALL LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT  
LIMITED TO INJURY TO PERSONS OR PROPERTY.**

The Customer shall make all warranty claims through its local Authorised Dealer and should contact the Dealer from whom the Snorkel product was purchased for warranty service. Or, if unable to contact the Dealer, contact the Snorkel Service Department for further assistance

# snorkel

## Product Warranty

### APPEAL

The buyer may appeal in writing against a rejected or adjusted claim to Snorkel warranty department within a period of 21 days of receiving the rejection or adjustment notice. The appeal should be grounded on express reasons and supported by relevant evidence. Appeals received outside of this time limit will not be considered.

### WARRANTY SCHEDULE

#### Limited Warranty Periods

<u>Item</u>	<u>Warranty Period</u>
New machine materials and workmanship	1 year parts replacement
Structural components (Chassis, Turntable, Booms, Scissors)	5 years parts replacement or repair
Parts held in a Distributor's stock	12 months from date of invoice
Parts sold (non warranty)	6 months from date of invoice
Batteries	6 months from warranty registration date
Other specifically excluded parts:  Fuel injectors Motor brushes Glow plugs Contactor tips and springs Oils Filters Lamp bulbs Lamp lenses 'O' rings Coolants Lubricants Cleaning materials	Not covered by Warranty



**Local Distributor / Lokaler Vertiebs Händler / Distributeur local  
El Distribuidor local / Il Distributore locale**

**EUROPE, MIDDLE EAST  
AFRICA & ASIA**

**PHONE:** +44 (0) 845 1550 057  
**FAX:** +44 (0) 845 1557 756

**NORTH & SOUTH AMERICA**

**PHONE:** +1 785 989 3000  
**TOLL FREE:** +1 800 255 0317  
**FAX:** +1 785 989 3070

**AUSTRALIA**

**PHONE:** +64 2 9725 4000  
**FAX:** +64 2 9609 3057

**NEW ZEALAND**

**PHONE:** +64 6 3689 168  
**FAX:** +64 6 3689 164

